

User's guide for RKE RF Transmitter/Receiver

Introduction

The system called RKE (Remote Keyless Entry) has two separate units : a transmitter and a receiver.

Its fonction is to enable locking and unlocking the car doors by remote control and operates on the controls of the central unit.

The transmitter's electronic circuit is placed in the ignition key or in a fob which is attached to the key.

Door lock

To lock the doors, press and release the button on the key or on the fob.

Door unlock

To unlock the doors, press and release the button on the key or on the fob.