

DWA1230

QUICK SETUP GUIDE



technicolor

1. Before you start

Carefully read the **Safety Instructions and Regulatory Notices** document included in your package before continuing with the installation of your DWA1230.

2. Check the content of your package



Besides this Quick Setup Guide, your package contains the following items:

Item	Description
A	One DWA1230
B	One wall mount bracket
C	One power adapter (type may differ depending on region)
D	One Safety Instructions and Regulatory Information booklet (other additional regulatory documents may be included) One wall mount instructions leaflet
E	One DWA1230 settings card
F	Two DSL cables
G	One Ethernet cable with yellow connectors

3. Connect the DWA1230 to the Broadband service



- 1 Take both DSL cables.
- 2 Plug one DSL cable into the **DSL 1** port and plug the other one in the **DSL2** port.
- 3 Plug the other end of both DSL cables into your telephone wall sockets.

4. Power on the DWA1230



- 1 Plug the connector of the electric power supply adapter into the **Power** port. Plug the adapter into a nearby power outlet.
- 2 Press the **On/Off** button.

5. Connect your network devices

We recommended you to first connect one computer/tablet (if possible via a wired connection), then complete the rest of the procedure and as a final step connect the other (wired and/or wireless) devices.

5.1. Connect your wired (Ethernet) devices



If you want to connect a device using a wired (Ethernet) connection:

- 1 Take the Ethernet cable with the yellow connectors.
- 2 Connect one end of the Ethernet cable to one of the yellow Ethernet ports on your DWA1230.
- 3 Connect the other end of the Ethernet cable to your device.
- 4 Connect your other Ethernet devices.
- 5 We recommend you to first configure the DWA1230 (see “7. Configure your DWA1230 to your needs (optional)” on page 6) before connecting your wireless clients (see “5.2. Connect your wireless devices” on page 4).

5.2. Connect your wireless devices

Connection procedure

You can connect to an access point:

- Automatically using WPS:



- 1 Start WPS Push Button Configuration (PBC) on your wireless device.
 - 2 If your wireless device prompts you to select your access point from a list, select the item that uses the **Network Name** printed on the DWA1230 settings card or on the bottom label of your DWA1230.
 - 3 Briefly press the **WPS** button on the front panel of the DWA1230.
 - 4 The **WPS** LED on the front panel starts blinking orange.
 - 5 After maximum two minutes, the **WPS** LED will be in either of the following states:
 - Solid green: the registration was successful.
 - Blinking red: the DWA1230 could not find your wireless device. Try again or connect your wireless devices manually.
- Manually:
Configure your wireless device with the **Network Name** and **Wireless Key** printed on the bottom label of your DWA1230.

5.3. Connect your DWA1230 to your MoCA network

MoCA allows you to interconnect your local MoCA devices (for example, your set-top box) via your coax network.



Proceed as follows:

- 1 Take a coaxial cable.
- 2 Connect one end of the coaxial cable to the **MOCA** port on the back of the DWA1230.
- 3 Connect the other end of the coaxial cable to the coaxial wall jack or splitter.

6. Check your Internet connection

If the Internet (@) LED on the front panel of your DWA1230 is:

- **Green** then your Internet connection is already configured and ready for use. All devices that are connected to the DWA1230 can now access the Internet.
- If the @ LED is **red**, proceed with “7. Configure your DWA1230 to your needs (optional)” on page 6.

7. Configure your DWA1230 to your needs (optional)

If you want to make additional changes to the default settings (for example, you want to change the wireless security settings) of your DWA1230, proceed as follows:

1 Make sure that you have the following information at hand:

- **Admin Settings** address
- **Admin User Name**
- **Admin Password**

You can find this information on the DWA1230 settings card that is included in your box or on the bottom label of your DWA1230.

- 2 Open your Internet browser on a computer or device that is currently connected to your DWA1230 (either wired or wirelessly). Browse to the **Admin Settings** address.
- 3 The DWA1230 user interface appears. By default, you are logged in as guest. This means that some items are hidden. To view all items, click **Sign In** and enter the **Admin User Name** as user name and the **Admin Password** as password.
- 4 Under **Internet Access**, check the status of your Internet connection. If it is not connected, click **Internet Access**, enter the **Username** and **Password** for your Internet connection and then click **Save**.
- 5 If needed, you can make further changes to the settings but we recommend to keep the default settings.

For APPROVAL
and NOT for distribution
Outside Technicolor!!!



DSL37756460



PAP

TECHNICOLOR

1-5, rue Jeanne d'Arc
92130 Issy-les-Moulineaux
France

www.technicolor.com

Copyright 2017 Technicolor. All rights reserved. DMS3-QIG-25-477 v1.0.
All tradenames referenced are service marks, trademarks, or registered
trademarks of their respective companies. Specifications subject to change
without notice.