

NOVISION[®]

HINGE 13 DRAW

Quick Start Guide

Getting Started

This guide has been designed to help familiarize you with the features and functions of the HINGE 13 DRAW, and get you 'up-and-running' as soon as possible.

Visit www.nuvision.com to register your device, and access the online user manual, how-to-videos, FAQs and more to optimize your NuVision experience.

 


Remember to register your device at
www.nuvision.com/product-registration

Package Contents



Device

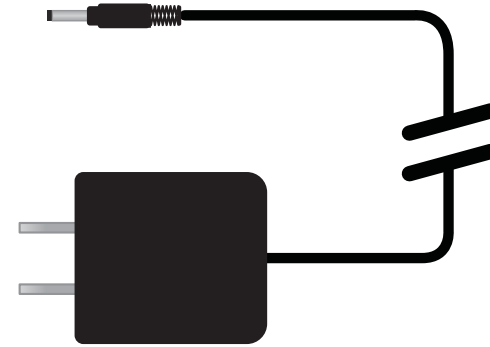


AC/DC Adapter




Digital Pen & (1) AAAA Battery

 Device Overview

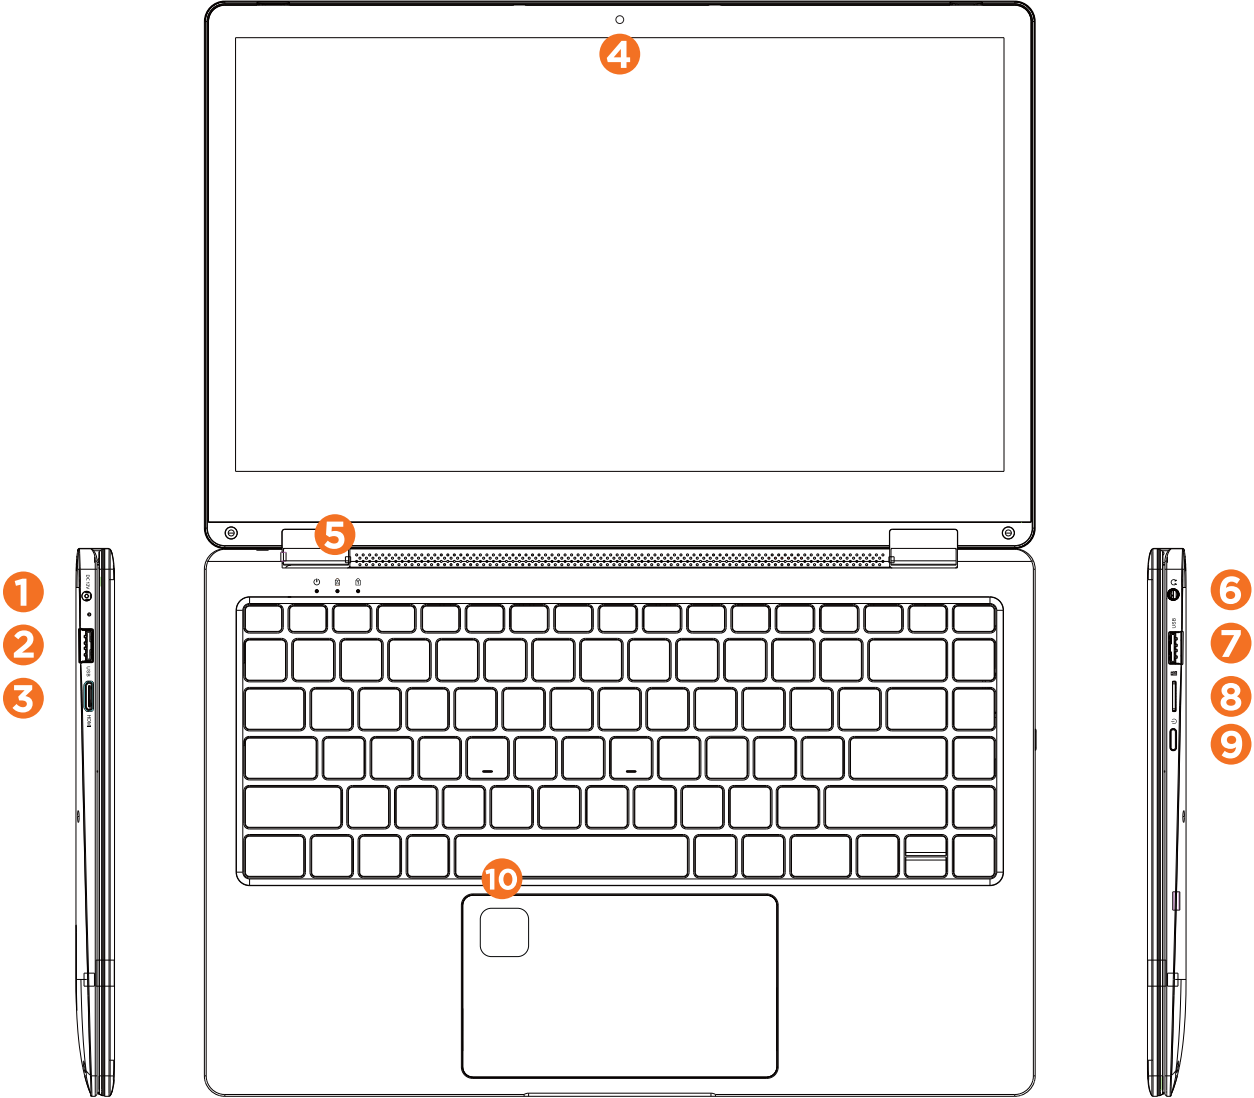

Device Overview

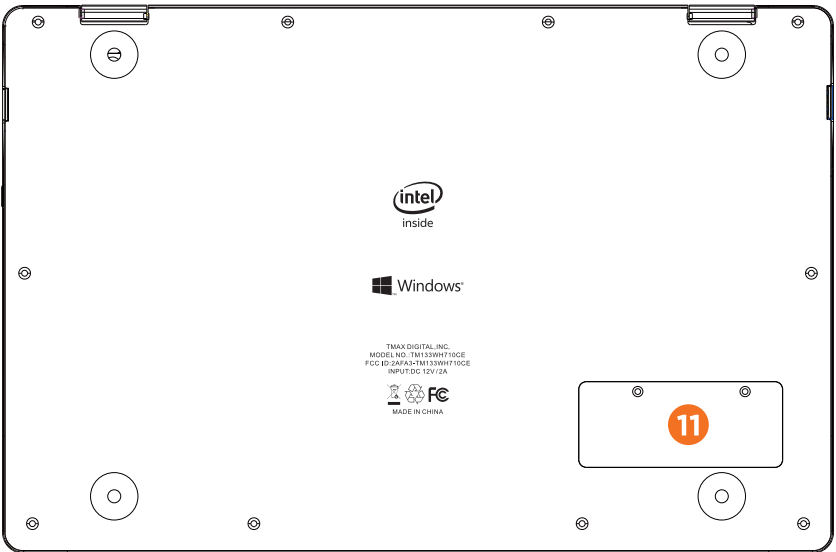 


1	AC/DC Adapter Connection
2	USB Port
3	Mini HDMI Port
4	Front Camera Lens
5	Keyboard Indicator Lights
6	3.5mm Headphone Jack
7	USB Port
8	Micro TF Card Slot
9	Power Button
10	Fingerprint ID Scanner
11	M.2 SSD Slot (Supports Type B Key, Size 2280. For installation, please refer to the online manual)

Keyboard Overview



1	Function Key
2	Open Active Menu

 
Pen Overview

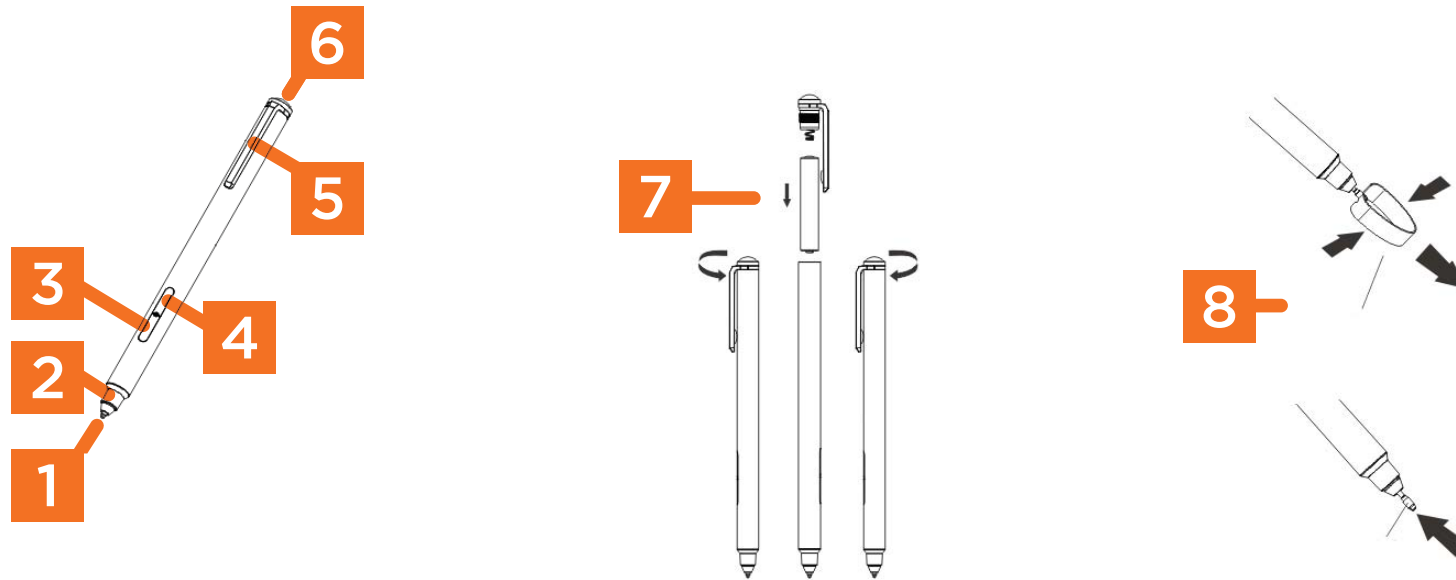

1	Tip
2	Pen Head
3	Eraser Button
4	Alt Button (Mouse Right-Click)
5	Clip

6	Pen Top
7	AAAA Battery (Inserts Positive End Towards the Tip)
8	Use Pen Replacement Tool to Remove/Replace Tip

 Connect to the Internet

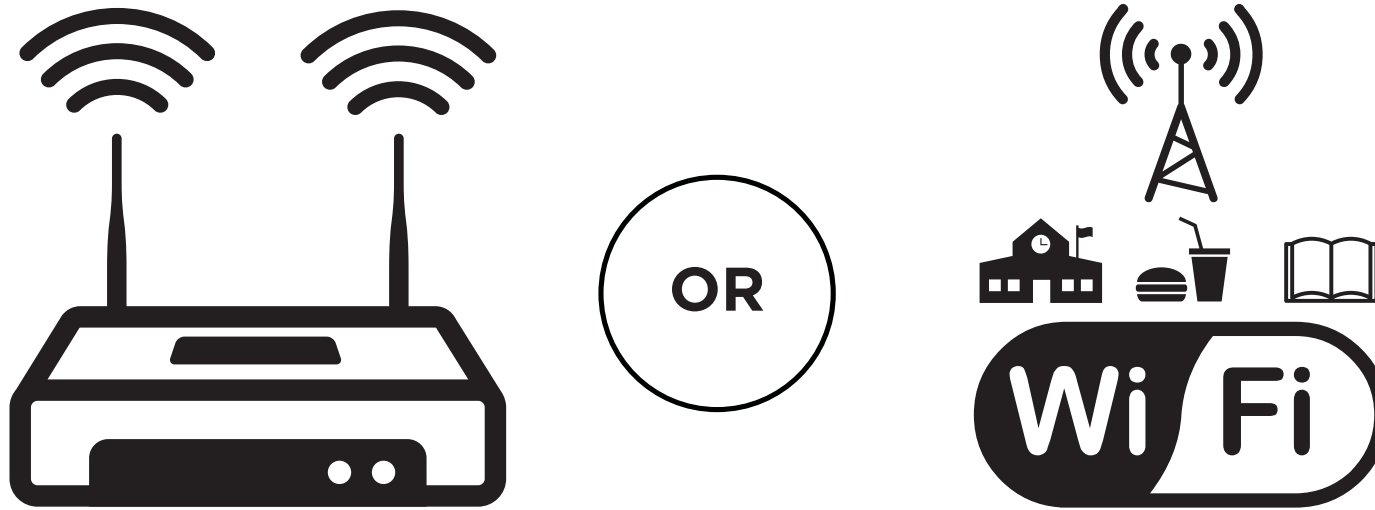


A Home WiFi Router or a publicly-available WiFi signal
(ie., In a library, coffee shop or school.)



The Network Name (SSID) and Network Security Key
(ie., Password) for the Internet Connection

 Charge the Device

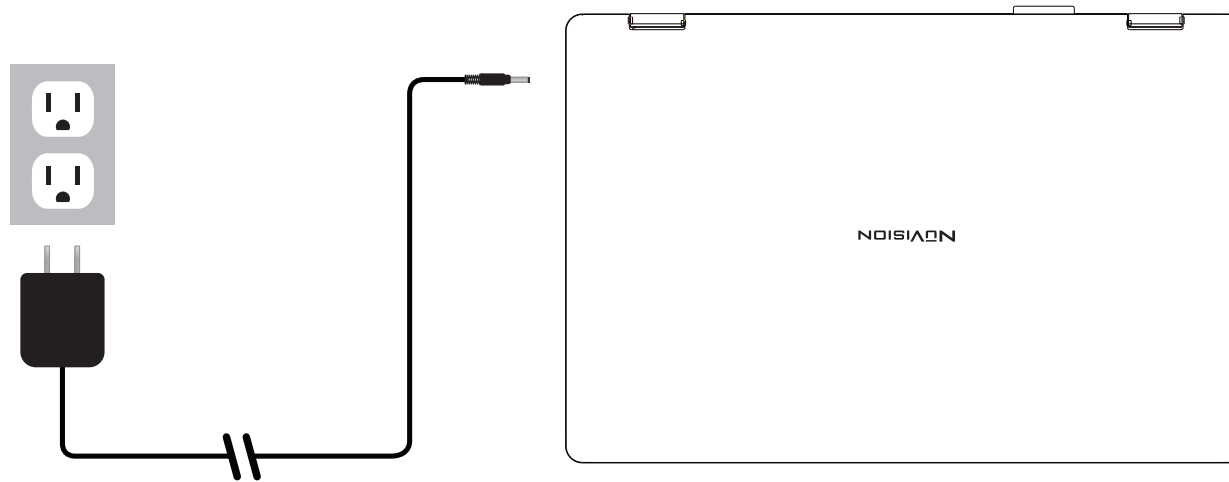

Connect the AC/DC power adapter to a wall outlet, then to the tablet's DC port as shown. A Red light above the DC port will indicate when the device is charging.

It is recommended to fully charge the battery before first use.

Note: It is normal for the tablet to become warm while charging.

Display Configurations



Conventional
Laptop



 
Tent



Tablet

You can flip the display and adjust to varying degrees of comfort for use either as a laptop, tent or tablet configuration.


Turn-on and Follow the Prompts

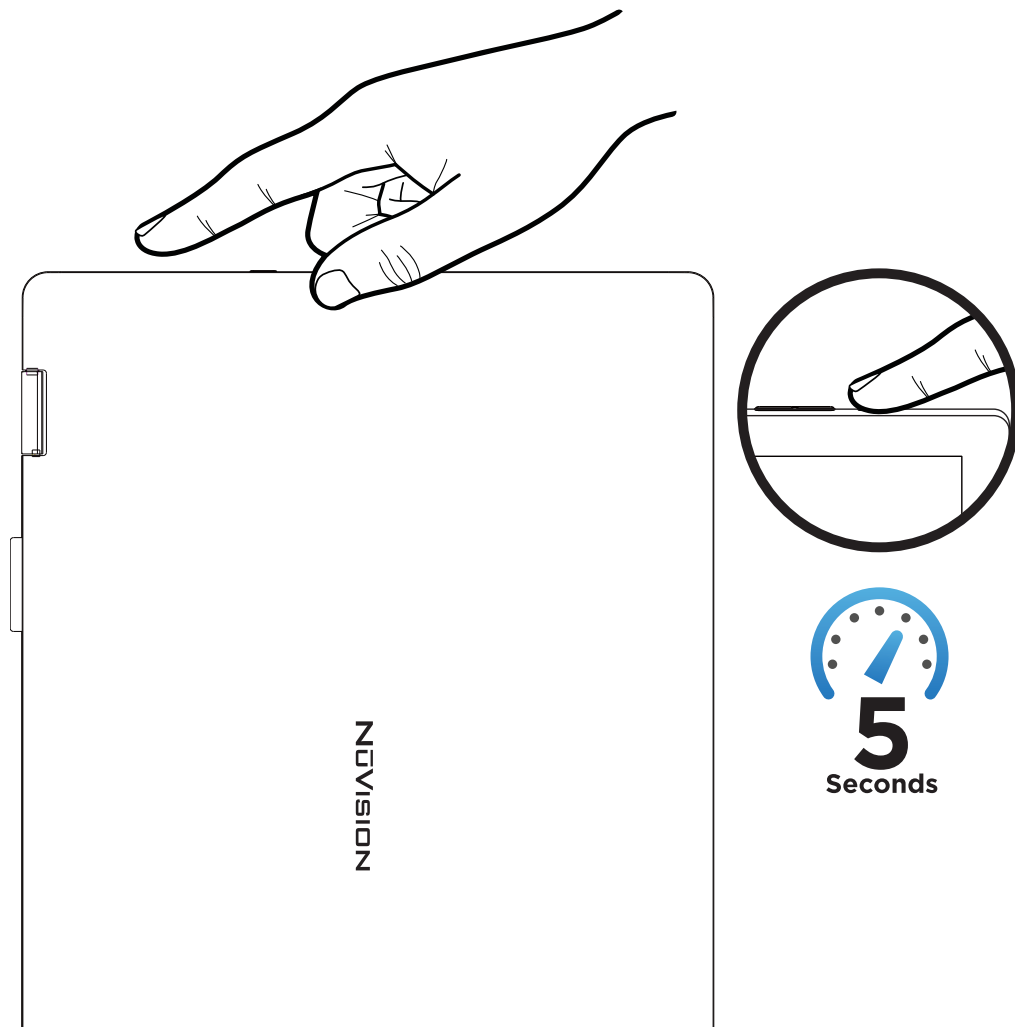

ON: Press and hold until logo screen appears

OFF: Press and hold until prompted to shut down

 SLEEP: Press and release quickly to turn off the display only. All other functions remain on

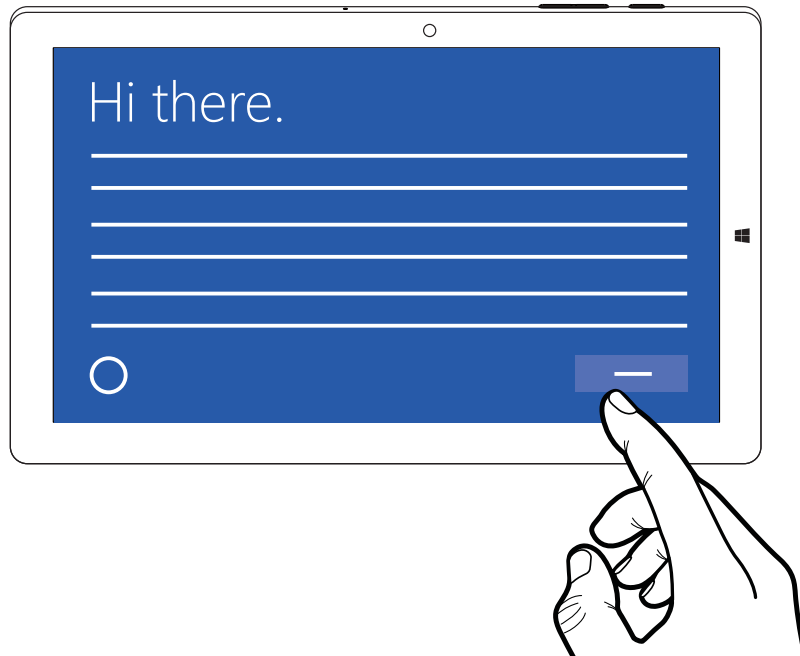

During the setup process, you will be able to:

- Create a Microsoft account
- Personalize the device
- Establish a Password.

Select a WiFi Network and type-in the Password

 
or

Select 'skip this section' at the bottom of the list.

You'll be able to connect later (See page 18)

Familiarize Yourself with Windows


Shown in Tablet Mode

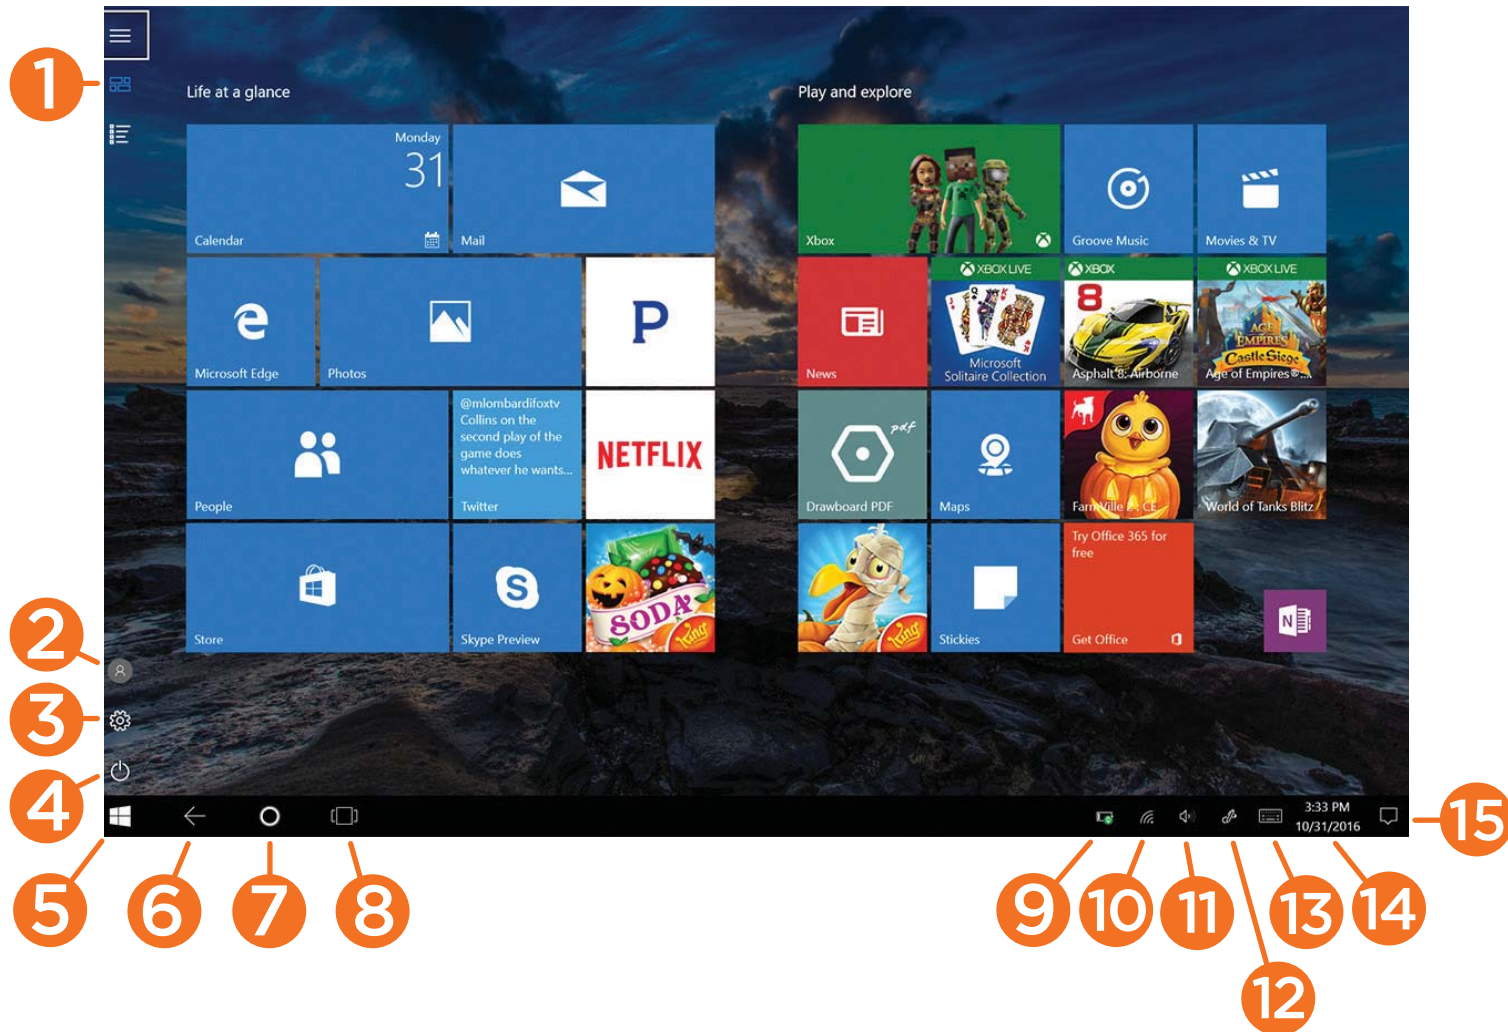


Familiarize Yourself with Windows

1	Select Pinned tiles or All apps menu
2	Account Settings: Change account settings or Sign out
3	Settings : View and adjust settings for the System, Internet, Security, etc.
4	Power: Sleep, Shut down or restart the device
5	Windows: Return to Home screen
6	Go to Previous screen
7	Activate Cortana
8	Task View: View active windows
9	Battery: Displays battery level, time remaining, battery saver and brightness
10	WiFi: View network settings or activate Airplane mode
11	Volume: Adjust volume level
12	Windows Ink Workspace: Opens menu featuring Windows Ink apps
13	Keyboard: Opens the virtual keyboard to type on screen
14	Date & Time: Adjust settings for date, time; View calendar
15	Action Center: Opens and closes the Action Center menu

 
Apps Menu

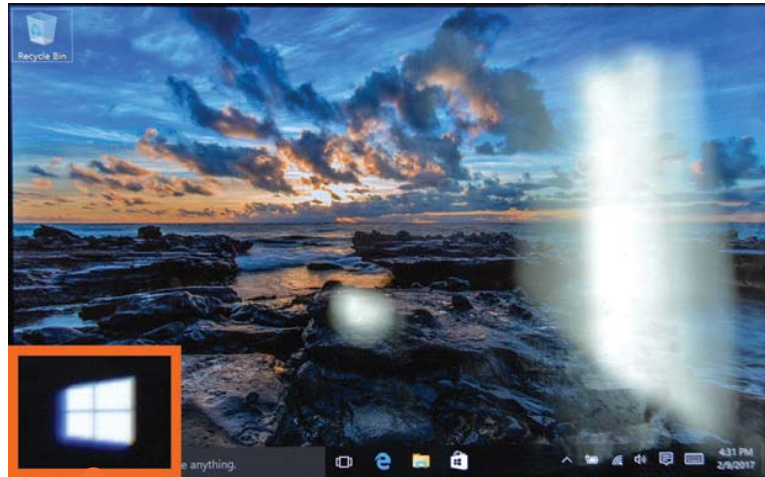


Tap on the 'All apps' icon  in the Windows menu to open a list of all your tablet's available apps.


Apps Menu




To customize your Tiles on the Start Menu, tap  to open your list of apps. Hold the app for two seconds, then drag and drop to your Tiles.

 Connecting to the Internet

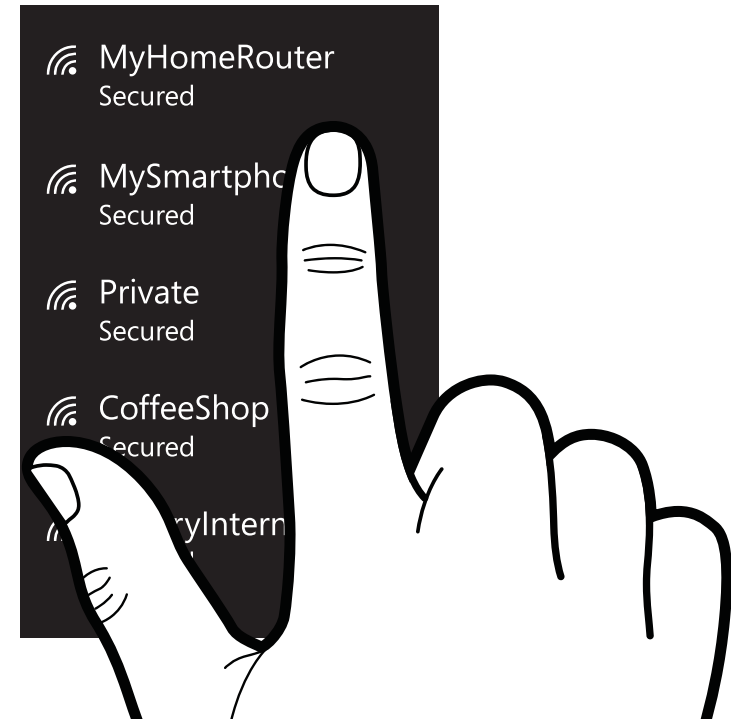



 Tap on the WiFi  icon, and a menu will appear with all available WiFi signals. Look for and select the Network Name in your WiFi listing on your device.

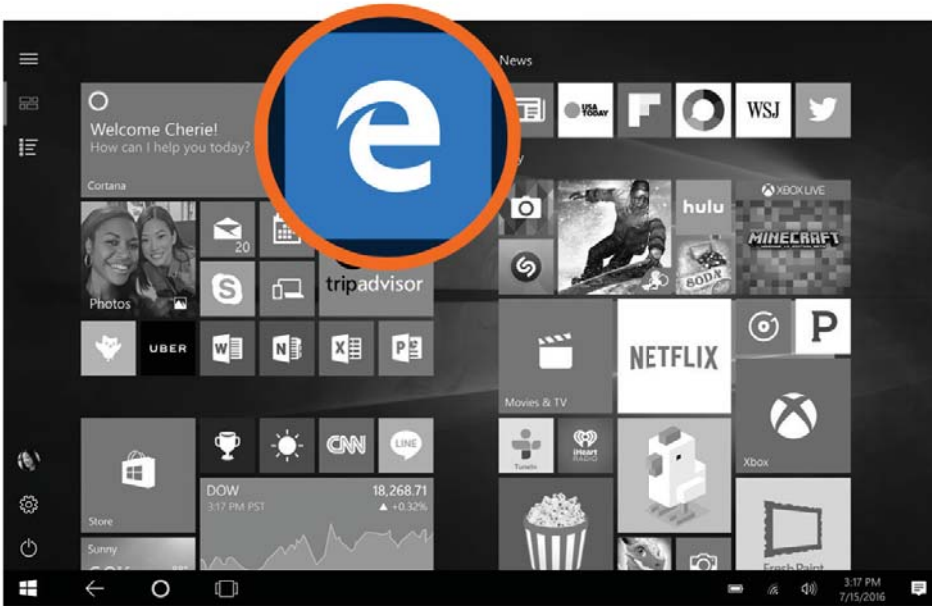
Microsoft Edge Browser



Once you have a WiFi connection, you can go to the internet using the Microsoft Edge Browser.


Tip: If you don't see the Edge icon on your desktop, tap on the Windows logo  > All apps Icon  and scroll down the list until you see "Edge".

 Action Center

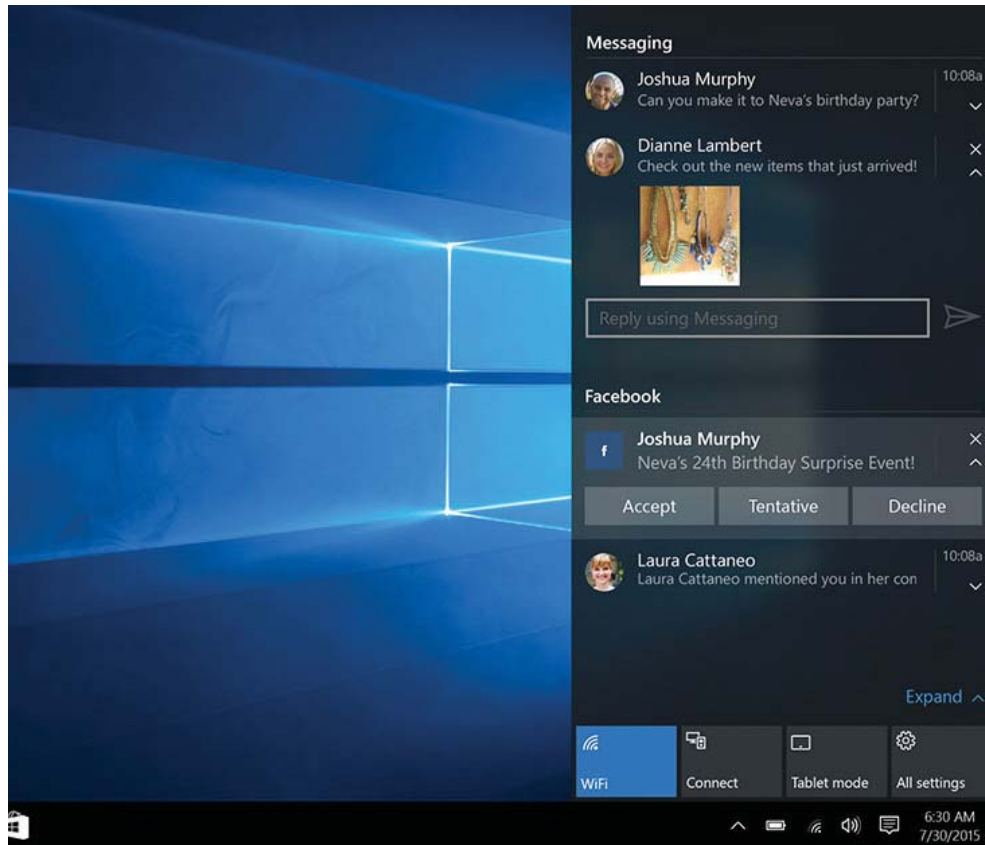

The Action Center is the central location to view alerts, notifications, user settings, and more. Swipe your finger inward from the right edge of the screen to bring up the Action Center. Swipe your finger back towards the edge to hide.

 Cortana, Your Voice-Activated Personal Assistant

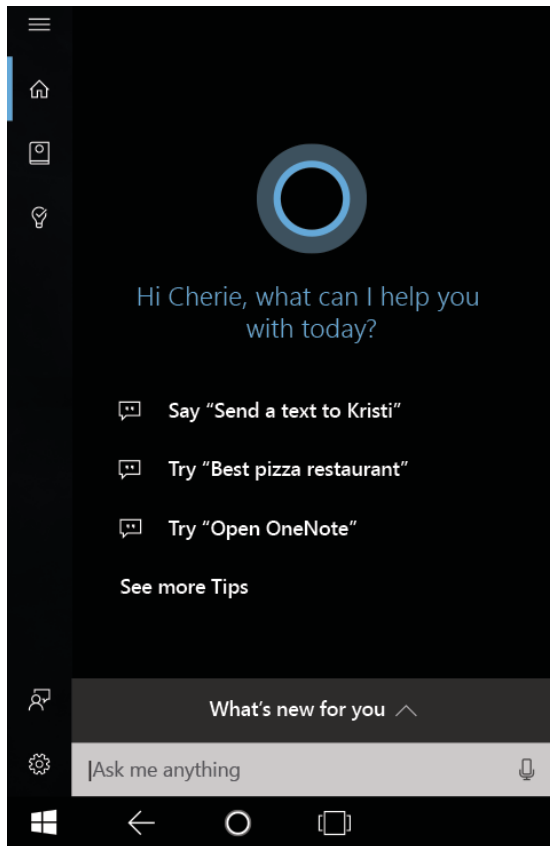


Speak to Cortana and request the weather forecast, set personal reminders, find files, and more.


Tap the “O” icon in the task bar, or tap the mic and ask her anything.

Summon Cortana by speaking clearly and slowly with a command, “Hey Cortana!”

 Windows Ink Workspace

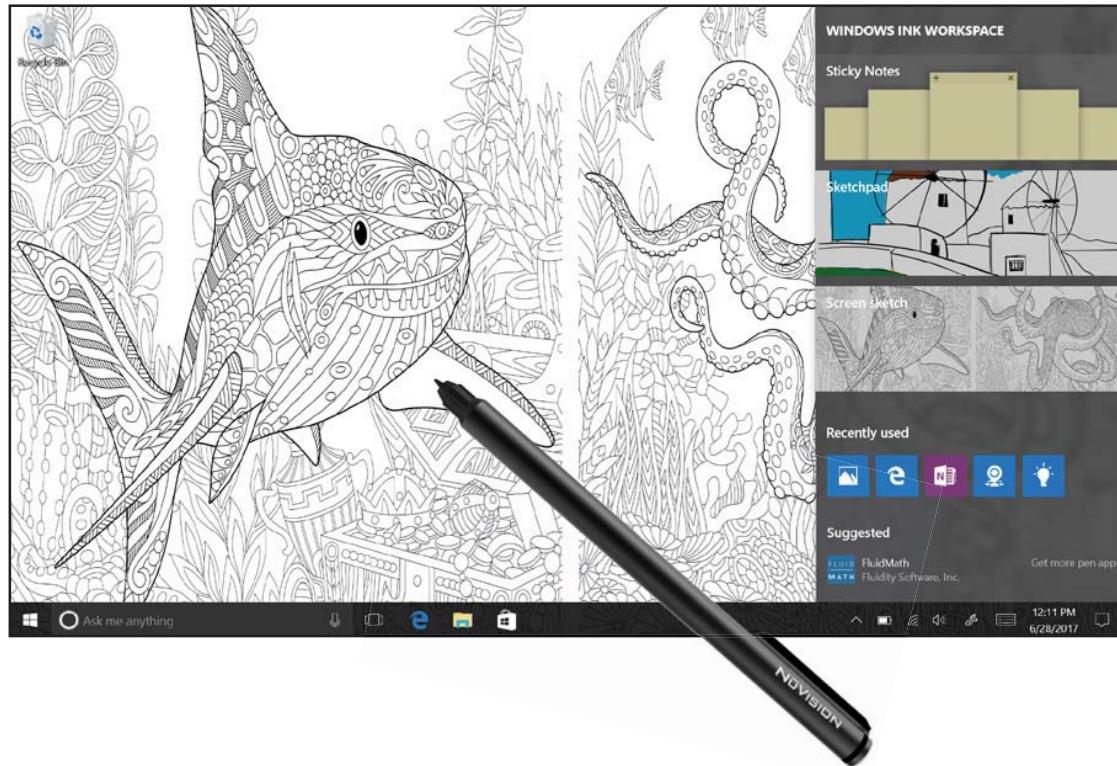

The Windows Ink Workspace is your one-stop shop for everything you do with your pen.

Select the pen  icon to open the workspace. From here, you can open your Sticky Notes, sketchpad, or draw over whatever you're doing on your PC using screen sketch.

Windows Hello - Fingerprint ID

For Windows Hello compatible devices you can use the fingerprint reader pad to access. Once you teach Windows to recognize your fingerprint, you'll be able to sign in with just a quick swipe instead of entering a password. In addition you'll be able to make purchases in the Windows Store.

Note: You will be asked to add a PIN before you can set up Windows Hello.



Go to Settings > Accounts > Sign-in options. Tap on Fingerprint Set Up

Touch the fingerprint reader pad and repeatedly lift and rest your finger on the sensor until set up is complete.

Visit NuVision online!

Visit **www.NuVision.com**
and **www.shopNuVision.com**

www.NuVision.com is your online resource for:

- Product registration
- Frequently-Asked Questions (F.A.Qs)
- Information and tips on how to best use your device
- Customer service chat & email support
- B2B Center for corporations, schools, and small businesses

www.shopNuVision.com is your online resource to:

- Order products and accessories

Live Chat:

www.nuvision.com
(during normal business hours)

Email:

cs@nuvision.com

Phone:

(800) 890-1288
(Hours: 8:30am to 5:30pm PST M-F)

Support:

www.nuvision.com/support
(Download Center,
How-To Videos, FAQs)



Important Safety Instructions

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please read the following instructions and notices before using your device.

1. Avoid using in extremely hot, cold, dusty, damp or wet environments.
2. The device is not moisture or water-resistant. Avoid using the device around sources of water.
3. Avoid dropping or forcibly placing the device onto a hard surface. This may damage the screen or internal electronic components and void the warranty.
4. Do not use alcohol, thinner or benzene to clean the surface of the device. Use only cleaning products designed for computer tablet devices.
5. Do not use the device while walking or driving.
6. Excessive use of earphones at high volume may lead to hearing impairment. Limit earphone usage, and adjust the volume to a moderate level only.
7. The images in this manual may vary slightly from the actual product.
8. Charge the device battery under any of the following circumstances:
 - a. Battery level icon indicates low power
 - b. Device powers-off automatically, continuing to do so even after restarting.
 - c. On-screen keys or display does not function properly.
9. Do not suddenly disconnect the device when formatting, uploading or downloading data. This may lead to program errors (e.g., system or screen “freezing”.)
10. Static discharge is normal and can occur in an electronic device. Although not life threatening, it may corrupt files or damage memory and its content. Do not use accessories that are not from Nuvision.
11. Dismantling the device will void the manufacturer’s warranty. If you are experiencing problems, review this quick start guide or visit the FAQ online at www.nuvision.com.
12. Tablet functions, hardware, software, and warranty information may be revised by the manufacturer or their respective owners, and subject to change without notice.
13. Warning: This product may contain a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

Compliance Information

FCC NOTICE

The following statement applies to all products that have received FCC approval. Applicable products wear the FCC logo, and /or an FCC ID in the format FCC ID:xx-xxx-xxx on the product label. This mobile device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: This mobile device may not cause harmful interference, and this mobile device must accept any interference received, including interference that may cause undesired operation. This mobile device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and , if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warning Statement

Operation is subject to the following two conditions: this device may not cause interference, and this device must accept any interference, including interference that may cause undesired operation of the device.

IMPORTANT NOTICE: IC Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 0.5cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Limited Warranty

TMAX Digital Inc. warrants this product against defects in material or workmanship for a period of one (1) year from the date of original purchase (“Limited Warranty period”) and at its own option either to (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. TMAX Digital Inc. will incur no liability whatsoever to provide packaging for warranty items. Upon receipt of the warranty item, should it be determined that the packaging is insufficient, TMAX Digital Inc may at its discretion, void the warranty. The consumer is responsible for the transportation cost to TMAX Digital Inc. A nominal handling fee does apply. You must receive a return authorization number before sending a unit in for service.

TO OBTAIN WARRANTY SERVICE

Should it be necessary to contact Customer Support, call (800) 890-1288 or email at cs@nuvision.com. You will be instructed on how your claim will be processed. Have pertinent information available including proof of purchase and an understanding of the issue.

You must retain the original bill of sale to provide proof of purchase. Call or email Customer Support to assess the problem. No service or shipment will be accepted unless an RMA # is provided to you and attached or printed to the shipping carton along with a copy of the bill of sale.

This warranty is effective only if the product was purchased through an Authorized Retail Seller and the unit is operated in North America. You are responsible for all tariffs and taxes imposed to ship or receive warranty or replacement units to and from the U.S. Warranty extends only to defects in materials or workmanship and does not extend to any other products that have been lost, discarded or damaged by misuse, accident, neglect, acts of God, such as lightning, improper installation, improper maintenance or modification. The Limited Warranty ALSO DOES NOT COVER damages from having been previously altered, modified, repaired or serviced by anyone other than the service facilities authorized by TMAX Digital Inc. to render such services. Warranty does not cover cosmetic damage or lost accessories.

TMAX DIGITAL Inc. reserves the right to change the warranty from time to time without written notice to you.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, TMAX DIGITAL INC. HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARDS TO ANY CLAIMS OF INFRINGEMENT.

LIMITATION OF LIABILITY

BOTH YOURS AND TMAX’S LIABILITY SHALL BE LIMITED TO THE PRICE PAID FOR PRODUCT. IN NO EVENT SHALL TMAX DIGITAL INC. BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.

Contact NuVision Technical Support
Email: cs@nuvision.com
Phone: (800) 890-1288
Hours: 8:30am to 5:30pm PST M-F

FCC RF Exposure Information and Statement

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: 13.3" Yoga Notebook (FCC ID: 2AFA3-TM133WH710CE) has also been tested against this SAR limit. SAR information on this and other pad can be viewed on - line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 0mm to body. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.