


360

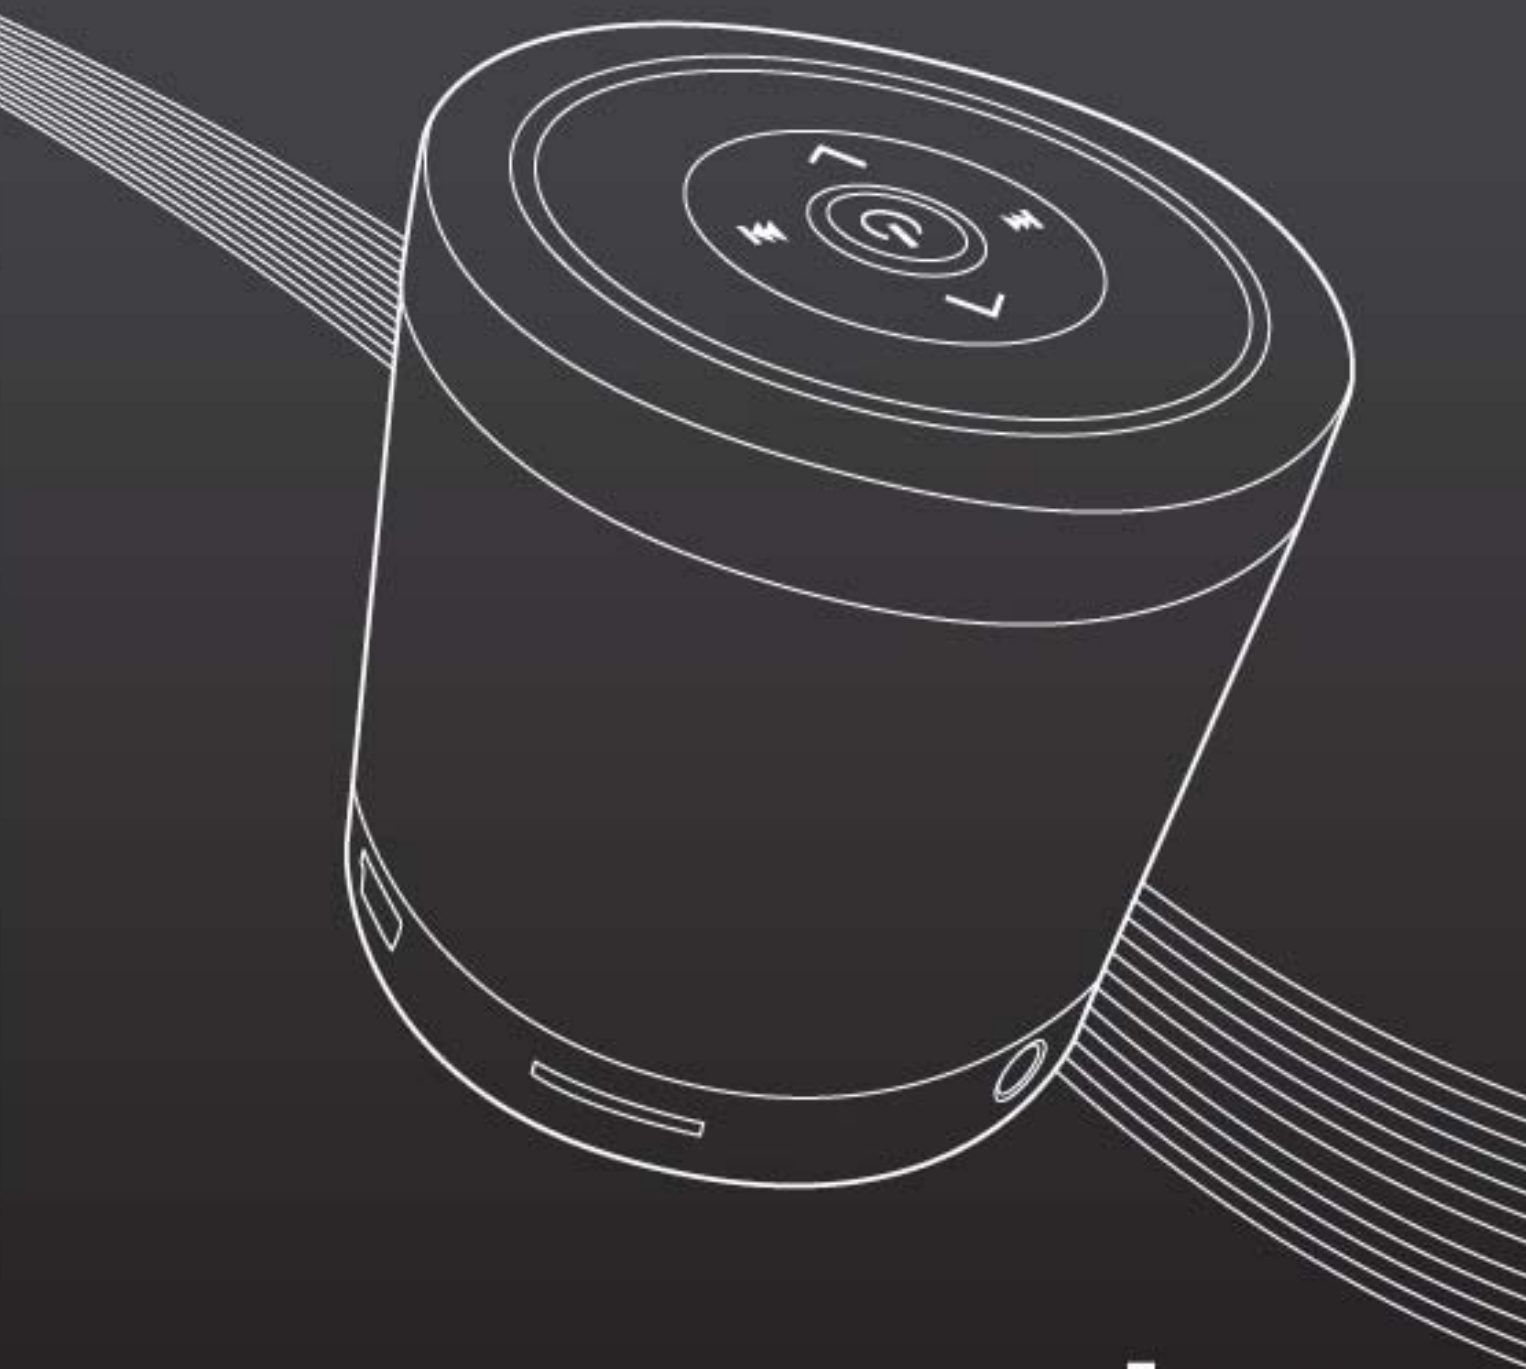

Bluetooth Speaker

Quick start guide



VSS-009-360BT

veho®

Other Veho Products



Pebble XT Portable Battery Charger
Product code: VCC-A008-PBP-XT



Bluetooth Wireless Headphones
Product code: VEP-004-BT



Multi Regional USB Plug Adapter
Product code: VAA-005



Mino microSD-USB Card Reader
Product code: VSD-003

Specifications

Speaker Output	2 x 2.2 watt
Battery Capacity	500 mAh
Battery Charge Time	First charge 4 hours, 2 hours thereafter
Play Time (Bluetooth)	2 hours
Play Time (microSD)	4 hours
Play Time (line in)	5 hours
Bluetooth Range	10 meters
Bluetooth Support	A2DP, AVRCP
Max. microSD Card Capacity	16 GB microSD card
File Format (for music files)	MP3, WMW

Support / appui / Unterstützung
supporto / ayuda / sustentação

In the event you need to contact Veho for support
or troubleshooting for your 360 speaker

www.veho-world.com/main/support.aspx

6. Guide to the controls

- GB**
- > Press and hold to turn the volume up
 - < Press and hold to turn the volume up
 - ⏮ Press once to skip one track back
 - ⏭ Press once to skip one track forward
 - ⏻ To pause a track press the power button once.
To restart the track press the power button again.
- FR**
- > Appuyez et maintenez pour augmenter le volume
 - < Appuyez et maintenez pour augmenter le volume
 - ⏮ Appuyez une fois pour sauter une piste de retour
 - ⏭ Appuyez une fois pour sauter une piste de l'avant
 - ⏻ Pour mettre en pause une piste appuyez sur le bouton d'alimentation une fois. Pour redémarrer la piste appuyez sur le bouton d'alimentation.
- DE**
- > Gedrückt halten, um die Lautstärke zu erhöhen
 - < Gedrückt halten, um die Lautstärke zu erhöhen
 - ⏮ Einmal drücken, um einen Track überspringen zurück
 - ⏭ Einmal drücken, um einen Titel vorwärts springen
 - ⏻ So unterbrechen Sie eine Spur drücken Sie den Netzschalter einmal.
Um den Track neu starten, drücken Sie den Netzschalter erneut.
- IT**
- > Premere e tenere premuto per aumentare il volume
 - < Premere e tenere premuto per aumentare il volume
 - ⏮ Premere una volta per saltare una traccia indietro
 - ⏭ Premere una volta per saltare un brano in avanti
 - ⏻ Per mettere in pausa un brano premere il pulsante di accensione.
Per riavviare la traccia premere il pulsante di alimentazione.
- ES**
- > Mantenga pulsado para subir el volumen
 - < Mantenga pulsado para subir el volumen
 - ⏮ Pulse una vez para saltar a la pista anterior
 - ⏭ Pulse una vez para saltar a la pista siguiente
 - ⏻ Para poner en pausa una pista, pulse el botón de encendido una vez.
Para reiniciar la pista, pulse el botón de encendido.
- PT**
- > Pressione e segure para aumentar o volume
 - < Pressione e segure para aumentar o volume
 - ⏮ Pressione uma vez para pular uma faixa de volta
 - ⏭ Pressione uma vez para pular uma faixa para a frente
 - ⏻ Para pausar uma faixa pressione o botão uma vez.
Para reiniciar a faixa pressione o botão novamente.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

veho[®]

www.veho-world.com