

# **COURANT**

QUICK START GUIDE

**CATCH:3**

## **SPECIFICATIONS**

---

**CATCH:3**

Input: DC9V,2.5A

Wireless output: 10W

Additional USB A Output: 5V,1A

Frequency: 115-205KHZ

Efficiency:  $\geq 75\%$

Charging distance:  $\leq 5\text{mm}$

Supports all Qi-enabled devices

 
*Note: "Fast-charging" requires a fast charger QC 3.0 (included)*

# LIGHT

---

The light on the back of the CATCH:3 acts as a charging indicator.

*Note: For certain devices, the light indicator will turn off once the receiving device is fully charged*



### No Light

Ready to charge



### White Light

Your device is charging



### White Flashing Light

Foreign object detected

### Plug In.

Use the provided USB-C cable and power adapter to power on your CATCH:3



## Charge Wirelessly and Organize.

Center align your device on the left side of the CATCH:3 to charge and use the catch-all section on the right side to organize your accessories.

*Note: Improper alignment may impact connection.*



## WARNINGS



Read all instructions and warnings prior to using the Courant CATCH:3 (“Product”). Improper use of the Product may result in Product damage, overheating, toxic fumes, fire or explosion, for which damages you (“Purchaser”), and not Courant (“Manufacturer”) are responsible.

At Courant we are dedicated to making the best quality products. Your CATCH:3 is under warranty for 1 year under normal use from the original date of purchase (the “Warranty Period”). The Purchaser must own the Product. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase.

Wireless charging is temperature sensitive. Do not store the Product in high-temperature environments, including intense sunlight or other forms of heat. Do not place Product in fire or other excessively hot environments.

Do not disassemble the Product or attempt to re-purpose or modify in any manner.

Do not attempt to replace any part of the Product.

If the Product is intended by Purchaser to be used by a minor, purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is sole responsibility of Purchaser, who agrees to indemnify Manufacturer for any unintended use/misuse by a minor.

Do not place credit cards (with a chip or magnet) on the Product.

Product is intended for home, office & general indoor use only. Please do not use near medical or industrial equipment or on board an aircraft.

Keep away from liquids.

It is recommended to unplug the Product if it is not in use for an extended period of time.

All Products have gone through a thorough quality assurance inspection. If you find the Product is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all Product use and contact Manufacturer.

For questions or instructions on the various ways to use the Product refer to the illustrations in this manual.

If a material or workmanship defect arises with regard to any Product, and a valid claim is received within the Warranty Period, we will at our option, either repair the Product using new or refurbished parts, replace the Product with a new or refurbished unit, or refund the purchase price of the defective Product. For the purpose of this limited warranty, “refurbished” means a Product or part that has been substantially returned to its original specifications.

Except for the limited warranty expressly set forth or to the extent restricted or prohibited by applicable law, Courant expressly disclaims any and all other warranties (express or implied) including any warranty of quality, merchantability, or fitness for a particular purpose, and you specifically agree that Courant shall not be liable for any special, incidental, indirect, punitive, or consequential damages for breach of any warranty of any type on any Courant product. In addition to and without limiting the generality of the foregoing disclaimers, the limited warranty does not under any circumstances, cover the replacement or cost of any electronic device or personal property inside or outside the Courant product. For the avoidance of doubt, the limited warranty does not cover damages that arose from negligence, misuse, wear-and-tear or failure to follow the product instructions.

**Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.**