

VeryKool i705 Mobile Phone User Manual

Improvements and changes to this guide due to typographical errors, inaccuracies of current information, or improvements to the programs and/or equipment, may be made by Verykool USA, Inc. at any time without notice.











PN: 5839001721

Table of Contents

SAFETY INFORMATION	1
PRIOR TO USE	2
BASIC FUNCTIONS	6
QUICK USER MANUAL	9
MENU FUNCTIONS	14
Messages	14
PhoneBook	17
Call log	19
Settings	22
Media Center	25
Games	28
Organizer	28
Browser	31
User Profiles	31
TROUBLE SHOOTING	33
SECURITY SETUP	34
Use of Passwords	34
Health and safety information	35
Radio Frequency (RF) Exposure and SAR	38
Emergency Calls	39
Term definition	39

Safety Information

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

	Do not use wireless phones while driving.
	Switch off wireless devices in an aircraft. Using them on aircrafts is illegal for the signal may cause interference during flights.
	Do not use mobile phones in explosive environments. Follow any regulations and rules strictly.
	Do not use mobile phones at or near Gas stations and chemicals
	Follow any regulations or rules in hospitals and health care facilities. Switch phone off near medical equipments.
	All wireless devices may get interference that could affect the performance.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use only in the normal position. Do not expose your phone to extreme high temperatures above +60 °C (+140°F) . Do not use static material to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press the Pick Up key. Give your location. Do not end the call until told to do so.

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

Prior to use


Thank you for selecting the VeryKool i705 GSM/GPRS Digital Mobile Phone. You can fully understand how to use your phone by carefully reading this manual where you can find its state of the art functions and user-friendly operations.

Verykool i705 is a folder phone with various useful features such as 1.8" TFT LCD display, Digital Camera, and FM radio.

This phone provides various practical functions including Predictive text English\French\Spanish input, folder type Phone Book, individualized 64 chord ring tones for incoming calls, clock/alarm clock, MP3 player, external memory card (T-flash card), recorder, calculator, which provide convenience for your work and recreational activities, in addition to the basic calling function.

Furthermore, VeryKool i705 adopts a customized design of the User-interface, which can satisfy your different requirements through its perfect set of functionalities. VeryKool i705 mobile phone complies with the technical specifications of GSM/GPRS.



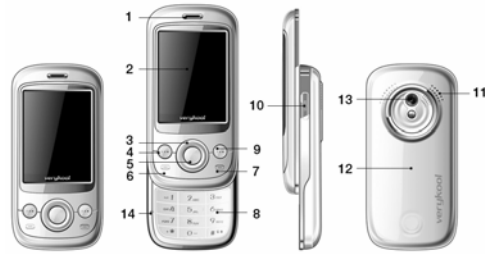


Chart of mobile phone
Phone Layout



Positions of Phone Keys

- | | |
|---------------------------|---------------------------------------|
| 1. Earpiece | 8. Number keys |
| 2. Screen | 9. Soft key |
| 3. Selection key | 10. Charger and accessories connector |
| 4. Soft key | 11. Speaker |
| 5. OK key | 12. Battery Cover |
| 6. Pick up key | 13. Camera |
| 7. Hang up and on/off key | 14. Microphone |

Functions of Keys

Key	Name	Description
	Pick Up Key	Making or answering a call. In the standby mode, press this key to access the Call Logs.
	Hang Up Key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return the standby mode and cancel current operations. Press this key to stop the alarm ringing once the alarm rings.
	Soft Keys	Use the left and right soft keys to execute to functions indicated at the left/right of the prompt bar on the screen.
	Selection Keys	Scrolling options in the function list or the phone book. In the edit mode, direction keys are used for moving the cursor. In the standby mode, press direction keys to activate a specified function.
	Numeric Keys	Used to enter numbers, letters and some special characters. In the standby mode, press and hold # key to activate Silent mode. In the edit mode, you can press # key to switch the input method.

LCD

LCD description












 





Your mobile phone has a single screen display, which consists of three main areas:

The First line displays status icons, which indicate the signal strength, the remaining power of the battery, etc.

The Middle lines display text and graphics, including numbers, text, animated icons and the information you enter.

The Last line displays the currently available operations assigned to the left or right soft key.

Icon Description

	Network Signal
	Connecting GPRS and using GPRS
	Connecting GPRS but no data alternating
	Divert all Voice Calls
	Auto Keypad Lock
	Alarm Clock is activated
	Battery Status
	Missed Calls
	New Message or Message Memory Full
	MMS is busy
	New MMS
	WAP Message
Sound Status	
	Ringing
	Vibrating
	Vibrating then Ringing
	Vibrating and Ringing
	Silent

Basic Functions

Switching Your Phone On/Off

Press and hold down Power Key for a few seconds to switch your phone on.

If the phone asks for a phone lock code:

Enter the phone lock code, and press OK.

If the phone asks for a PIN code:

Enter the PIN code, and press OK. The PIN code is usually provided with the SIM card. Please consult with your network provider for more information.

Access the standby mode.

Press and hold Power Key for a few seconds to switch your phone off.

Inserting the SIM card and memory card

Note of using SIM Card

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

Note: This phone model only supports the SIM cards of 1.8V and 3V.

Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.

The SIM card and its contacts can be damaged and lost by scratches or bending easily, so be careful while handling, inserting or removing the card.

Keep all SIM cards out of children's reach.

Note: Always make sure the phone is switched off before you insert or remove the SIM card, otherwise it may damage the SIM card.

Mounting the SIM Card

Remove the battery cover by sliding it. Insert the SIM card, push the metal cover, and turn up the cover. Insert the Slave card into the metal cover; return the metal cover to its original position.

As the following picture shows:



Note:

If the SIM Card is installed improperly or damaged, the prompt words "Insert SIM" will display on the screen after you switch on your phone. Remove the SIM Card and check the way that performs as pictures show, and then mount it again.

If "Insert SIM" still appears on the screen after you have inserted the SIM correctly, there may be something wrong with your SIM card. Please ask the network operator to repair it.

If the screen displays that the SIM card is locked permanently, please consult with your network provider.

Mounting the T-Flash Card

Please follow steps described as below:

Push the metal cover, and turn up the cover. Insert the Memory card into the metal cover; return the metal cover to its original position. As the following picture shows:



Charging the Battery

Note: Please always keep your phone connector and charger dry. Connect the travel adapter to the phone.

Plug the travel adapter into a proper AC wall outlet.
When your phone indicates that the battery is fully charged, please pull the travel adapter out from the I/O socket of the phone.

Tip:

1. If the battery is totally empty or low, it may take a few minutes before the charging indicator appears on the screen.

2. You can turn on/off, and use the phone while charging.

Warning: Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

Quick User Manual

Call function

You can dial and receive calls when signals of network providers are shown on the display screen.

Making calls

Making a call

Enter the phone number (with the area code)
Press the Pick Up Key to make a call.
Press the Hang Up Key to end a call.

Making International Calls

Press the * Key twice for the international prefix symbol +.
Enter the country code, area code and phone number.
Press the Pick Up Key to make a call.

Making Extension Calls

Enter the host number, and press the * Key three or four times for the extension prefix symbol P or W.
Enter the extension number, and press the Pick Up Key to make a call.

Clear Wrong Enters

Press the right soft key to delete the last character on the screen. Hold the right soft key will clear all you entered.

Making a call from the Phone Book

Press the right soft key to access the Phone Book.
Scroll the Up/Down key to select the number you want, and press the Pick Up Key to call the number.

Last Number Redial

In the standby mode, press the Pick Up Key to access the Call Logs.
Press the Up/Down key to reach the desired number or name and press the Pick Up Key.

Answering Calls

To answer an incoming call, press the Pick Up Key.
To end or reject an incoming/ongoing call, press the Hang Up Key.

Tip: If the caller can be identified, the screen will display the caller's name. If the caller can't be identified, the screen will only display the caller's number.

Connection of options

Your phone provides a number of functions that you can use during a call.

Call Waiting

Hold/Switch

Call Hold

Other options In-call

During a call, you can access Phone Book, SMS, Sound Recorder and other functions. (Please refer to Menu Guidance for details.)

Call history

Press Send to enter call history menu when standby, you can check latest dialed, received and missed calls;

You can check specific messages by Call History in the function menu.

Volume adjustment

During a call, you can press the Up/Down Selection Key to adjust the earpiece volume.

Phone Book

Phone number and corresponding name stored in phone or SIM Card can be stored and searched by using Phone Book.

Store phone numbers and names

Enter phone number directly when on standby, press the LSK (Left Soft key) to select the current number to Save, then choose to store number in either the phone or SIM Card.

Tip: Name and other relative message. It will confirm what has been entered.

Refer to text entered for entry manner relative message such as names.

Using the Phonebook

Enter the right soft key in the Phone Book List when on standby, then press display screen to choose Quick Search and enter Phone Book List. You can fast locate the number of the person you want to contact. Please

enter the initial letter of the person's name, and related records about it will display. You can Please use the Up/Down key to browse all entries, and you also can enter all letters or the initial letters of the name in the **Name** box to select the number you want.

Option of Phone Book List

Press the left soft key to access Option, and then you can perform following operations for each entry: Call, Send SMS, Edit, Delete and so on.

Call: To make a call with the number.

Send SMS: Send messages to the selected number.

Send MMS: Send MMS to the selected number.

View: Check the record for the selected number.

Edit: Edit the selected entry.

Delete: Delete the entry from the Phone Book.

Copy: All entries can be copied alternately from the SIM card to the phone or from the phone to the SIM card. i.e. SIM to Phone Copy or Phone to SIM Copy.

Move: All entries can be moved alternately from the SIM card to the phone or from the phone to the SIM card.

Duplicate: Entries saved in the SIM card can be copied to the SIM card, and entries saved in the phone can be copied to the phone. i.e. Local Copy.

Send vCard: Send your phone number by SMS or send to file.

Text Input Mode

This phone provides several input methods, which can be used in editing the Phone Book, short messages, memos, greetings, alarms and other text applications.

The Icons of Input Methods

After entering different kinds of edit windows (including edit phonebook, short messages, etc.), the icons of input are as follows:

"**123**": The Entry method of Numeric appears as: "123"

"**ABC**": The entry method of Multitap ABC appears as: "ABC"

"**abc**": The entry method of Multitap abc appears as: "abc"

"**eZi ABC**": The entry method of eZiText@Smart ABC appears as: "eZi ABC"

"eZi abc": The entry method of eZiText® Smart abc appears as: "eZi abc"
"eZi ES": The entry method of eZiText®Smart ES appears as: "eZi ES"
"eZi es": The entry method of eZiText®Smart es appears as: "eZi es"
"ES": The entry method of Multitap ES appears as: "ES"
"es": The entry method of Multitap es appears as: "es"
"eZi FR": The entry method of eZiText®Smart FR appears as: "eZi FR"
"eZi fr": The entry method of eZiText®Smart fr appears as: "eZi fr"
"FR": The entry method of Multitap FR appears as: "FR"
"fr": The entry method of Multitap fr appears as: "fr"

How to Switch Between the Input Methods

Press the # key to switch the input methods.
e.g.: If the current input is Smart ABC the screen will show "eZi ABC".
Press the # key, to go to Smart abc, and the screen will show "eZi abc".

Numeric, Multitap ABC and Multitap abc Input Methods

Numeric
When the icon of the input method is "123", press the number keys to enter the numbers directly.

Multitap ABC and Multitap abc
When the icon is "ABC" or "abc", press the number keys (2 to 9) repeatedly until desired letters appear in the text area. Press the number key once for the first letter. Press twice for the second letter. So, press number keys to reach the desired letter in the same way.

Press 0 to enter a blank space.
Note: while using the Numeric entry, please switch to the method of Multitap ABC and Multitap abc first if a blank space is required, and then press 0 to enter a blank space.

How to Input Special Symbols

If you want to input special symbols, such as ". ! ? = < >", Etc., please following steps as below:

Press the left soft key to access **Menu** for the **Insert Symbols** in the **Entry method** or press the * Key to display the symbols. Press the

Up/Down, or Left/Right Key to move the cursor in the symbol table, and select one symbol. Press the right soft key to cancel the symbols selection.

Menu Functions

All function options about the mobile phone are listed as below with brief descriptions.

Messages

SMS

Short Message Service (SMS) is a kind of network service. Your home network may not support the service. Please consult your home network operator for more information. Enter the **Menu**, and select **Messages**.

Write Message


Please press the # to switch input methods while editing a message. You can enter letters and numbers, and insert pictures and rings. (Support EMS service)

Edit your message, and press the * to insert special symbols.

Select **Options**, and then you can do: Done, Use Templates, Insert Object and so on.

When you select **Done**, you can choose the way to send or save as desired.

Inbox/ Outbox/ Drafts

The icon  means an unread message or the message box is full. You won't receive new messages once the message box is full. Please delete unnecessary messages.

Select the unread message, and press the left soft key to read.

Select **Option**, and then you can do: reply, delete, edit and so on.

Message Templates

Your mobile phone saves many messages in common use. You can edit or erase them.

SMS Settings

You can set the default information about SMS properties.

Schedule SMS

Press the left soft key to access the Add or Option, and then you can set the date, time, message and Phone number. Press Done and Save the message will sent out the message to the number as your desire.

Note: The time format of this function is 24 hours.

MMS

Please consult your network operator to obtain the MMS services.

Write Message

While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

To: the phone number or E-mail address are both OK.

Cc: send the MMS to others at the same time. Phone numbers or E-mail addresses are both OK


Bcc: send the MMS to others secretly at the same time. Phone numbers or E-mail addresses are both OK.

Subject: edit the Subject of the MMS.

Edit content: enter the text or add image, audio or attachment.

Inbox/ Outbox/ Drafts

The phone saves the received MMS into the inbox.

All received Messages display in the inbox, and the icon  means the MMS is unread. Use the Down/Up key to scroll the cursor to check the list, and the sender's name and number will display. If the MMS has been read, the icon will change to the read icon. Please press the left soft key to access **Option**, and then you can do: view, reply, delete and so on.

Templates

Your mobile phone saves many MMS in common use. What you can do for those MMS are View, Properties, and Write Message.

MMS Settings

Please follow steps described as below:

Compose: You can configure Creation Mode, Image Resizing, and Auto Signature.

Send: You can configure Validity period, Delivery Report, Read Report, Priority, Slide Timing, and Delivery Time.

Retrieve: You can configure Home Network, Roaming, Read Report, and Delivery Report.

Filter: You can configure Anonymous and Advertisement.

Server Profile: You can select one profile from Profiles list to activate or edit.

Memory Status: You can check the Usage, Used space and Free Memory.

Chat

Use this function to chat with the sender by sending messages.

Chat room info: select one chat room to set My Nickname and Remote Number.

Start new: enter words and start to chat with the preset number.

Voice Mail Server

Scroll the Up/Down key to select **Voice Mail Server** in the **Messages** menu, and select **OK** to access **Voice Mail Server**.

Connect to Voice: You can hear messages in the voice mailbox.

Edit: Input or modify the number of voice mailbox.

Note: This service is supplied by the network, such as the message machine service. It enables the caller to leave messages when you can't or unwilling to answer the incoming call. Your number for the voice mailbox is saved in this phone. In standby mode, hold the number key 1 to dial the number of the voice mailbox after the number is configured. Please consult your network operator for more details.

Broadcast Message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Currently there are a limited number of providers servicing these applications. Please check with your network provider for more information.

Receive Mode: Turn on or off the Cell Broadcast.

Read Message: Scroll the Up/Down Key to select the message.

Languages: Select the desired language to display the broadcast message.

Note: Your network operator decides whether the language is supported or not.

Channel Setting: You can choose Select, Add, Edit or Delete to receive the Broadcast information.

Phone Book

You can save phone numbers in your mobile phone. You can access the Phone Book to search all records saved in this mobile phone and your SIM card.

Saving a contact using the Phone Book

Press the left soft key to enter the main menu when on idle mode, and then select the Contact Icon to enter the Phone Book List.

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described as below:

From the Phone Book menu, press the left soft key to select **Add New Entry > To SIM/To Phone**.

If the **To SIM** is selected, press the left key to select OK to start to edit the contact's name and phone number.

If the **To Phone** is selected, you can add the contact's name, phone number, home number, company name, email, office number and so on.

Tip: This mobile phone offers you several input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi ABC), Smart abc (eZi abc), and so on.

Option of Phone Book List

Quick Search

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display in the middle of the screen. Please use the Up/Down key to select the number as desired, and then press the Pick Up Key to make a call.

Search contact

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display. You can Please use the Up/Down key to browse all entries, and you also can enter all letters or the initial letters of the name in the **Name** box to select the number you want.

Add New contact

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described as below:

From the Phone Book menu, press the left soft key to select **Add New Entry > To SIM/To Phone**.

If the **To SIM** is selected, press the left key to select OK to start to edit the contact's name and phone number.

If the **To Phone** is selected, you can add the contact's name, phone number, home number, company name, email, office number and so on.

Tip: This mobile phone offers you several input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi ABC), Smart abc (eZi abc), and so on.

Copy All

This function enable you copy all entries both from the SIM card and the phone.

Note: If the capacity of this phone book is different from the SIM card's, the copy content takes the smaller one as standard.

Move All

This function enables you move all entries from the SIM card or the phone.

Delete

You can select delete entries from the SIM card, the Phone or one by one.

Caller Groups

You can set group name, associated sound, associated picture and members for different caller group.

Extra Number

You can set Owner Number, Server dialing and SOS Number.

Owner Number: You can enter a group of a number and a name and can also edit or erase it.

Service dialing number: You can enter Service dialing number.

SOS Number: You can enter five groups of SOS numbers.

Settings

Memory Status: display the occupied storage and the total storage.

Preferred Storage: select the SIM or Phone as the preferred storage for the new number.

Fields: select the desired option when you add a new number.

My vCard: can edit and send my card.
Vcard Version: You can set Vcard 2.1 or Vcard 3.0.

Caller Picture / Ring Tone/ Video

Each of picture /ring tone/ Video can be selected to the new entry /the selected entry /the caller group.

Call log

Call History

In the standby mode, press the left soft key to access **Menu > Call log > Call history**.

Missed Calls: With this function, you can check recent missed calls.

Dialled Calls: With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Dial, Send SMS, or Edit.

Received Calls: With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Dial, Send SMS, or Edit.

Delete Call Log: You can remove all records of missed, dialed or received calls with this function.

Call Time: You can check the time of last call, total dialed, total received and reset all.

Call Cost: You can check the cost of last call cost, total cost, reset cost, max cost, and Price Per Unit.

Note: This function is related with the SIM card. Some SIM cards don't support the function. PIN2 is provided from the network operator. Please consult your network operator to obtain the number.

SMS Counter: With this function, you can check the number of sent and received messages.

Note: This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

GPRS Counter: You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

General call settings

Call Waiting:

1. Activate: The mobile phone will connect to the network when Call Wait is enabled. After a while, the network will respond by sending messages to ensure your operation. If Call Wait is enabled, the network will alert you. At the same time, another incoming call number will display on the screen when the first call is ongoing and a new call is coming thru.
2. Deactivate: If you cancel Call Waiting, the network won't alert you when the first call is ongoing and a new call is coming thru.
3. Query Status: With this function, you can inquire about the current status from the network.

Call Divert: This function allows your phone to divert incoming calls to another phone:

1. Divert All Voice Calls: When this function is enabled, all incoming calls will be diverted to another phone. Set it On or Off, the phone will connect to the network. After a while, the network will respond and tell you the result of an operation.
2. Divert If Unreachable: When this function is enabled, the incoming call will be diverted to another phone number if the phone is unreachable.
3. Divert If No Answer: When this function is enabled, the incoming call will be diverted to another phone number if there is no answer in some time.
4. Divert If Busy: When this function is enabled, the incoming call will be diverted to another phone number if the phone number you dialed is busing.
5. Divert All Data Calls: You can divert all data calls with the need of your network operator's support.
6. Cancel All Divert: Use to cancel all diverting functions.

Call Barring: This function makes use of Call Barring to limit some selected calls. When you configure this function, you should consult with your network provider for the password. If the password is incorrect, the phone will prompt the fault message. After the desired number is selected, please continue to select On or Off. After a while, the network will respond and tell you the result.

Line Switching: Switch to Line 1 or Line 2, the default is Line 1.

Note: If Line 2 is selected, making calls from Line 2 depends on the network operator

Close user group: Press the left soft key to access Group List, and then select Add to input the group's name. Press the left soft key to select Done, and then add the index. Press the left key to finish. Select Option to Edit, Add, Activate, Deactivate or Delete the existent group.

Note: This service needs the network support

More:

1. Black list: you can set 20 numbers. When this Black list is enabled, you would not receive the calls from the numbers entered in the Blacklist

2. White list: you can set 20 numbers. When this white list is enabled, you can but receive the calls from the numbers entered in the white list.

3. Auto Redial: You can set the Auto Redial function On or Off. When set to ON, the phone will automatically redial the recent outgoing number after a while if you fail to connect to the number. The times for auto redial are up to 10 times. You can't make any other calls when the Auto Redial is ongoing. Press Cancel to end Auto Redial.

4. Speed Dial: Set the status on, and then you can set 8 groups for the speed dial. (Corresponding number keys are 2 to 9). In the standby mode, press and hold the number key to dial the corresponding number

5. Call Time Display: You can set Call Time Display On or Off. The call time will display when set it on, .The call time won't display when set it off.

6. Call Time Reminder: In order to save some calling cost, this function prompts you to end the call in time. You can select Off, Single, or Periodic. There is no prompt when Off is selected. You should enter a specific time between 1 and 3000 seconds when Single is selected. The phone will ring once when the time is up. You should enter a specific time between 30 and 60 seconds when Periodic is selected. The phone will ring once automatically at the specific time before the integral minute is up.

7. Auto quick end: You can set ON/ OFF, and set a time (1~9999) as your desire.

Settings

In the standby mode, press the left soft key to access **Menu > Settings**.

Phone Setup

Time and Date:

Set Home City: Select the desired home city.

Set Time/Date: Enter the current time and date.

Set Format: Select a time and a date format.

Schedule Power On/Off: You can set the time for auto power on /off. Do turn the status on before using that function.

Note: Please disable the Schedule Power On function before you board an airplane.

Language: Select the desired language for the display text.

Preferred Input Methods: Select the desired input method for the default input method.

Greeting Text: Set ON, input words as your greeting text once you switch the phone on.

Shortcuts: You can set shortcuts for those functions you use often.

Dedicated key: You can configure short cut functions for the Up, Down, Left and Right key respectively. In the standby mode, press any one of them to access the appointed function.

Auto update of date and time: It can be set to ON or OFF.

Flight Mode: You can set the normal mode, flight mode and Query When Power On.

Misc. Settings

LCD backlight: You can set the LCD backlight.

Display Characteristic:

With this function you can configure the basic status of display characteristics including wallpaper, screen saver, power on display, and power off display and so on.

Network Setup

Please contact the network operator for the following network service.

Network Selection

New Search or Select Network can help search the network where you are in. You can select the selection mode: Automatic or Manual. When you

select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

Preferred Networks

Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Option** to perform the following operations:

1. Add From List: Display all PLMN list.
2. New: Create a new network and set the network priority.
3. Change Priority: Reset the selected Network Priority.
4. Delete: Delete the current preferred network.

GPRS Connection

You can set it When Needed or Always to GPRS connection.

Security Setup

SIM Lock:

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. Three times wrong PIN input, it's asked to input PUK. PUK is used to release and modify the locked PIN. If PUK isn't provided or missed, please consult your network operator.

Phone Lock:

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password.

Auto Keypad Lock:

You can lock/unlock the phone keyboard and set the Key Lock Time to 5 seconds, 30 seconds, 1 minute or 5 minutes. The default is OFF

Fixed Dial:

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

Note: If you enter PIN2 after the phone is switched on, PIN2 is not required before the phone is switched off. Therefore, please switch the

phone off and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

Barred Dial:

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

Change Password:

You can change PIN, PIN2, and phone password.

1. PIN

The original PIN is required before change the PIN.

Enter the new PIN. 4-8 numbers can be used for PIN.

Enter New PIN to ensure the New PIN.

2. PIN2

The original PIN2 is required before change PIN2.

Enter the new PIN2. 8 figures can be used for PIN2.

Enter the New PIN2 again to ensure the new PIN2.

3. Phone Password

The current phone password is required before change the phone password.

Enter the new phone password.

Enter the new phone password again to ensure the new phone password.

Note: The factory setting for the phone password is 0000.

Restore Factory Settings

Access **Settings** to select **Restore Factory Settings**, and press OK. All settings can be restored to factory settings with this function. The factory setting for the phone code is 0000.

Media Center

Camera

CMOS camera is built in to your mobile phone. Digital zoom depends on the picture size. Select **Camera** in **Media center** menu to activate the camera, press the right key of the central Key to take a photo.

Press left soft key to access the following options:

Photos:

1. View: Browse the specified picture files.
2. Browse Style: Select a browse style.
3. Use as: Send to Wallpaper, Screen Saver, power on display, power off display, Caller picture.
4. Send: send the phone as multimedia msg.
5. Rename: Rename the specified picture files.
6. Delete: Delete the specified picture files.
7. Delete All Files: Delete all picture files.
8. Sort by: Sort all picture files by name, type, time, size and none.
9. Storage: You can store the picture files in phone or T-Flash card.

Camera Settings:

1. EV: You can adjust exposure value to improve the image quality according to the actual conditions.
2. Banding: 50Hz, 60Hz.
3. Delay Timer: Off, 5 seconds, 10 seconds, and 15 seconds.

Tip: You can use the selection key repeatedly to select the desired option.

4. Cint. Shot: Off, 1 shot.

Image Settings:

1. Image Size: You can take and store pictures in various sizes. The larger the image size is the more memory space will occupy on your phone's memory.
2. Image Quality: Normal, High, and Low. Higher quality images will take up more space.

Tip: You can use the selection key repeatedly to select the desired option.

3. White Balance: Adjust the color balance of the image. You can make your photo appear warmer or cooler.

4. Scene Mode: You can set Auto or Night.
5. Effect Settings: You can add a distinct appeal to your pictures with the following effects Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert.
6. Storage: You can store the picture files in phone or T-Flash card.
7. Restore Default: Camera Parameters will be restored to factory parameters with this function.

Image Viewer

The Image viewer provides you with a quick view of the picture functions. Please refer to the Photos operations of the Camera for more details.

Video Player

You can perform the following operations:

Play: You can play the specified video.

Use as: You can forward the video to Caller video.

Rename: You can rename the specified video.

Delete: You can delete the specified video.

Delete All Files: You can delete all videos.

Sort by: You can sort all video files and display them in a new order; you can choose to Sort By Name, By Type, By Time, By Size and None.

Storage: You can store the Video in phone or T-Flash card.

Audio Player

The Play, Stop, Back, Forward functions correspond to the Up, Down, Left and Right Key respectively. The available music formats. Select **List** to access the **Play List**, and then select **Options** to perform the following functions: play, details, add to rings, refresh list, settings.

Note: The Audio Player of the phone will automatically play music files from the **Music** folder. You may need to refresh it manually from the settings in case you have earlier opted for manual refresh settings.

Warning: Make sure that the volume is appropriate for your hearing while using the audio player.

Sound Recorder

The mobile phone supports two recording formats: WAV and AMR. You can record conversations. If there is a record, press the left soft key you

can do: Record, Play, Append (only for AMR), Rename, Delete, Delete All, Settings and Forward.

Note: If a call is incoming while recording, the record will abort and the data will be saved into the record folder automatically. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

FM Radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector. Select **FM Radio** in the **Menu** to access the radio controls.

Press the Down key to Power on/ off the FM radio.

Press the Left/ Right key to step down/ up to the next frequency.

Press the / # keys to adjust radio volume.

Press Options to access the following options: channel list, manual input and so on.

Schedule FM Record

With this function, your phone can record the FM program as the schedules once the original Headset is plugged into the accessories connector. You can set On/Off, the date and time, repeat style, channel settings and record settings.

Melody Compose

The mobile phone enables you to compose your favorite music as the tune of the incoming call, alarm or memo.

Note: The phone can save multiple tones edited according to the volume of tones.

When the Tune Editing List is blank, you can edit your favorite tunes by pressing "Add". After you have finished editing, press **Options** to select a music instrument or playing speed to play the editing tunes. You also can save the editing tunes.

Select the edited music, and press **Options** to perform the following operations: Play, edit, add rename and so on.

Note: A maximum of 150 notes can be edited with a piece of self-edit tune.

In the window of Tone Editing, press **Options** to perform the following operations: Play, adjust play speed and so on.

The rules by which the tone is composed as follows:

0: Insert one pause;

1: Insert Do;

2: Insert Re;

3: Insert Mi;

4: Insert Fa;

5: Insert So;

6: Insert La;

7: Insert Si;

8: Insert a vibration note;

9: Insert a backlight;

*: Modify the playing rhythm of the current tone;

#: Modify the current note with halftone;

↑: Modify the tone of current note (high, middle, low);

↓: Modify the tone of current note (high, middle, low)

File Manager

You can use the function to manage all types of files saved in the phone or memory card.

Games

There are several interesting games in the phone. Please refer to instructions from the game menu for more details.

Tip: The game menu includes Start Game, Best Grades and Game Help.

Organizer

Calendar

You can Jump to a specific date.

To Do List

You can View, Add, Edit Task, Delete, Delete All and Send vCalendar as desired. Start up the **Memo** and press OK. Press **Option> Add** or **Add** to access to add a new memo.

Alarm

The mobile phone provides several alarms and you can set them at your preference. If you have set an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select "Edit" to set the alarm.

Tip: You can set FM Radio as your alarm Audio options.

Calculator

The calculator can add, subtract, multiply and divide. To use the calculator:

Press the # key to enter the decimal point

Press the up, down, left and right key and OK key to select +, -, *, /, = respectively.

Press **Clear** to delete the figure.

Units Converter

You can make the units conversion for weight and length. Enter the number into the column, and then press "OK" to get the result.

Currency Converter

You can make currency conversions. Press **OK** after enter the exchange rate, and then enter the number of the currency, and press **OK** to get the result.

Stopwatch

The stopwatch has two modes - Split Timing and Lap Timing, and you can view the records of both the modes.

World Clock

Scroll to browse every city's time zones in the world map. The related date and time will display at the bottom of the screen.

Health

Provides the reference of body mass index (height, weight and sex).

Bluetooth

You can establish a wireless connection with other compatible devices using Bluetooth technology. Such compatible devices include cell phone, computer, earphone and vehicle parts. For the compatibility of other devices please consult the manufacturer. You can use Bluetooth to send pictures, videos, music, notes and voice segments; or establish a wireless

connection with compatible PC (to send files for example). As the communication between two Bluetooth devices is just wireless, so it's not necessary to keep the mobile phone dead against the other device. You shall ensure that the distance between two Bluetooth devices is no more than 10 meters (about 32 feet). But however, the Bluetooth connection may be interfered by obstacles like wall or other electronic devices.

In some circumstance, the application of Bluetooth may be restricted. Please consult your local authorities or service providers.

Application of Bluetooth technology in your cell phone will accelerate the consumption of electricity power and thus shorten the service life of your battery.

Power: select to switch on or off Bluetooth.

Inquiry Audio Device: Searching for hand-free devices: after confirmation, your phone will search for Bluetooth devices and a list of available devices will be displayed in the screen. Select a Bluetooth device and input a correct password to establish a security connection.

Note: the initial password of Bluetooth earphone is 0000 or 1122. For details please contact your device provider.

Remote Control: Control other Bluetooth appliances through cell-phone far away, based on Bluetooth Technology.

My Device: search for new devices and show the list all Bluetooth devices within the scope of your phone. Select an available device, press OK and then you have the following options:

1. Connect: Enter into service record option after confirmation.
2. Rename: Rename a device.
3. Delete: Delete a device.
4. Delete All: Delete all the devices.
5. Service List: Press left soft key to Refresh OPP profile, DUN profile, SPP profile function.

Active Devices: show all devices already connected.

Settings: After selecting, you have the following options:

After select, you have the following options: Visibility, Change Device name, Authentication, Audio path, Block list, Storage location, FTP settings, Bip settings.

About: show detail the Bluetooth serviced provided by this phone.

Browser

STK Service

In addition to the functions available in the phone, your SIM card may provide additional services, which is supported by your SIM card. Please consult your network operator for more information.

WAP

WAP enable you tour around the Internet world easily and pleasantly.

Please follow the steps described as below:

HomePage: The default Internet Web Address.

BookMarks: Save the Web address you often use.

Recent Pages: Records after you browse the Website.

Offline Pages: to view the offline pages.

Input address: Press the left soft key to access Enter Address, and then input the web address to go to the Internet.

Service inbox: to view your push message.

Settings: You can configure: Profile, Browser Options, Service Message Settings, Clear Cache, Clear Cookies and Trusted certificates.

Data Account

Press the left soft key to perform following steps:

GSM Data: Edit the GSM account.

GPRS: Edit the GPRS account.

User Profiles

Normal/ Silent/ Outdoor/ Indoor/ Headset/ Bluetooth

Activate

Customize

1. Tone Setup: Includes Incoming Call, Power on, Power off, Cover Open, Cover Close, Message Tone, and Keypad Tone.

2. Volume: Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.

3. Alert Type:

Ring: Just ringing, no vibration.

Vib. Only: Just Vibrating, no ringing.

Vib. and Ring: Vibrating and ringing.

Vib. then Ring: Ringing after vibration.
Silent: no ringing, no vibration.

4. Ring Type:
Single: Rings once when a call is coming.
Repeat: Rings continuously when a call is coming.
Ascending: Rings continuously and the volume increases gradually.
Tip: Human singing tone cannot be played in Ascending Ring.

5. Extra Tone:
Warning: If necessary, you will be warned by the prompt tone.
Error: You will be warned by a tone if you make a mistake.
Camp On: A prompt tone will be heard after searching the network successfully.
Connect: A prompt tone will be heard after getting through to the dialed number.

6. Answer Mode: You can select Cover Answer or Any Key.

Tips:
Insert the earphone and the phone will access the Headset mode automatically. This mode has no Activate option.
Press and hold the # key to enable or cancel the silent mode.

Trouble Shooting

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

Problems	Solutions
Can not answer or make a call	Make sure that the phone has been switched on. Make sure that the battery is charged. Make sure that the signal intensity is high enough. Make sure the own number function in the call setting is system preset or number sending. Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function. Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.
Low voice	Check if the volume has been set too low.
No ring	Check whether you have set up the "Silent" option. Check whether the ring volume is not too low Move away from a noisy place to check if you can hear the phone ringing. Check whether you have set up call diverts.
T-Flash card detect slowly	Format your T-Flash card with your phone. Note: To protect your files from getting lost, please backup the important information into the safe place before you formatting card.

Security Setup

Use of Passwords

Your mobile phone and SIM card have various passwords. Those passwords avoid unauthorized use of your phone and SIM card.

Phone Code

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 0000. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

PIN (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card from unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on.

Three times wrong PIN input, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.

If you are prompted to enter the new PIN again, enter it and press **OK**.

If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

PUK (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

PIN2 (4 to 8 digits)

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not.

Three times wrong PIN2 code input, the SIM card will be locked and you will need to use the PUK2 to unlock it.

Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.

If you are prompted to enter the new PIN2 again, enter it and press **OK**.

PUK2 (8 digits)

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

Barring Code

To activate call barring, you need a Barring Code. You obtain the password from your service provider.

Health and safety information

Charing and Discharging

The charger is designed to be used in temperatures between 0°C to 40°C.

Do not charge the phone in wet and damp conditions.

Use only batteries approved by the phone manufacturer and recharge your battery only with the charges approved by the manufacturer.

We strive to produce products in compliance with global environmental standards

The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.

Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.

When the battery level is low, "Low Battery" will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.

When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.

Temperature extremes will affect the ability of your battery to charge.

Tips for Battery

Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.

Do not let metal contacts on the battery touch other metal contacts. It could short-circuit and damage the battery. Use the battery only for its intended purpose.

Do not disassemble or modify the battery by yourself.

Do not clean the battery with water or any organic solvent.

Always keep the battery dry.

The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.

Do not short-circuit the battery.

Turn off mobile phone before removing the battery.

Do not dispose of batteries in fire.

If you smell anything strange from the battery or find that the battery is overheated, you should stop using it immediately and contact the authorized After Service Center in your region.

If you don't use the battery for a long time, please fully charge the battery before you store it.



Batteries should never be placed in municipal waste. Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

Vehicle Use

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use handsfree solutions intended for use with your phone.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna supports the installation.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Note: Use of cellular phones on board an aircraft may cause interference to the aircraft's navigational system. FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft.

Usage & Maintenance

To maintain your product at an optimal functioning level, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

Keep your phone and all its parts and accessories out of children's reach.

Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.

Always treat your products with care and keep it in a clean and dust-free place.

Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.

Do not expose your product to open flames or lit tobacco products.

Do not attempt to disassemble or modify your product. Only authorized personnel should perform service.

Do not drop, throw or try to bend your product.

Do not paint your product.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it.

Keep anything magnetic, such as credit cards, far away from your product.

If you find that the battery has any crack, deformation or anything else, you should stop using the battery immediately.

If the electrolyte leak out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the electrolyte spatters into your eyes, you must use the clean water to wash your eyes thoroughly and go to the hospital immediately.

If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel there will assist you, and if necessary, arrange for service.

Radio Frequency (RF) Exposure and SAR

This phone is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for this phone employs a unit of measurement known as the Specific absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value.

This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power. Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified by the FCC that it does not exceed the limits established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) that conform to a uniform testing methodology determined by an expert standards body and then reported to the FCC. The highest SAR values for this model phone when tested for use on the body were 1.542 W/kg (GSM band 850 MHz), and 0.485 W/kg (PCS band 1900 MHz).

While there may be differences between the SAR levels of various phones and at various positions, they all met the governmental requirements for safe exposure. Please note that improvements to this

product model could generate differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Emergency Calls

This phone, like any wireless phones, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

To make an emergency call:

Switch your phone on.

Some networks may require that a valid SIM card is properly inserted in the phone

Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call, please remember to give all information as particularly as possible. Never hand off the call please until you are given permission to do so.

Term definition

To help you understand the terms used in this manual we provide the definition of the terms below.

ALS (change lines service)

ALS provides the function to connect with two lines in the same SIM Card. Dial and receive call in one of the lines as required when using this service.

Call Limitation

Limit the outgoing and incoming calls.

Call forwarding

Forward an incoming call to another mobile phone or telephone.

Call Keeping

Keep another call when receiving and making a Call; switch them if necessary.

Call Waiting

Notify user another call is coming while another call is in progress.

Line identification service (show incoming call)

The user can view the phone number of incoming call and hide or display user's phone number on other party's phone. GSM (Global System

for Mobile Communication) International Standard of Cellular mobile communication can ensure compatibility between different network providers.

Multi-parties calls

Establish conference calls that allow up to 5-party- participants simultaneously.

Roaming

Use mobile phone outside of local service area.

SIM Card (Subscriber Identity Module Card)

SIM Card contains CMOS chip, which contains information of (network or memorizer information, and users' individual data). SIM Card can be inserted into small slot back of mobile phone after removing the battery.

SMS (Short Message Service)

Network service function that enables sending messages to other mobile phones or receive messages without making a phone call with the other party.

Soft key

Functions of Left Soft Key (LSK) and Right Soft Key (RSK) in mobile phone:

To change the current menu.

To select/confirm the menu

Voice Mail Server

Computer response service: it will automatically give response (your own voice can be used), send greetings and record information when you cannot answer a call.

Other

GPRS: General packet radio service

SMS-CB: Short message service- Cell Broadcast

WAP: Wireless application protocol

FDN: Fixed dialing number International Mobile Equipment

IMEI: Identification code, which consists of 15 digits, one mobile phone has only one corresponding IMEI number.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types i705 (FCC ID: WA6I705) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.816W/kg and when properly worn on the body is 0.455W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.