

i725 User Manual

Thank you for purchasing the i725 mobile phone



Introduction

Welcome to choose the i725 mobile phone. This user manual states the outstanding performance of the i725 mobile phone in detail. In addition to the basic call features, the i725 mobile phone and the system network also provide you with a variety of useful features and services to facilitate your work and leisure activities.

The Company reserves the right to make any amendment on the technical specifications without any advance notice.

Reading Statement for the Manual

In manual, different typesetting styles are used to interpret different operating details, and the specific interpretation is as follows:

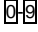Operation	Description of Contents	Example
Showing contents	Show with normal characters	0-9
General key	All the keys except functional keys are shown by normal characters with frames	
Functional key	Functional key is shown with bold and frame	
Menu item	Show in bold italics	Hold a call

Note:

The picture shown in the manual are only used as function hint pictures which may be different from the ones shown in the mobile phone, and the ones in your mobile phone shall prevail.

CONTENT

Introduction	I
Security and performance	1
1 Start Using	4
1.1 Battery	4
1.1.1 Uninstallation and installation of battery	4
1.1.2 Charging the battery	5
1.1.3 Use of battery	5
1.2 Side sliding keypad	5
1.3 SIM card	6
1.3.1 Insertion of SIM card	7
1.3.2 Unlock the SIM card	7
1.4 Plug and unplug the Memory card	8
1.5 Plug and unplug the earphone	8
1.6 Status bar and content	8
1.6.1 Keys	9
1.6.2 Text input and edit window	11
2 Dial and answer the call	12
2.1 Making a call	12
2.1.1 Direct dial	12
2.1.2 Making a call from the Phonebook list	13
2.1.3 Speed dial	13
2.2 Answering a call	13
2.2.1 Answering new call	13
2.2.2 Connecting two calls at the same time	14
2.2.3 Conference call	14
2.3 Emergency call	14
3 Menu operation	15
4 Characteristic function	16
4.1 Switch pages	16
4.2 Free-style menu	17
4.3 Change main menu icons' position	18
4.4 Curtain page	18

5 Phone	18
5.1 Phonebook.....	18
5.2 Call log.....	20
5.3 Dialer.....	20
5.4 Profiles.....	20
5.5 File manager.....	21
5.6 Message.....	21
5.7 Email.....	22
5.8 Setting.....	22
5.8.1 Time and date.....	22
5.8.2 Language & Input method.....	22
5.8.3 Personalized settings.....	22
5.8.4 LCD backlight.....	23
5.8.5 Call settings.....	23
5.8.6 Network setup.....	24
5.8.7 Security setup.....	24
5.8.8 Wireless connect.....	27
5.8.9 Phone mode settings.....	28
5.8.10 Misc. settings.....	28
5.8.11 Restore factory settings.....	28
5.9 Image viewer.....	29
5.10 Camera.....	29
5.11 Calendar.....	31
5.12 Alarm.....	31
5.13 Media player.....	31
5.14 Video recorder.....	32
5.15 Notes.....	33
5.16 FM radio.....	33
5.17 Sound recorder.....	34
5.18 Calculator.....	34
5.19 Ebook reader.....	34
5.20 STK.....	35
5.21 Synchronization.....	35

5.22	Phone sync.....	35
5.23	WAP	36
5.24	Java.....	36
5.25	Task.....	36
5.26	Currency converter.....	37
5.27	Typical stopwatch	37
5.28	Unit converter	37
5.29	World clock.....	37
5.30	MSN	37
5.31	Yahoo	37
5.32	FaceBook.....	38
5.33	Twitter.....	38
6	Other Functions	38
6.1	Mass Storage Function.....	38
6.2	Webcam Function	38
6.3	COM port.....	39
7	Common Questions	39
10	Maintenance Guideline.....	40

Security and performance

◆To touch the screen of the mobile phone with sharp articles is prohibited. Dust particles and nails may scratch the screen. Please maintain the screen clean. Please remove the dust on the screen with soft cloth gently, so as not to scratch the screen.

◆In thunder raining days, please do not use the mobile phone when charge it or outdoor, so as to avoid being struck by thunder or other injuries.

◆Please do not put the battery in high-temperature environment (high temperature will lead to heat of the battery upgrading), or else it may result in fire or explosion.

◆Please keep the mobile phone being charged and the charger away from people or other flammable and explosive articles in order to avoid fire, explosion or other dangers!

◆Please strictly adhered to the rules and do shut down the mobile phone on occasions which use of mobile phone is prohibited!

Please do not put the mobile phone, battery and charger in the equipment with strong electromagnetic field, such as induction cooker and microwave oven; otherwise it will lead to circuit failure, fire or explosion.

◆Please do not arbitrarily refit the mobile phone, or teardown the mobile phone and accessories without authorization. Improper refitting or teardown easily triggers fire and explosion of the mobile phone. Only the authorized organizations can repair the mobile phone.

◆Please do not use batteries, charger or accessories of non-standard original models.

◆Please do not join the two poles of the battery, so as not to result in battery short-circuit.

◆If the power wire has been damaged (such as the exposed and fractured), or the connector has been loosened, please don't use it, so as to avoid electric shock, short circuit of the charger or fire.

◆The mobile phone should be powered off in the hospital or other

places where use of mobile phone is prohibited. Mobile phone will affect proper work of electronic equipment and medical devices, such as pacemakers, hearing aids and other medical electronic equipments. Pacemaker manufacturer proposes to keep the distance between the mobile phone and the pacemaker at least 15 cm, in order to avoid potential interference to the pacemaker by the mobile phone.

◆Please do not use the mobile phone when drive a car. In case of emergency, please use hand-free devices (which may be bought separately); otherwise, please park your car on the road side before making a call.

◆Please do not put the mobile phone on car insurance airbag or region reachable by the airbag after spreading. Otherwise when the airbag expands or ruptures, the mobile phone is likely to cause serious damage to the people in the car due to strong external force.

◆Please keep the mobile phone, battery and charger at place out of the reach of children. Please do not let children use the mobile phone, battery and charger in the absence of adults' supervision.

◆In order to comply with provisions of RF leakage, when you wear a mobile phone or use the data functions of the mobile phone, please maintain the distance between the antenna and the body at least 1 inch (2.5 centimeters).

◆Please power off the mobile phone before cleaning and maintenance. If the mobile phone is connected to the charger, you need to unplug the charger from the power outlet, and disconnect the connection between the charger and the mobile phone in order to avoid electric shock, short circuit of battery or charger.

◆Do not use chemical lotion, scrubbing cleanser to wipe the mobile phone or the charger, otherwise it may damage the components or cause fire. Slightly wet and anti-static soft clean cloth can be used.

◆Please do not throw the old and abandoned lithium batteries into trash can, send them to the designated locations or return them to

our company.

◆ Please do not charge the mobile phone in environment with much dust, humidity, too high, or too low temperature (the permitted charging temperature range is 0°C~ 40°C), and the power wire cannot be nearby the heating containers.

◆ Please do not use the phone to make bold to camera, video and recording that may infract the rights of the copyright owners.

The company will not be responsible for any losses caused by not recording, deleting, destructing or damage of the photos, video and recordings caused by its accessories or software on the use of the functions including camera, video and audio.

◆ In the use of network function, if the users download a file with virus, which make the mobile phone cannot be used normally; the company does not undertake any responsibility arising therefore.

Warning: The original manufacturer will not take on any responsibility for the users who are not in compliance with the above advices or improperly use the mobile phone.

Note: The application of value-added services of the mobile phone is provided by relevant service providers. Please refer to the relevant help or providers' notes for detailed information.

Statement: The Company reserves the right to improve the product without making any advance notice, and keeps final interpreting rights on the product performance. The company commits to improve the product quality and gradually launches new versions of products. So if the contents stated in the manual are slightly different from the function, specification or design, please refer to the mobile phone. Such changes are not notified additionally, your understanding is appreciated.

 
1 Start Using

1.1 Battery

The battery is attached with the mobile phone. The battery is not charged when the mobile phone is purchased but can support powering on. Please recharge it for use after complete using up the battery for the first three times, which makes this battery easier to achieve the best using state.

1.1.1 Uninstallation and installation of battery

■ Put the back of the mobile phone upward; release the bolts first then take off the rear cover according to the chat below.

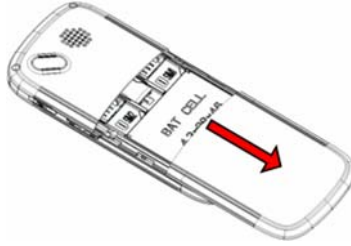

■ Dig out the bottom of the battery and get the battery out.



■ When installing the battery, insert the metal teeth at the top of the

battery into corresponding slot of the mobile phone, and then press the battery down to install the battery in place. The battery must be ensured to be installed before powering on.

■ Finally install the rear cover and fix the bolts of the mobile phone.

1.1.2 Charging the battery

When the power of the battery was lower than normal, the phone will prompt battery low. Please charge for the battery, otherwise you will lose the files which not saved. If you don't charge for a long time, the phone will be powered off automatically.

When charging, the battery icon at the right upper corner of the screen will appear in a dynamic rolling manner. During the charging period, the battery, mobile phone and charger will become hot, which is a normal phenomenon.

Warning:

The stated charging temperature ranges from 0°C to 40°C. Please do not use charging equipment if the temperature exceeds the range. Please do use the charger provided by the supplier. Application of unauthorized charger may trigger danger and breach the mobile phone maintenance warranty.

 
1.1.3 Use of battery

In actual use, the standby time and talk time of the mobile phone varies with the network status, working environment and different using manners.

1.2 Side sliding keypad

Your mobile is assembled with a side sliding keypad. In order to open side keypad, you could slide the touch screen forward. When the side sliding keypad is open, the screen will enter into horizontal from vertical.

Fn key: The key is used for inputting the special character impressed on the right upper side of one key. Short press the key once, and press the key with special character impressed on the right upper side, the special character will be typed in once. For

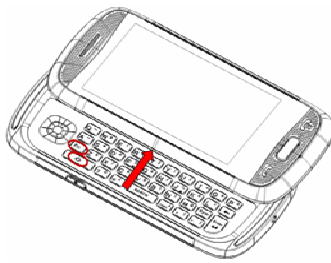

inputting special characters continuously, please press **Fn** key twice. Press **Fn** key then to go back to normal inputting mode.

⇧ key: Long press the key to switch between Chinese and English input method; short press the key to switch the detailed input method in Chinese or English mode.

1.3 SIM card

Your network operator will provide you a SIM card which is the key for your access to the digital GSM network. **Prior to use the phone, you need to insert effective SIM card in the mobile phone.**

All relevant information concerning network connection will be recorded in the SIM card. SIM card can be removed from your mobile phone and be used in any other GSM mobile phone (new mobile phone automatically read SIM card).

In order to prevent loss and damage to the information in the card, you should avoid touching the metal area and keep it away from electricity and magnetic places. SIM card once being damaged, you will not be registered to the GSM network.

Warning:

You must power off the mobile phone before removing the SIM card. Inserting or removing the SIM card is absolutely prohibited when the external power supply is connected,

otherwise SIM card and mobile phone may be damaged.

1.3.1 Insertion of SIM card

- Power off the mobile phone, remove the rear cover and battery.
- Insert the SIM card correctly in the card slot; finally install the rear cover and battery of the mobile phone.



1.3.2 Unlock the SIM card

In order to prevent illegal use, SIM card adopts PIN code (personal identification code) encryption protection.

If this function is selected, PIN code should be input correctly each time when you power on the mobile phone, thus to unlock the SIM card for normal use. Users can disarm the SIM card protection but illegal use of the SIM card cannot be prevented.

If the PIN code input is error for three consecutive times, your SIM card will be locked by the network. The mobile phone will enquire the PUK code which will be provided by your network operator. If the PUK code input is wrong for 10 times, the SIM card will be permanently barred.

Note:

Your network operator will set a standard PIN code (4 to 8 numbers) for you and you should change it to private password as soon as possible.

1.4 Plug and unplug the Memory card

- Remove the rear cover and battery.
- Insert the memory card into the slot at the bottom according to the chat below.




















1.5 Plug and unplug the earphone

Open the USB cover and insert the connector of the earphone to the earphone jack at the right side of the mobile phone. Gently pull out the earphone to remove it.

1.6 Status bar and content

In standby screen you can get the information that you need from the indication icons on the screen.

	Indicating the current signal strength of SIM1
	Indicating that the SIM1 is connecting network currently
	Indicating there is text message not read of SIM1 and SIM 2
	Indicating there is MMS sending or downloading of SIM 1
	Indicating there is MMS not read of SIM 1

	Divert all voice calls has been set of SIM1
	Indicating missed call of SIM1 and SIM 2
	The current alert type is ring only
	The current alert type is vib. only
	The current alert type is vib. and ring
	The current alert type is vib. then ring
	Indicating that silent mode activated
	The mobile phone is locked
	Indicating that earphone has been inserted
	Indicating that the Bluetooth has been activated
	Alarm has been set
	Indicating current battery capacity

1.6.1 Keys



Functions of the keys are described as following:

SN	Keys	Function description
1	Send key (Snd)	Making a call; in dual SIM mode, press Snd key to select the SIM card for dialing out; answering a call; in the standby screen press the Snd key to enter the Dialer screen.
2	End key	Hang up a call; go back to the standby screen.
3	Menu key	Short press to enter the main menu screen in standby mode; Active detail menu in other program screen.
4	OK key	OK; enter the selected menu.
5	Navigation keys	Short press to move to the left, right, upwards and downwards.

6	Lock key	Short press to lock the screen; long press to enter camera preview interface.
7	Receiver	Listen to the voice of the other side when calling.
8	USB jack	Connecting USB cable, charger, and earphone.
9	Volume key	Short press in the standby screen to turn up/down the volume.
10	MIC	Please do not cover the MIC hole during calling.
11	Speaker	For activating the speaker, you can listen audio or calls in hands-free mode.
12	Camera lens	For finding a view with the camera.

1.6.2 Text input and edit window

Keypad input instructions


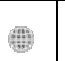
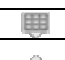
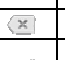




Enter the text input screen, you can choose characters in the virtual keypad or type by hand. The vertical keypad is as the picture below.



During typing, shake the phone to enter horizontal screen mode. The QWERTY keypad is as the picture below.



The meanings of icons are described as below.

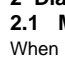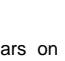	Enter Symbol interface		Switch English/Chinese input method
	Hide the virtual keypad		Delete
	Switch Capital/Lower-case in English mode		Switch to next line
	Hand		Numeric

2 Dial and answer the call

2.1 Making a call

When the network operator's logo appears on the screen, the mobile phone enters into the normal standby state in which you can dial or answer a call. The network signal strength indicator shows at the top of the screen. The call quality is relatively largely impacted by obstacles. Therefore, movement in a small range can effectively improve the signal strength.

2.1.1 Direct dial

Making domestic call

In the standby screen, press **Snd** key or choose "Dialer", enter into Dialer screen. Input the call numbers (please add the area code for domestic long-distance calls). If there are matched contacts, you can choose the contact directly. Then click "SIM1/2 Call" in the downside menu or press the **Snd** key to select SIM1 or SIM2 to make the call. In single SIM mode, click "Call" in the downside menu or press the **Snd** key will call out directly.

Calling extension of fixed number

When calling the extension number of a fixed number, you need to dial the host number and then dial the extension number according to the corresponding voice hints. If you insert "p" between the host number and extension number, the mobile phone will automatically dial the extension number for you.

Note:

In the dial screen, long press “ * ”to input “ P ”; long press “ 0 ”to input “ + ”; long press“ # ” to input “ W ”.

Making an international call

To make an international call, you simply need to input the symbol “+”, then input the country code and complete phone number that you want to dial.

2.1.2 Making a call from the Phonebook list

In the Phonebook list, select corresponding contact person and phone number, press the number directly or press **Menu** key, choose SIM to dial. You could also long press the number in contact detail message interface and then choose “Call” to dial.

2.1.3 Speed dial

In Speed dial, you can separately set number keys **2-9** to set up phone numbers.

On the dial screen, long press the number keys and you can automatically dial the number that has been set up. If speed dial has not been set for the number key you long pressed, the mobile phone will hint you “No speed dial number”.

2.2 Answering a call

2.2.1 Answering new call

If there is a new incoming call when in call progress, the mobile phone will pop up caller screen (call waiting is activated) and the mobile phone will give a short prompt to tell you that you have a new call. At this time, you can press **Snd** key or activate **Answer** to answer the new call. When you answer a new call, the original call will enter holding status. At this time, you can activate **Menu** to select **Swap** to the original call, and the new call will enter holding status.

Note:

When you are in call progress, the new call to another SIM card can't be dialed in.

2.2.2 Connecting two calls at the same time

When two telephone numbers are connected, you can operate as follows:

H-Free: switch the call to loud speaker mode.

DialPad: press to enter Dialpad.

End call: hang up the current call.

Call Conference: when making conference call, you can have a talk separately with designated conference participant.

Swap: switch activated call.

Background sound: enter into call background sound setting interface.

Mute: mute the current call, the other side could not hear what you say.

Sound recorder: record the current call.

Note: enter into Note editing interface.

Phonebook: press to enter Phonebook.

Messages: edit the message to send it.

Call log: enter call history screen.

2.2.3 Conference call

During the conference call, you also can operate as follows:

Hold call: hold the current call with members of the conference, then others cannot hear your voice; and the option of **Hold call** changed to **Retrieve call**, select it and you can recover normal conference call.

Split: separate the selected member from the conference call.

2.3 Emergency call

In any country using the digital GSM network, if you are in the network coverage area (you can check the network signal strength at the top of mobile phone screen), even without the SIM card, you are also able to make an emergency call.

Inputting the PIN code or unlock the phone unlocking screen, press **SOS** and you can make an emergency call.

Note:

The emergency call numbers in different countries or regions are different. Please refer to the local numbers for specific emergency service numbers.

3 Menu operation

The function menu is composed of main menu and free-style menu two modules. The phone will enter free-style menu automatically.

Press **Menu** key, enter into main menu. In each interface, you can scroll the screen to the right/left side to switch pages.

Main menu	Phonebook
	Call log
	Dialer
	Profiles
	File manager
	Message
	Email
	Setting
	Image viewer
	Camera
	Calendar
	Alarm
	Media player
	Video recorder
	Notes
	FM radio
	Sound recorder
	Calculator
	Ebook reader
	STK
Synchronization	

	Phone sync
	WAP
	Java
	Task
	Currency converter
	Typical stopwatch
	Unit converter
	World clock
	MSN
	Yahoo
	FaceBook
	Twitter

4 Characteristic function

4.1 Switch pages

In the standby mode or main menu interface, scroll the screen to the right or the left to switch pages.

Notes:

If current page is the first page, user can not scroll the page to the right any more; if current page the last page, user can not scroll the page to the left any more.

In the standby mode, long press the horizontal line field, choose numbers from to in the pop-up interface to switch to the page you want to enter (Picture 1).




Picture1

4.2 Free-style menu

In the standby mode, long press the horizontal line field, the mobile will pop up a choosing interface, which shows Add on the **LSK**, and Wallpaper settings on the **RSK**. Add Widgets(Picture 2) or Shortcut(Picture 3) through **LSK**, or finish wallpaper settings through **RSK**.



 Picture2

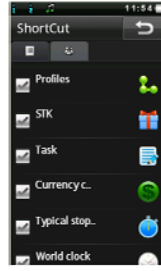

Picture3

In the standby mode, long press the widgets or shortcuts icons till a garbage can displays beside it, and the icon start to rotate, then you

could press the garbage can to delete the icon or you can drag the rotating icon to the place you want to settle it to.

4.3 Change main menu icons' position

In the main menu interface, long press any program icon, the icons of whole screen enter into shaking mode(Picture 4). At that time, drag icons anywhere on the screen, press **Menu** key to quit this mode.



Picture4

4.4 Curtain page

 
In the standby mode, press the status bar on the upper side of the screen until a gray bar displays below the status bar. Drag the gray bar down to open curtain interface(Picture 5).

The curtain page displays operator name, WLAN status, Bluetooth status, unread message and missed calls.

5 Phone

5.1 Phonebook

Enter the phonebook screen, input the first letter of name, you can search the accordant records in Phonebook. Press **Add new contact** to add the contact. When the record is not empty, press

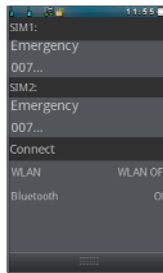

Picture5

Menu key to conduct the following operations:

Mark several: you can send message, delete, copy, move or export operation for the marked contact.

Delete duplicated contact: delete duplicated contacts on SIM1/2, phone or memory.

Import contacts: import the stored contact that of .vcf format to phone, SIM1/SIM2 or memory.

Caller group: enter into caller group setting interface.

Black list: enter into black list editing interface.

Options: you can set preferred storage, speed dial, also can view my vCard, extra numbers and memory status.

If you have chosen a contact, long press it, and you can operate as follows:

Call: call directly the current contact.

Send message: send message to the current contact.

Send vCard: send the information of current contact as vCard mode.

Edit: edit the current contact.

Delete: delete the information of the current contact person.

Move: move current contact to phone, SIM1/SIM2 or memory.

Click a contact to enter into the contact detail interface. Press **Menu** key, there are options as below: Edit, Call, Send message, Copy, Delete, Add to Call in Blacklist.

5.2 Call log

Enter SIM1/SIM2 call history, there displays the records of dialed calls. You can click the title to switch to other sheet, such as all calls, received calls and missed calls.

In every detailed call log, press **Menu** key, you can operate as follow: call, send text message, save to phonebook, add to call blacklist, edit before call, delete.

5.3 Dialer

Enter into Dialer, you will see the dial pad in the lower side of screen. If there are call logs saved in the phone, the logs will show in the upper side. User could type in numbers to dial out directly or dial according to the call log or contact that was matched with the inputting material.

5.4 Profiles

User Profiles are a group of preset characteristic definition. You can also change and save other definitions in the profiles according to your own preferences. The phone provides a set of default profiles including the General, Meeting, Outdoor, Indoor, Silent, Headset and Bluetooth. Only when the earphone is inserted the headset profile can be automatically activated, while all other profiles will be automatically disabled.

After selecting the other profiles except the headset and bluetooth Short press the profile, then the working styles of the mobile phone are set according to the selected profile.

Long press the profile, and choose **Customize** to enter the customize settings; you can set the parameters under different profile such as tone setup, volume, alert type, ring type extra tone and answer mode.

5.5 File manager

Enter into file manager, then the screen shows phone and memory card (memory card is inserted in the phone). At the top of the screen, the capacity and surplus capacity of the phone or memory card are displayed. The following operations are available:

Open: enter the files list under the root directory.

Format: format the phone/memory card, which will delete all the data stored in the current phone/memory card.

Rename: rename the memory card. This menu only displays in the options when select the memory card.

Details: shows the name, total size, and free size information of the memory card. This menu only displays in the options when select the memory card.

5.6 Message

Enter message, you can view the received messages including SMS and MMS. There are four buttons in the bottom of the screen. you can press **New msg** button at the bottom of the screen to create a new message, you also can switch to MMS in message editing screen by use the menu prompted by pressing **Menu** key. In messages screen, the following operations are available:

New msg: create a new message, in message editing screen, press **Menu** key, you can choose Send by SIM1, Send by SIM2, Add recipient, Insert, Switch to MMS, Slide options, Details, Save.

Mark several: mark sever messages to backup or delete marked. MMS can't be backup.

Schedule SMS: you can edit a schedule message in advance. The message will be sent out automatically at the schedule time you set.

Setting: you can set the correlative parameter of text message and multimedia message, or view the current SMS/MMS templates.

Note:

Please set correct network connections in server profile before setup and send MMS. Here, insure your SIM card support

GPRS connection, and turned on the MMS. Please consult with your network service provider.

5.7 Email

Enter Email, you can conduct the following operations:

Send and receive: send and receive the mail of current account.

Write Email: edit a new mail.

Inbox: store the received mails.

Outbox: store the mails that are not successfully sent out.

Sent: store the sent mails.

Drafts: store the current saved mails.

Clear mailbox: you can delete all the mails in selected mailbox.

Delete marked Emails: delete all marked mails.

Email accounts: set up the Email account according to the information provided by mail service provider.

Templates: store the current templates of the phone.

Note:

Please set corresponding mode in Email profile before edit

Email and insure your SIM card support GPRS connection.

Please consult with your network service provider.

5.8 Setting

5.8.1 Time and date

Modify the current city, time, date and the format.

5.8.2 Language & Input method

Language: you can set the language of the mobile phone.

Pref. input methods: there are multiplicities input methods to be selected. You can choose one as the default original input method for text editing.

5.8.3 Personalized settings

Wallpaper: set wallpaper from system or memory.

Screen saver: set screen saver picture from system or memory and screen saver time.

Show owner number: show owner number of current SIM card.

Screen switch effect: set screen switch effect on or off.

Show operator name: show operator name.

Greeting text: set greeting text status and the greeting text content.

Touch screen with vibration: set the vibration effect on or off when touching screen.

Screen rotate follow sensor: set whether screen rotates according to the rotating status of mobile phone.

Schedule power on/off: after setting and activating this function, the mobile phone will be automatically powered on/off at the corresponding setting time.

5.8.4 LCD backlight

You can set the Brightness and Time of the LCD backlight respectively.

5.8.5 Call settings

5.8.5.1 SIM1/SIM2 call settings

Caller ID: you can set whether to allow your phone number being displayed or not through select set by network, hide ID or send ID. This function needs to be supported by the network service provider. Please get in touch with the related network service provider to open the relevant service.

Call waiting: you can activate/deactivate the function and also can query the status of call waiting. After the function being activated, if you have a new incoming call while in calling process, your mobile phone will display the new call screen, and the call can be received normally. If the function is deactivated, new incoming calls cannot be displayed.

Call divert: this function is used to transfer the call to your designated phone. The success of call divert setting is related with the network and SIM card. The system will give appropriate setting tips.

Note:

If the transfer call you set is a fixed phone, please add the area code before the fixed phone.

Call barring: this function needs network support. Please contact your network provider to open this business. Network provider will provide the corresponding network password for you activate call barring service.

Line switching: switch the phone current line.

5.8.5.2 More

You can set the function such as black list, auto redial, background sound, call time display, call time reminder, auto quick end, reject by SMS and so on.

5.8.6 Network setup

5.8.6.1 SIM1/2 network setup

In SIM1/SIM2 network settings, you can select appropriate network.

Note:

Please do not register networks inconsistent with the SIM card, so as to prevent unavailability of normal use. For details, please consult your service provider.

Network selection: search new network according to the network searching mode or select the network you need from the network list.

Preferences: select and set the preferences of network.

5.8.6.2 Preferred mode

GSM only: support GSM network only.

WLAN only: support WLAN network only.

GSM preferred: prefer using GSM network.

WLAN preferred: prefer using WLAN network.

5.8.7 Security setup

5.8.7.1 SIM1/SIM2 security settings

SIM1/SIM2 lock: this function can prevent others from using your SIM card without your permission. After the SIM card PIN code is activated, correct PIN code must be input every time when the mobile phone is powered on; otherwise you can only make emergency call.

Note:

PIN code is the operating password and relative with the SIM card. The SIM card will be locked, if the PIN code is wrong for 3 consecutive times. At this time, you need the PUK code to unlock the SIM card. The PUK code may be provided for you together with the PIN code and the SIM card. If not, please contact your network provider.

Fixed dial: after the function is activated, the mobile phone is only allowed to be used to dial the telephone numbers existing in the list. To turn on the function, you need to input your PIN2 code. Please consult your network service provider for specific situations.

Note:

When the Fixed dial function is active, the function of SIM card will be restricted, such as dial call, send SMS, and send MMS and so on.

Barred dial: this function needs to be supported by SIM card. Please consult your network service provider for specific situations.

Change password: you can change the password of SIM1/SIM2 PIN and SIM1/SIM2 PIN2 through the system prompts.

5.8.7.2 Phone lock

This function is to lock the phone and prevent other people from using the mobile phone without permission (default password is 0000). After enable the phone lock, you must input the correct password every time powering on the mobile phone, unless the mobile phone cannot be used normally.

5.8.7.3 Auto keypad lock

After this function is activated, when the phone is in standby status, the keypad will be locked automatically after the set time. Then the standby screen will show two small lock icons, sliding lock icon above to the lock icon below, the phone will unlock.

5.8.7.4 Change password

You can change the phone lock through the system prompts.

5.8.7.5 Certificate manager

You can view the certificates in Certificate manager.

5.8.7.6 Mobile tracker

Enter the function, the password inputting screen displays. After you input the correct password (default password is 0000), and enter the phone guard menu list, you can set the status and receiving number of phone guard.

The function is activated and receiving number is set, when your phone is inserted with another SIM card. The receiving number can receive the current prompt message.

5.8.7.7 Remote control

Enter into the password inputting screen, you can enter the security control menu list if you input the correct password (default password is 0000).

When the function is open, there will remind the command identifier, you can set the private command identifier, but it should contain Capital and Lowercase, Numbers and Symbols, and should not less than 8 characters.

If this function is set, you can send editing order in form of SMS to the phone that you lost with another phone and the lost one will perform automatically the instruction, thus reaching effect of remote control.

The order format of the security control is:

Command identifier+order(+phone number)

Use security control order can achieve the function below:

Function	Content of order (e.g. Command identifier is "123@!abC"; Receiving number is "13987654321")
Call divert	123@!abCcall divert to13987654321
Phonebook divert	123@!abCphonebook divert to13987654321
SMS divert	123@!abCsms divert to13987654321
Cancel SMS divert	123@!abCcancel sms divert

Lock	123@!abClock
Format	123@!abCformat
Power off	123@!abCpower off

5.8.7.8 Privacy Security

Entering Privacy Security and the password inputting screen appears, you can enter the security control menu list if you input the correct password (default password is 0000). Then you can select Phonebook, Messages, Call log, File manager to setup the privacy protection. For example: If you have setup the privacy protection operation of Phonebook, when you enter the Phonebook, the password inputting screen appears. You should input the correct password for entering the Phonebook and do the corresponding operation.

5.8.8 Wireless connect

5.8.8.1 Connection management

Connection management interface shows the current connection status of the mobile, including the network type and speed.

5.8.8.2 Data account

GSM Data: enter into GSM Data, you can add account for GSM data.

GPRS: enter into GPRS, you can add account for GPRS.

Bluetooth

In connectivity, you can find the connectivity mode of Bluetooth. Enter into Bluetooth menu list screen, you can operate as follows:

Power on: turn on/off the Bluetooth function. When Bluetooth function is turned off, all Bluetooth connection are ended, you can transmit and receive data by using Bluetooth. Please turn off the Bluetooth function when your phone is used for other operations, because Bluetooth connection will consume the battery capacity.

Close Visibility: set on/off visibility of Bluetooth.

My device: enter into my device, if has not connected with other device, you can select **Search new device** to search and compare

with the mobile phone, else the records of Bluetooth devices which has connected with this handset are shown on the screen.

Inquiry audio device: system will automatically search the hands-free device, and then shows the results after searching.

Change device name: you can change the phone name.

Advanced: you can view my address, set the audio path, storage, sharing permission and remote control.

Note:

The received file that transmitted by bluetooth are stored in Received folder automatically.

5.8.9 Phone mode settings

Dual SIM switch: You can set the power on SIM status as select with SIM status or use default mode.

Dual SIM settings: In this function you can select the reception mode for your phone, such as: Dual SIM active, Only SIM1 open, Only SIM2 open, Flight mode.

5.8.10 Misc. settings

Pen calibration: click the screen according to the hints to calibrate the touch-screen.

UART setup: set default UART com port.

Sound effects: you can set the audio effect for your phone.

5.8.11 Restore factory settings

Enter into the restore factory settings, the mobile phone will prompt you to input password (default password is 0000). You can carry on corresponding operation after inputting the correct password.

After running the Restore factory settings, the environment setup (e.g. user profile) restore to factory default setting.

After running the Restore settings and data, the phone clear up the messages saved in phone while the environment setup (e.g. contact person and SMS that saved in phone) restore to factory default setting.

5.9 Image viewer

Enter the pictures list screen, long press a picture and activate **Options**, then the following operations are available:

Delete: delete the current picture.

Details: view the current picture detailed information.

Rename: rename the current picture.

Edit: freely cut out the current picture size

Send: send the current picture in forms to MMS, email, Bluetooth.

Use: use the current picture as wallpaper, screen saver or caller picture.

In the picture list screen, press **Menu** key, you can operate as follows:

Select director: set the path of folder to display.

Mark several: mark several pictures to delete or copy.

Camera: enter camera preview interface.

Slide show: you can view the whole pictures by playing automatically according to the settings.

Settings: set the parameters of slide show.















5.10 Camera

In standby mode, press **Cam** key or choose Camera in main menu, you will enter into camera preview interface.

Note:

Camera preview interface shows in horizontal screen; stay in camera preview interface for several seconds, mobile will quit Camera for protecting lens; scene and light may affect the picture's size.



	Enter into settings menu to set all the related parameters		Switch between day mode and night mode
	Exposure compensate		Switch to video recorder
	Set delay timer		Switch between sub camera and main camera
	change the focal distance		Press to take photos
	resolution ratio		Enter into Image viewer
	Change white balance effect		Send pictures
	Continuously taking photos		Delete pictures

5.11 Calendar

Enter calendar screen, the current month calendar is displayed and the current date has a frame around the number with special color. Press **Menu** key, and you can operate as follows:

Add event: you can choose one type and add a new calendar.

Today: If the current date isn't today, date will jump to today

View all: you can view the entire calendar. You also can add a new calendar or edit, delete and send the selected calendar.

Jump to date: input the date need to be switched (in a valid period of time) , there will display the inputted date.

Weekly view (Go to monthly view): Set the display mode of calendar as weekly view chart/monthly view chart.

5.12 Alarm

There are 5 alarms in your mobile phone. The functions and using methods of the 5 alarms are completely same. You can set to turn on/off respectively.

Set alarm

Select an alarm, enter the settings screen of this alarm, you can turn on/off this alarm, and set the time of the alarm, at the same time, you can set this alarm in detail.

Alarm remind

When the alarming time comes, there is alarm hint in handset (according to alarm settings).

If the mobile phone is in power off state, after the time of alarm sound come, pop up the power on confirmation screen, here, you can select power on or not.

Pay attention to that the alarm still sounds according to the former setting time after you adjust the date and time. You can reset the date and time of next alarm according to the changed date and time.

5.13 Media player

Enter the media player screen; activate **Options**, then you can operate as follows:

All audio file: enter into audio file library.

All video file: enter into video file library.

Update list: update media library according to update settings.

Current playlist: view the current media list.

Media library: there are many sorts for media; you can select **All media files** to update all the media file to playlist, you also can select add to update the media file in appointed folder.



My playlists: you can view the media that recently played or most played, you also can view the media that have been adding to my favorites.















Settings: set the parameters for player settings, audio settings, video settings, Bluetooth settings, network settings, update setting.

5.14 Video recorder

Enter into video recorder, rotate the mobile horizontal mode.



	Enter into settings to set related parameters		Switch to camera function
---	---	---	---------------------------

	Exposure compensate		Switch between sub camera and main camera
	change the focal distance		Press the key to start
	Set the effect of white balance		Start media player
	Set video quality		Indicate video is recording
	Set white balance effect		Pause video recordings
	Switch between day mode and night mode		Stop video recordings
	Quit video recorder		Send video

5.15 Notes

Enter Notes, press **Menu** key to create New note. User could View, Edit, and Delete each note.

5.16 FM radio

Enter into standard screen and conduct operations as follows:

Channel list: display all the channels existed in the list.

Auto search: automatically search channels and update the current channel list.

Play: turn on/off FM radio.

Record: you can record the current playing content of the radio.

You can press **Menu** key, activate options below:

Settings: set the correlative parameter of FM radio.

Append: used for storing the recorded file while listen to the FM radio.

File list: list the audio file that recorded and stored.

Schedule FM record: activate the function, the phone turn on automatically FM radio and record current program when time out.

5.17 Sound recorder

When the recorder list is not empty, select one of the recording files and long press it to activate options, you can conduct the following operations:

Play: play the current selected recording file.

List: list the entire recorder file.

New record: start a new recording.

Settings: you can set the preferred storage location, file format, audio quality of the recording file.

You can also press menu key, popup options below:

Append: continue to add record on the previously selected recorder file.

Rename: rename of the current recording file.

Delete: delete the current selected recording file.

Use: use the current selected recording as ring tone or SMS tone.

Send: send current selected recording file.

5.18 Calculator

The calculator performs four operations as addition, subtraction, multiplication and division. Enter calculator screen, you can input numbers directly and press navigation key to switch the operation which you need, then start calculation.

When the calculation of dividing 0 overflows, the result is larger than 999999999999 or less than -999999999999, the mobile phone will display the wrong hint "E".

5.19 Ebook reader

This function can be used for read the files which are stored in the phone or memory card (confirm the memory card is inserted).

Enter the screen of Ebook file list, activate **Menu** and you can conduct the following operations.

Clean up bookshelf: rearrange the files in the folder.

Global settings: set the font style, font size, scroll by, auto scroll,

scroll speed, full screen, Encoding, Alignment, View mode and select storage for reading of Ebook.

Book info: display the content of Ebook such as title, size, and format.

Delete: delete the selected file.

Delete all files: delete all files displayed in Ebook menu.

Sort by: arrange all files in sequence which is displayed in Ebook.

Apply global settings: renew the relative settings of Ebook.

You can also long press a file, popup options below:

Open ebook: read the current selected file.

Delete: delete the current file.

Book info: display the content of Ebook such as title, size and format.

5.20 STK

This function is provided by the network operator. According to the services provided by the SIM card, there will be different options appearing in this directory. The name and content of the menu are based entirely on the services provided by the network operator. For more information, please contact with the network operator.

Note:

This function depends on whether the network operator provides this service and whether you have ordered this service.

5.21 Synchronization

Entering into Synchronization, there are 3 accounts to choose.

Enter one account, you can see 3 options as below:

Sync now: start to sync according to current account.

Edit account: edit current account's parameters, such as Account name, Transport type, Server settings, Applications to sync, Database settings, Connection settings, Regular sync, Sync report.

Sync log: show sync logs in this menu.

5.22 Phone sync

Sync: choose a connected Bluetooth device and start to sync.

Applications to sync: choose applications to sync, such as phonebook.

Phones: shows phones that have been synchronized successfully.

5.23 WAP

Enter WAP there displays the following options:

Homepage: you can access the preset website directly.

Bookmarks: bookmark is used to save the websites that you are interested.

Recent Pages: look over the recent history that browsed.

Offline pages: look over the pages that saved as offline pages.

Input address: enter the website editing screen.

Service inbox: stored the service message.

Settings: enter the Settings menu list and the following operations are available:

Select profile: select the browser mode for WAP browser.

Edit account: you can edit and activate the selected account for the SIM card. You can surf on the internet only when you set and activate correctly according to local network.

Browser options: set relevant parameter of browser.

Service message settings: turn on/off receiving service message.

Clear cache: the messages that you have visited will be stored in the cache of the mobile phone. Select the operation to erase the temporary message in the cache. Please erase the temporary files recording your internet surfing message.

Clear cookies: remove the browsed website message stored in the cache of the mobile phone.

Trusted certificates: view the trusted certificates.

5.24 Java

You can install java file and play in the application, you also can edit the settings for java.

5.25 Task

In this function, you can create Date, Call, Anniversary task. Set the

task time, priority and details, when the task time arrives, the task will alarm to remind user.

5.26 Currency converter

In this function, if you input the rate and the amount of money in local, you can get the result of the equivalence money of foreign.

5.27 Typical stopwatch

In typical stopwatch screen, you can select the split timing or lap timing and view records that you have saved.

5.28 Unit converter

Enter into Unit Converter you can select **Weight** or **Length** to converter.

In converter screen, select the unit then input the relative data, press **OK** in the right upper corner, the result will be displayed automatically.

5.29 World clock

Enter world clock screen, active **Menu**, you can select the city by press **OK** key.

5.30 MSN

Enter MSN; you can conduct the following operations:

Start: you can input username and password to sign in.

Settings: you can do the operations of data account and card choices.

Update: update the version to the latest.

About: display after-sales service information.

5.31 Yahoo

Enter Yahoo; you can conduct the following operations:

Start: you can input username and password to sign in.

Settings: you can do the operations of data account and card choices.

Update: update the version to the latest.

About: display after-sales service information.

5.32 FaceBook

Enter FaceBook; you can conduct the following operations:

Start: you can input username and password to sign in.

Settings: you can do the operations of data account and card choices.

Update: update the version to the latest.

About: display after-sales service information.

5.33 Twitter

Enter Twitter; you can conduct the following operations:

Start: you can input username and password to sign in.

Settings: you can do the operations of data account and card choices.

Update: update the version to the latest.

About: display after-sales service information.

6 Other Functions

6.1 Mass Storage Function

The mobile phone supports Mass Storage function. Insert the Memory Card in the mobile phone; connect the mobile phone and PC with the attached USB cable, then the mobile phone becomes a mass storage. If you connect USB cable to PC under the power on status, according to tips you can select **Mass Storage** to enable USB mass storage function or select **Back** to maintain the power on status, and charge the mobile phone.

6.2 Webcam Function

In power on status, connect the phone to PC through USB cable and select **Webcam**, the Webcam function is activated, you can do the video chat with other person.

Requirements on PC configuration for use of webcam function:

1. The PC's operation system is or newer than Windows XP SP2.
2. The tools for video chat need to be installed.
3. Internet network connection is smooth.

Other descriptions:

1. This function supports plug-and-play function.
2. The actual refresh rate of video chat is related with Internet network speed, instead of the reasons of the mobile phone.

6.3 COM port

In power on status, connect the phone to PC through USB cable and select **COM port**; you can synchronize your phone with PC. Details about the related tools, please consult with [Customer Service Center](#).

7 Common Questions

The mobile phone cannot be powered on

- The mobile phone cannot be powered on since the battery voltage is too low. Please recharge the battery.

Unable to make some calls

- Call barring has been set and barred utilization of the mobile phone. Please check and cancel call barring.

Other person is answering my call

- The mobile phone has been set into divert your calls to another phone number. Please check and cancel call divert.

The mobile phone cannot search for the network

- The mobile phone is outside of the network coverage area (or there are physical obstructions between the mobile phone and the transmitter), and calls cannot be made or answered. If you are in one room, please move close to the window.

In the operation process, the mobile phone may display the following operating tips:

"Please Insert SIM"

- You must insert the SIM card before using the mobile phone. If the SIM card has been inserted, please get it out and wipe clean with a dry cloth on the golden region, and then insert the SIM card.

"Emergency"

■ You are outside the network coverage area of the service provider. But another network area where you locate allows you to make emergency call according to the signal strength.

“Invalid SIM”

■ The SIM card of the mobile phone is locked and the inserted SIM card is unable to be accepted. Please insert the correct SIM card or contact with the vendor.

“Please Enter PUK”

■ The SIM card has been locked since the wrong PIN code has been inputted for three times. You must consult your network provider for special PUK code with eight numbers to unlock the SIM card (The PUK code may have been provided with your PIN code at the same time).

Warning:

The SIM card will be permanently locked if you input the wrong PUK code for ten consecutive times and you must apply for a new SIM card from your network provider.

10 Maintenance Guideline

Welcome to use i725. If there is a problem when you using the mobile phone, please contact with the vender or consult the local maintenance center. If your mobile phone is in need of repair, you can take your mobile phone to local maintenance center, if there is no local maintenance center, please pass your phone and the purchasing invoice to the vendor.

Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may

not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg.