


Spare parts list

WALL 3250 – WALL 3350 – WALL 3450

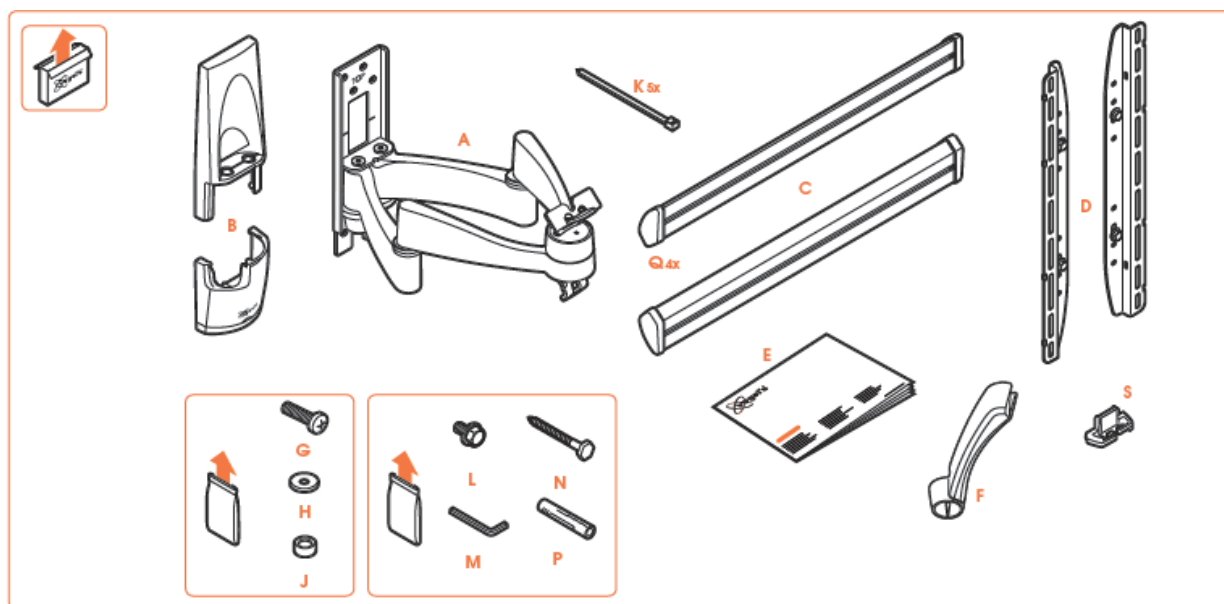

NB Please be aware that only the below listed part numbers are available as spare part.

Part name	Part nr	Letter in exploded view
Screen mounting kit C (=D)	371001	Bag with G, H, J
Wall mounting kit	391015	Bag with L, M, N, P
Tie-raps	885000	K
Wall plate cable guide	886057	S
Cable cover WALL 3250	392039	F
Cable cover WALL 3350-2450	392040	F
Bar cover (2 pieces) WALL 3250-2350-2450	392037+ 392038	Q
Upper wall plate cover WALL 3250	392044	B
Lower wall plate cover WALL 3250	392041	B
Upper wall plate cover WALL 3350	392045	B
Lower wall plate cover WALL 3350	392042	B
Upper wall plate cover WALL 3450	392046	B
Lower wall plate cover WALL 3450	392043	B
Single carton WALL 3250	394071	-
Single carton WALL 3350	394072	-
Single carton WALL 3450	394073	-
TV Mount Guide app card	PX53200	-