



Agapao Tablet Instructions

Upon receiving this tablet, we recommend that you charge the tablet and run the Updates application.

Please see the *Charging Tablet* and *Updating Tablet* portions of this manual for further instruction.

Specifications:

- Power button: Circle in bottom right corner
- Speaker: Cross in bottom left corner
- Touch screen


Display and On Screen Control Buttons

Top of screen

- Battery icon: displays the percentage of battery life remaining.
- Time

Bottom of screen

 - Back button: Tap the triangle to go back a screen.
- Home: Tap the circle in the middle of the screen to return to Agapao Home Screen.
- Open apps: Tap the square to view all open applications.
- Quick Settings Menu: Tap the three dots icon to access Quick Settings Menu.

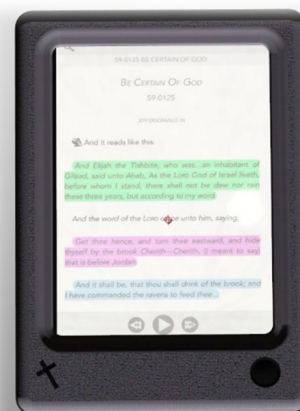

Quick Settings Menu

Features

- The Quick Settings icon appears on the Agapao Tablet Home Screen (or by tapping the shortcut on the bottom right).
- It shows what percentage your battery has remaining.
- Brightness: Change your brightness by swiping the scroll bar. The lower your brightness is, the longer your battery will last. Notice as you swipe, the small battery above changes from green, to yellow, to red. When the battery appears green, the charge will last a while, yellow a little less, with red, the battery life is short.
- Volume: Swipe to turn volume up or down.
- Rotate Display: Tapping either portrait or landscape changes the screen orientation.
- Wi-Fi: Turn Wi-Fi on and off by tapping.
- Sound: Tap the sound button to mute/unmute the volume.
- Languages: This button allows you to quickly access and change the language of the tablet to any of the available languages. All your icons and menu options will change to the language selected. Tap it to see a list of all available languages then tap to select the desired language.
- Settings: Tap to connect to Wi-Fi network.
- Power Off: Tapping this button powers off the tablet.

Accessories

- 12V adapter charging cord
- Cleaning cloth
- Accessory bag for charging cord and cleaning cloth
- Protective case with magnetic closures

Powering the tablet on/off

Power on

To power on the tablet, simply press the circle button at the bottom of the tablet.

Power off Options

To power off the tablet there are two options.

- Go to the quick settings menu and tap the power off button.
- Hold down the power button until tablet turns off.

Sleep

- Simply tapping the power button puts the tablet to sleep. (Tap again to wake.)

NOTE:

 
- Putting the tablet to sleep when not in use will help preserve battery life.
- While in The Table application, if you are listening only and not using Read-Along or Subtitle modes, you may put the tablet to sleep to save battery life.

Charging Tablet

The Agapao tablet charges with a 12V adapter. A USB adapter will not work with this tablet. This allows the tablet to charge in about an hour if the tablet is off. You can connect the tablet to a charger while you are using it, but it will take longer to charge.

Fast Charging

- If the tablet is turned on, turn the tablet off by Tapping the power off button in the Quick Settings.
- The charging port is located at the bottom of the tablet behind a protective door, which you can slide to open. Slide the door far enough to reveal the charging port. (It is the opening closest to the power button, and next to the headphone jack, which is to the left.)

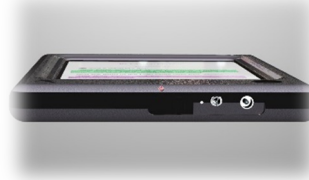

- Make sure the cord going from the power source to power-adapter is securely fastened, and that the adapter is plugged into the tablet.
- Leave tablet connected to the charger for about an hour.
- Power on the tablet.
- Check the battery level in the top right corner of the screen.
- Once the tablet is finished charging, disconnect the power cord and slide the door closed to protect the tablet from dirt and other debris getting inside.

NOTE:

- Turning the brightness down will help preserve battery life.
- Putting the tablet to sleep when not in use will help preserve battery life.
- While in The Table application, if you are listening only and not using Read-Along or Subtitle modes, you may put the tablet to sleep to save battery life.

Updating Tablet

To update, please be sure you are connected to Wi-Fi.

- To connect to Wi-Fi, tap the Quick Settings icon on the Agapao Home Screen.
- Select Settings.
- Select Wi-Fi under Wireless and networks.
- Be sure the switch is set to on.
- Choose from available networks.
- Enter password.
- Tap connect.

Once you are connected to Wi-Fi, return to your Agapao Home Screen and tap the Updates icon to open the Updates app.

- Tap the Go button to Check for Updates.
- Wait while the updates install. (If no updates are available, it will simply say “No Updates Available”.)
- Tap the green button to close the Updates app.

Tablet Care

What not to do:

- Do not put the tablet in water.
- Do not leave tablet in the snow.
- Do not leave tablet in direct sunlight.
- Do not leave tablet in the car.
- Do not drop tablet.
- Do not sit on tablet or set heavy objects on it.
- Do not attempt to disassemble the tablet.
- Do not puncture the tablet.
- Do not sit tablet near hot cooking equipment, heat or an open flame.
- Do not put anything other than headphones or audio cables into the headphone jack.
- Do not use anything other than your fingers on the touch screen of the tablet (No sharp objects.)
- Do not store the tablet with metal or sharp objects: change, keys.
- Do not use a charger other than one supplied by VGR, and do not put anything other than the charger plug into the power jack.
- Do not use power cord if damaged.
- If there is a problem with the tablet, do not attempt to fix it yourself. Contact your local VGR distributor.

What to do:

- Be sure to slide the door at the bottom of the tablet closed when the tablet is not charging or headphones are not being used.
- Close the case it came with over the screen to protect from dirt, scratches, etc.
- Use cleaning cloth to clean the screen. (You will want to keep the cleaning cloth in your carrying bag when not in use to avoid getting debris on the cloth. Debris on the cloth could transfer to the tablet screen and cause scratches.)
- Use the lowest brightness possible for longest battery life.
- Unplug tablet during lightning storms.
- Protect power cord from being stepped on, pinched, or any other physical damage.
- Unplug charger after tablet is charged.
- Keep tablet in protective case.
- Put tablet to sleep or power off when not in use to preserve battery.

Playing A Sermon

To play a sermon, tap the Table icon on the Agapao Home Screen.



Sermon Index

Tap the Sermon Index button at the top left of the screen to open.



The Sermon Index is designed to help you find a sermon.

In the first three tabs, you can search by both sermon date and title.

- The first tab sorts by the date the sermon was preached.
- The second tab sorts by the sermon title.
- The third tab sorts by the duration of the sermon. Duration is useful to find a sermon that will play within a certain block of time you have available. (For example: a 90-minute car ride.)

If you would like to skip ahead to a specific year, title, or duration in any of these three tabs, tap the **scroll to** feature above the list of sermons to choose a year, letter, or time.

- The fourth tab allows you to find a sermon based on series.

Examples: The Seven Seals or Holy Ghost.

NOTE: The text to An Exposition Of The Seven Church Ages is included in The Table application, and can be located in the series section (if available).

- The last tab allows you to find a sermon based on the location it was preached.

Once you have located the sermon you would like to play, simply tap to select it from the list. The sermon document will then load. Tap the play button at the bottom of the screen to play.

Tap & Play




Tap & Play enables you to begin playback from nearly anywhere in the Message. This precision greatly improves search functions by allowing you to quickly hear any quote.

 
Here's how:

- In the search menu: type the search words and select your desired result.
- Tap the text segment you wish to hear.
- Tap the play arrow that appears next to that text segment.

NOTE:

- Titles that have Tap & Play available will be marked with the subtitle symbol in the sermon index. 
- This feature does not work with multi-language gapped audio sermons.

Audio Player



If you would like to listen to an English audio sermon, the Table audio player allows you to do so. You will see the Subtitle symbol on the bottom left corner of the audio player. Tapping the icon will display available options. The first option will play English audio with [language] subtitles if available. The second option will play the audio sermon. Once you have chosen this option, tap the play icon to listen.

You may switch to the Subtitle option by choosing "English Audio with Subtitles."

Language Switcher

FRENCH 

A drop down of all available languages will appear at the top of the screen. To switch sermon text to a different language, select the option you would like.

NOTE: To change the system and menu options to a different language, you must use the Languages icon located in the Quick Settings Menu.

FCC ID

To find the FCC ID in the Tablet, touch the *Settings* icon, then touch the *About Tablet* icon. The FCC ID will be found at the bottom of page under FCC ID.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation..

Changes or modifications not expressly approved by Voice of God Recordings could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help"*