



<b>Maintenance Service Operations</b>
---------------------------------------

Service operation		Schedule of services														
		miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140
All 2015 Models	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
	<b>Engine</b>															
Engine oil and filter, replace		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine/Transmission/Timing gear check for leaks <sup>A</sup>			X		X		X		X		X		X		X	
Service Reminder Indicator (SRI), reset		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Fuel lines and fuel filter, check for leakage and damage					X				X				X			
Exhaust system/check for leakage, mounting							X	X	X	X	X	X	X	X	X	X
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engines 26/27/40/49: 4-cylinder, engine 61: 5-cylinder and engines 94/95: 6-cylinder) <sup>B</sup>					X				X				X			
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engine 90: 6-cylinder) <sup>B</sup>				X			X			X			X			X
Spark plugs, replace (engine 61: 5-cylinder, engines 90/94/95: 6-cylinder)								X							X	



# 01 Service and maintenance

01

## Maintenance Service Operations

Service operation		Schedule of services														
All 2015 Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Spark plugs, replace (engines 26/27/40/49: 4-cylinder)							X						X			
Coolant level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine coolant check & adjust antifreeze rating & anti-corrosion agent			X		X		X		X		X		X		X	
Alternator rubber sleeve, replace (engines 90/94/95: 6-cylinder only <sup>C</sup> )																X
Accessory drive belt, belt tensioner & idler pulley, replace (engines 26/27/40/49: 4-cylinder, engines 90/94/95: 6-cylinder) <sup>D</sup>																X
Accessory drive belt, belt tensioner & idler pulley, replace (engine 61: 5-cylinder only) <sup>E</sup>													X			
Timing belt, belt tensioner and idler pulley, replace (engine 61: 5-cylinder only) <sup>E</sup>													X			
Timing belt tensioner & idler pulley, replace (engines 26/27/40/49: 4-cylinder only) <sup>D</sup>																X
<b>Steering, Front and Rear Suspension</b>																



<b>Maintenance Service Operations</b>
---------------------------------------

Service operation		Schedule of services														
		miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140
All 2015 Models	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
	Power steering fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X
Steering/front suspension, check for wear according to: Wheel angles check							X	X	X	X	X	X	X	X	X	X
Rear suspension, check for wear according to: Wheel angles check							X	X	X	X	X	X	X	X	X	X
<b>Transmission, Driveshaft and Differential</b>																
Automatic transmission fluid level, check/adjust <sup>F</sup>						X					X					X
Final drive/bevel gear, visual inspection (AWD models only) <sup>G</sup>			X		X		X		X		X		X		X	
Driveshaft joints, check for wear/play							X		X		X		X		X	
Driveshafts, check rubber boots							X	X	X	X	X	X	X	X	X	X
Propeller shaft, pilot bearing and universal joints, check wear (AWD models only)							X	X	X	X	X	X	X	X	X	X
<b>Controls and Lighting</b>																
Washer fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X



# 01 Service and maintenance

01

## Maintenance Service Operations

Service operation		Schedule of services														
All 2015 Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Check all wiper blades and washers for headlights and windshields for function and signs of wear		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
<b>Body</b>																
Cabin air filter, replace <sup>H</sup>			X		X		X		X		X		X		X	
Clean inside of windshield in front of camera (vehicles with camera for collision warning)		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
<b>Brake System</b>																
Brake fluid level, check & adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake fluid, replace <sup>I</sup>					X				X				X			
Parking brake, check/adjust			X		X		X		X		X		X		X	
Brake pads/discs, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake hoses and lines, check for damage/leaks					X				X				X			
<b>Wheels and Tires</b>																
Wheels and tires, check pressure, wear and condition		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X



## Maintenance Service Operations

Service operation		Schedule of services														
All 2015 Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Tire inflator kit <sup>J</sup>																
Spare tire check for damage, wear, and tire pressure <sup>K</sup>					X				X				X			

Check and replace parts or software, as required by Volvo Cars of North America, LLC, that are covered under the terms of the Volvo New Car Warranty.

A In the event of a leak from the transmission, check the oil level.

B May be necessary to change more frequently when driving in dusty/dirty areas.

C Replace at 150,000 miles/240,000 kilometers or 15 years, whichever comes first.

D Replace at 150,000 miles/240,000 kilometers or 10 years, whichever comes first.

E Replace at 120,000 miles/192,000 kilometers or 10 years, whichever comes first.

F Check automatic transmission fluid level only if an external leak is identified. **Volvo recommends changing transmission fluid every 50,000 miles/80,000 kilometers, only on vehicles used for towing, or when a message appears in the instrument panel text window.**

G Only check the level if there is leakage.

H Recommended to replace at least once a year or more often in heavy traffic or dirty/dusty areas.

I Recommended to replace every 3 years or 40,000 miles (if driven in mountainous areas or humid climates – every one year) at owner's request.

J Check expiration date label every four years for replacement date on vehicles with this equipment.

K Check spare tire pressure every two years or every 40,000 miles/64,000 kilometers.



## Maintenance Service Operations

For information to help you identify the engine in your vehicle and to understand and interpret your vehicle's VIN number, please go to:

United States: [www.volvocars.com/us](http://www.volvocars.com/us)

Canada: [www.volvocars.com/ca](http://www.volvocars.com/ca)