



XC 90  
EXCELLENCE


# VÄLKOMMEN!

This Quick Guide describes the rear seat functions in your Volvo XC90 Excellence. More detailed owner's information is available digitally in the vehicle, in an app and on-line.



## THE VEHICLE'S CENTER DISPLAY

The owner's manual is available in digital form in the center display and can be accessed from Top view.

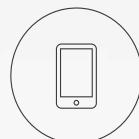

## MOBILE APP

The owner's manual is available as an app (Volvo Manual) for smartphones and tablets. The app also contains instructional films for certain features.



## VOLVO'S SUPPORT SITE

Volvo's support site ([support.volvocars.com](http://support.volvocars.com)) contains manuals and instructional films but also provides additional information regarding owning and operating your Volvo.



## PRINTED INFORMATION

A printed owner's manual supplement is provided in the vehicle's glove compartment, which contains information about fuses, specifications and a summary of other useful information. A printed owner's manual can also be ordered at any time.

An asterisk (\*) indicates optional equipment.

Some of the illustrations shown in this quick guide are generic and are intended as examples only.

## REAR SEAT TOUCH SCREEN CONTROL PANEL

Settings for e.g., heating/cooling drinks and seat functions can be made from the touch screen control panel.

### Folding up the screen

- Press the upper side of the screen to open it automatically.

The screen activates when it has opened and will become dark after a short period if it is not used. Tap the screen or use the multifunction control to reactivate it.

### Folding down the screen

The screen has to be folded down manually:

- Press the upper side of the screen until it folds down into the tunnel console. The screen deactivates automatically when it has been folded down.



## IONIC AIR CLEANER

This feature further enhances the quality of the air in the passenger compartment by using a supplemental function to help remove additional dust, particulates, allergens, etc.

This function is always active when the ignition is in at least mode **I**.



## NAVIGATING IN THE REAR SEAT TOUCH SCREEN CONTROL PANEL

When touched, the screen displays various views. Tap a button on the screen to activate its function or to display the function's view.

### Buttons in the touch screen's Home view



Buttons for setting the left/right rear seat heating.



Button for heating/cooling the cup holder.



Buttons for setting the left/right rear seat ventilation.



Button for adjusting the front passenger seat from the rear seat.

### Returning to Home view from another view

The screen will automatically return to its Home view after a short period if it is not used. After adjusting the front passenger seat, tap the X to return to Home view.



## ADJUSTING THE REAR SEATS

The rear seats can be adjusted in various ways to enhance comfort.

Change backrest tilt by moving this control forward/rearward.

Raise/lower the seat by moving the rear section of the control up/down.

Move the seat forward/rearward by moving the control forward/rearward.

Raise/lower the front edge of the seat cushion by moving the front section of the control up/down.

Multifunction control for changing settings for massage, side bolster firmness, lumbar support and extending/retracting the seat cushion.

Only one movement (up/down/forward/rearward) can be made at a time. Seat adjustment can also be made for a short time after the door has been unlocked, even if the ignition is not switched on and for a short time after the ignition has been switched off.

The power seats have an overload protector that activates if a seat is blocked by any object. If this occurs, remove the object and wait for a short period before operating the seat again.

In order to adjust the seat to a comfortable position, it may be necessary to move it forward slightly.

## USING THE MULTIFUNCTION CONTROL

The multifunction control is used to change the seat's lumbar support, side bolster firmness, the length of the seat cushion and massage settings. These settings are displayed on the rear seat control panel (only one seat setting can be displayed at a time).

1. Fold up the control panel manually.
2. Activate the seat settings by pressing or turning the multifunction control in any direction. The seat settings view will open in the control panel.
3. Select the desired function by tapping the screen or by turning the multifunction control in either direction.
4. Change the setting by pressing the control in the desired direction.

### Massage



Tap the button on the screen or select with the multifunction control to activate the massage function. This function is not available when the ignition is switched off.

The following massage settings are available:



**On/Off**



**Program 1-5:** There are 5 preset massage programs to choose from: **1** (Swell), **2** (Tread), **3** (Advanced), **4** (Lumbar) and **5** (Shoulder).



**Intensity:** Choose between low, normal or high.



**Speed:** Choose between slow, normal and fast.



### Side bolsters



Tap the button on the screen or select the function with the multifunction control to adjust the firmness of the side bolsters.

- Press the front section of the seat button on the multifunction control to increase the side bolsters' firmness.
- Press the rear section of the seat button on the multifunction control to decrease the side bolsters' firmness.



## **Lumbar support**



Tap the button on the screen or select the function with the multifunction control to adjust lumbar support.

- Press the seat button on the multifunction control up/down to move the lumbar support up/down.
- Press the front section of the seat button on the multifunction control to increase lumbar support.
- Press the rear section of the seat button on the multifunction control to decrease lumbar support.

## **Adjusting the length of the seat cushion**



Tap the button on the screen or select the function with the multifunction control to adjust the length of the seat cushion.

- Press the front section of the seat button on the multifunction control to extend the seat cushion.
- Press the rear section of the seat button on the multifunction control to retract the seat cushion.



## ADJUSTING THE FRONT PASSENGER'S SEAT FROM THE REAR SEAT

The front passenger's seat can be moved forward/rearward and its backrest tilt can be changed from the rear seat using the control panel between the seats.

- 1. Tap the button on the screen to activate the function.
- 2. A new view will open for adjusting the front passenger seat's position and backrest tilt.
- 3. Tap the X to return to the screen's Home view.

### Adjusting backrest tilt

- Tap the upper left arrow on the screen to move the backrest forward.
- Tap the upper right arrow on the screen to move the backrest rearward.

### Moving the seat

- Tap the lower left arrow on the screen to move the entire seat forward.
- Tap the lower right arrow on the screen to move the entire seat rearward.



## REAR SEAT HEATING/VENTILATION

The seats can be ventilated for increased comfort in warm weather or to help remove moisture from clothing using the rear seat control panel.

- Tap the left or right **lower** button repeatedly to change the ventilation level to: off, high, medium, or low. The button will display the selected level.

The seats can be heated for increased comfort in cold weather using the rear seat control panel.

- Tap the left or right **upper** button repeatedly to change the heating level to: off, high, medium, or low. The button will display the selected level.



## IPAD HOLDER

The rear sides of the front seat head restraints are equipped with holders for most iPad models. To place an iPad in a holder:

1. Press down the tab and fold it forward toward the head restraint to open the cover.
2. Slide the iPad into the holder and close the cover.

To remove a holder from its mount:

1. Press the button on the underside of the fixed section of the holder.
2. Pull the holder rearward/upward to remove it from its mount.



## TOP TETHER ANCHORS FOR CHILD SEATS

The vehicle is equipped with child restraint top tether anchorages behind the rear seat backrests.

When attaching a child seat, always refer to the child seat manufacturer's instructions for information on securing it properly.

To access a top tether anchor:

- Move the rear seat forward and fold down the backrest.



## FOLDING TABLES

Two folding tables are stowed under the center armrest.

1. Open the cover on the armrest completely.
2. Lift the table out of the armrest to the fully vertical position.
3. Fold the table down over the seat.

Stow the tables in the reverse order.



## COOLER

A cooler is located between the rear seat backrests. It provides space for two bottles and holders for the two crystal glasses provided with the vehicle.

- Press the button above the cooler's hatch to open it.
- There is a temperature control inside the cooler that can be adjusted.

The cooler functions when the motor/engine is running or when the ignition is in mode **II**.



## HEATED/COOLED DRINKS

There are two cup/glass holders located in front of the center armrest and a holder to heat/cool a coffee cup/water bottle, etc.

- Press the cover to access the heating/cooling holder. The heating/cooling function is controlled from the rear center control panel. A blue light indicates that cooling is active; a red light indicates that heating is active.

The heating/cooling function is available when the motor/engine is running or when the ignition is in mode **II**.



- Tap the symbol on the control panel repeatedly to select: off, cooling or heating. The button will display the selected function.

## REAR SEAT USB AND ELECTRICAL SOCKETS

**USB sockets:** There are two USB sockets under the center armrest. There are also USB sockets on the lower sides of the tablet holders on the rear side of the front seat head restraints (see the illustration to the right). These sockets can be used e.g., to charge a cell phone or tablet.

The rear seat USB sockets cannot be used to connect a device to the vehicle's infotainment system.

**Electrical sockets:** There is a 12-volt and a 120-volt socket under the rear seat center armrest.

**120-volt:** This socket is intended for 120-volt devices such as laptops, chargers, etc.

**12-volt:** This socket is intended for 12-volt devices such as mp3 players, cell phones, etc.

The ignition has to be in at least mode I for these sockets to provide electrical current.





## REAR SEAT STORAGE COMPARTMENTS

Holder for a tablet device on the rear side of the front seat head restraint.

Storage compartment under the center rear armrest.

Coin compartment in the doors.

Storage compartments in the door panels.

Storage pockets on the sides of the tunnel console.

Storage pockets on the rear side of the front seat backrests.



## OPENING THE TAILGATE FROM THE INSIDE

This vehicle has a fixed partition between the rear seat and the cargo area.

For this reason, the vehicle is equipped with a fluorescent handle on the inside of the tailgate that can be used in an emergency situation to open the tailgate from the inside.

- Pull the handle to release the tailgate.

After use, the handle must be pushed back into its original position before the tailgate can be closed.

This handle is not intended to be used to anchor the tailgate if long loads are being transported.

## SUPPLEMENTARY TEXTS

The owner's manual and other owner's information contain safety-related instructions and all warnings, cautions and notes, which must be read. Not all functions are available in all markets.

### **WARNINGS**

#### **Rear seat storage compartments**

Always stow loose items such as cell phones, cameras, remote controls, etc., in the glove compartment or other storage spaces to help keep them from becoming projectiles in the event of sudden braking, etc.

#### **Heated/cooled drinks**

Stow bottles, thermoses, glasses, mugs, etc., in the intended holders or in the cooler while the vehicle is moving.

#### **Top tether anchors for child seats**

Volvo recommends that the top tether anchors be used when installing a forward-facing child restraint.

Never route a top tether strap over the top of the head restraint. The strap should be routed beneath the head restraint.

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts or harnesses. The anchorages are not able to withstand excessive forces on them in the event of collision if full harness seat belts or adult seat belts are installed to them. An adult who uses a belt anchored in a child restraint anchorage runs a great risk of suffering severe injuries should a collision occur.

#### **Opening the tailgate from the inside**

Keep vehicle doors and the tailgate locked and keep keys out of a child's reach. Unsupervised children could lock themselves in an open cargo compartment and risk injury. Children should be taught not to play in vehicles.

On hot days, the temperature in the cargo compartment or vehicle interior can rise very quickly. Exposure of people to these high temperatures for even a short period of time can cause heat-related injury or death. Small children are particularly at risk.

is below the freezing point, condensation may form that needs to be dried away. For best drying cleaning, remove the transparent bottle holder.

#### **Rear seat heating**

The heating function switches off automatically after 15 minutes.

### **CAUTIONS**

#### **Navigating in the rear seat touch screen control panel**

Do not use sharp or pointed objects on the screen to help avoid scratching it.

#### **Rear seat ventilation**

The ventilation function cannot be started if the temperature in the passenger compartment is too low.

#### **Fuses**

Never use metal objects or fuses with higher amperage than those stated on the lists of fuses. Doing so could seriously damage or overload the vehicle's electrical system.

If an electrical component fails to function, this may be due to a blown fuse. If the same fuse blows repeatedly, this indicates a problem with the component, which should be inspected by a trained and qualified Volvo service technician.

#### **Electrical sockets**

The 12-volt socket provides maximum current of 120W. The maximum current provided by the 120-volt socket is 150W.

### **NOTES**

#### **Cooler**

In order to function properly, the cooler needs a free flow of air. Leave at least approx. 2 in. (5 cm) of space around the cooler's air intake in the cargo compartment.

The cooler's temperature may need to be adjusted to compensate for the ambient temperature. Use the max. setting to lower the temperature quickly.

Since the temperature at the bottom of the cooler

**V O L V O**