

thermomix

US



 


COOK-key

Cook-Key® safety advice

When using the Cook-Key®, observe the following advice to protect both yourself and the Cook-Key® from harm.

1. The Cook-Key® is not intended for users (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning the use of the Cook-Key® by a person responsible for their safety. Children should be supervised to ensure that they do not play with the Cook-Key®.
2. Never allow liquid to get inside your Cook-Key®, as this could cause electric shocks or short-circuiting.

Technical data Cook-Key®	
Intended use	only for use with Thermomix® TM5
Type	CK-WLAN
Rated voltage	5 V 
Rated current	500 mA
degree of protection against ingress of water	IP45
Safety signs	  0682

3. Protect the Cook-Key® from dust, dampness and steam. Clean the Cook-Key® with a slightly moistened lint-free cloth. Abrasive cleaning products or solvents are unsuitable as they can damage the housing.
4. Do not expose the Cook-Key® to direct sunlight.
5. The Cook-Key® should not be used directly next to a radiator.

6. The Cook-Key® is designed for indoor use only.
7. Never try to open the Cook-Key®. There are no parts that the user can service/repair in the Cook-Key®.
8. The magnets in the Cook-Key® and the Cook-Key® interface may affect pacemakers or internal defibrillators. Keep Cook-Key® and the Cook-Key® interface away from pacemakers or internal defibrillators. Warn people with pacemakers or internal defibrillators.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

NOTICE

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE

Changes or modifications made to this equipment not expressly approved by (manufacturer name) may void the FCC authorization to operate this equipment.

Congratulations as a new Cook-Key® owner!

To ensure you can start cooking right away, we have already pre-loaded your Cook-Key® with the basic cook-book for you with over 180 delicious recipes.

Please complete the following three simple steps to set up your Cook-Key® in order to be able to synchronize your favourite recipes from our Cookidoo™ on your Cook-Key® and use them with your Thermomix®:

1. YOUR ACCOUNT FOR COOKIDOO™

If you don't yet have an account, first register at **www.cookidoo.co.uk** and you will be guided step-by-step through the registration process. If you have already set up an account, add the ID number of your Cook-Key® to your profile. This can be found on the back of

your Cook-Key®. Afterwards, your Cook-Key® is linked to your user profile. For set up information, you can also go to our website, www.cookidoo.co.uk.


If your Cook-Key® is already plugged to your TM5 go to settings/about Thermomix and there you will see the ID number of your Cook-Key®. Then follow the set up steps as described above.

2. CONNECTING YOUR COOK-KEY® WITH YOUR THERMOMIX® TM5

To connect your Cook-Key® to your Thermomix® TM5, attach it to the port at the side of the Thermomix®. It will lock into place as soon as the magnet is sufficiently close. Ensure that your Thermomix® recipe chip is not attached while connecting your Cook-Key®.

When you are connecting your Cook-Key® for the first time, you may need to perform a software update. This update is required in order to be able to use the Cook-Key®.

3. CONNECTING YOUR COOK-KEY® TO THE INTERNET

Your Cook-Key® has to be connected via Wi-Fi to the Internet in order to synchronize recipes from the Cookidoo™. Please have your Wi-Fi network key ready. To do this, press the  symbol to start the setup wizard. Please note the symbol will change from grey to bold when ready. Follow the steps that guide you through the setup process.

SUPPORT

After following the steps above, if you feel you need help. Please visit our homepage **www.cook-key.co.uk/support** and we will help you setting up or using your Cook-Key®.

Copyright © 2015 by Vorwerk
International Strecker & Co.

Copyright for text, layout, photography and illustrations Vorwerk International Strecker & Co., Switzerland.

All distribution rights reserved, including film, radio, television, mechanical photographic reproduction, audio storage of any kind, reprinting in extract form or storage and recovery in data processing systems of any kind.

For use with TM5!
Leaflet inside!



VORWERK

Material number XXXXX