



# Portable bluetooth Speaker

## Model AWSBT1 Installation and Operation Manual

### INTRODUCTION

 
The Acoustic Research AWSBT1 portable wireless speaker makes it easy to take your music wherever you go and share it whenever you want, with **Bluetooth** wireless connectivity and an built-in auxiliary input. It's compact, easy-to-carry and simple to use, with a UV and water-resistant exterior that lets you take it to the beach, tailgating, the basketball court, even on a camping trip, with no worries.

This speaker even offers a protected storage space for your wallet, keys, etc., even for your MP3 player while it's connected wirelessly to the speaker. So you can relax and enjoy.

This manual covers various connection options and detailed operating instructions for making the Acoustic Research Portable Wireless Speaker a valued part of your lifestyle. If, after having reviewed the instructions, you have any questions, please call toll-free 1-800-732-6866 or visit [www.acoustic-research.com](http://www.acoustic-research.com).

### TOUR OF THE SPEAKER

#### Front

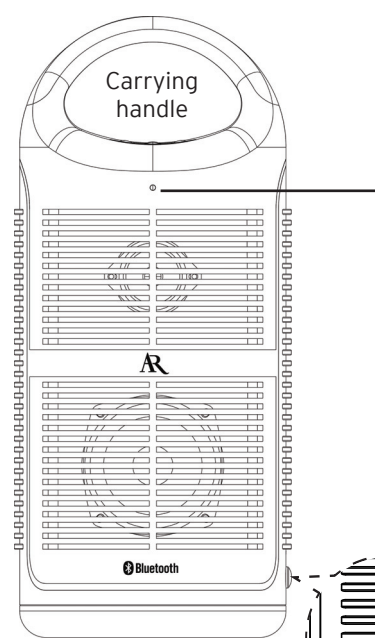

**Power and Pairing indicator** shows the status of the speaker.

**Blue, slow blinking:** The speaker is on but not paired or connected (like when you turn the speaker on for the first time).

**Blue, fast blinking:** The speaker is in **Bluetooth** pairing mode. See the **Bluetooth** Setup section for more information.

**Solid blue:** The speaker is paired with a **Bluetooth**-enabled device and ready to play audio.

**Solid green:** The auxiliary audio input is selected. See the Using the Auxiliary Input section for more information.


#### Side

 **DC IN** receives the small round end of the included 9V 1100mA AC power adapter; remove the protective cover to insert the adapter.

#### Bottom

**Battery Compartment cover** is held in place by two metal bolts that help keep the speaker sealed against the elements. See the Powering the Speaker: AA Batteries section for instructions on removing this cover and inserting batteries.

#### Back

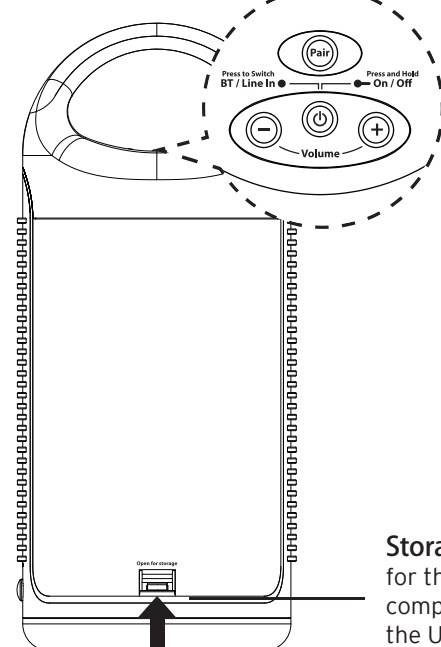

#### Top

**Power** turns the speaker on and off (press and hold for 3 seconds). It also toggles between **Bluetooth** and auxiliary input for the audio signal (press).

**Pair** puts the speaker in pairing mode for **Bluetooth** setup (press and hold for 3 seconds). It also performs a fast reconnect with devices that have lost connection (press). See the **Bluetooth** setup section for more information.

 
**Volume +/-** buttons adjust the speaker's volume level

**Storage compartment houses** the built-in cable for the speaker's auxiliary input. It also offers a closed compartment for your connected device or other items. See the Using the Auxiliary Input section for more information.

### POWERING THE SPEAKER SYSTEM

#### Powering the Speaker

There are two options to power your wireless speaker: using the included AC power adapter or using 6 AA batteries (not included).

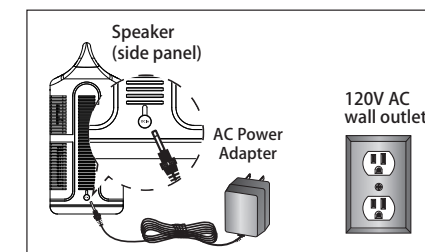

#### AC Power Adapter

1. Insert the small, round plug from the speaker AC power adapter into the DC IN jack on the side panel of the speaker.
2. Plug the other end of the speaker AC power adapter into any standard 120V AC wall outlet.

**Note:** The power unit should be plugged in so that it stays vertical or lies flat.

#### AA Batteries

1. Twist the bolts on the bottom of the speaker counter-clockwise to loosen them completely.
2. Remove the bottom of the speaker to access the battery compartment.
3. Insert six (6) AA batteries (not included) into the battery compartment, following the polarity diagrams (+ and -).
4. Line the bolts on the compartment door up with the holes on either side of the battery compartment and place the speaker bottom back on the speaker.
5. Screw the bolts back in and tighten them.

**Note:** Place the rubber cap in the speaker power input jack when using batteries.

**DO NOT** mix batteries with different chemistry types (for example, a zinc battery with an alkaline battery). **DO NOT** mix new and used batteries. **DO NOT** leave batteries installed in the product when not in use for long periods. Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

### SETTING UP BLUETOOTH WIRELESS

#### Pairing

Any **Bluetooth-enabled** device that you wish to stream audio to your speaker system must first be paired to the speaker. The process is simple, and in most cases the pairing process needs to be done only once.

To pair your **Bluetooth-enabled** device with the speaker:

1. Make sure your device's **Bluetooth** is turned on. See the wireless and/or network settings menu on your device to check.
2. If the speaker isn't already on, press and hold the **Power** button for 3 seconds to turn it on. You will hear 4 beeps to indicate the speaker is turned on. The indicator light on the front of the speaker starts flashing blue.
3. Press and hold for 3 seconds the **Pair** button to enter pairing mode. You will hear 2 beeps to indicate pairing mode is entered. The indicator on the front of the speaker starts blinking faster.
4. Open the **Bluetooth** settings menu on your device. Select "AWSBT1" from the list of devices available (you might have to scan for devices). If your device asks for a password, enter "0000".
5. A confirmation screen will appear on your device once the speaker and the device are successfully paired. The blue indicator turns solid blue to indicate successful connection. The speaker is now ready for you to stream audio from your device.
6. Turn the volume on your device to at least 3/4 max, then start playing something on the device. Control the speaker volume on the speaker itself, using the +/- buttons on the top of the speaker.

**Note:**

- If you notice the sound from the speaker is distorted, turn down your device's volume.
- You will hear a beep if you turn the speaker's volume up to the maximum.

### IMPORTANT INFORMATION

#### CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.

**Caution:** To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

#### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

#### Care and Maintenance

- Always use a soft cloth to clean the speaker and transmitter. Never use any product containing alcohol or other solvents as they may damage the surface.
- Use caution when plugging the power transformers in an AC outlet to avoid the risk of electric shock.
- If the speaker are used outside on a deck or patio, make sure you take them indoors in the event of a rainstorm to prevent possible damage.
- Do not operate or store the system in extreme temperatures (below 32°F/0°C and above 122°F/50°C).

#### Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No.: \_\_\_\_\_  
 Purchase Date: \_\_\_\_\_  
 Dealer/Address/Phone: \_\_\_\_\_

## SETTING UP BLUETOOTH WIRELESS

### Streaming Audio With Bluetooth

Once you've paired and connected your device with the speaker, you can control music playback from the palm of your hand. Select your music, stop it, change songs and playlists, all right from your device's screen.

To adjust volume: Press the Vol +/- buttons on top of the speaker.

 
To disconnect from the speaker: Either turn **Bluetooth** off on your device or choose "Disconnect" from the list of options in your device's **Bluetooth** settings.

To reconnect with the speaker: Just turn the speaker on and wait a few seconds for the speaker to find and connect to your device. If the speaker still hasn't found your device (which may happen if, for instance, another device has been connected after yours) make sure the speaker isn't connected to another device currently. Then select the AWSBT1 from the list of **Bluetooth** connections available in your device's **Bluetooth** menu to connect to it or Fast Re-connect with press and release of the Pair button.

## USING THE AUXILIARY INPUT

### Connecting to an Audio Source

#### Connecting to an MP3 player, CD player, or computer

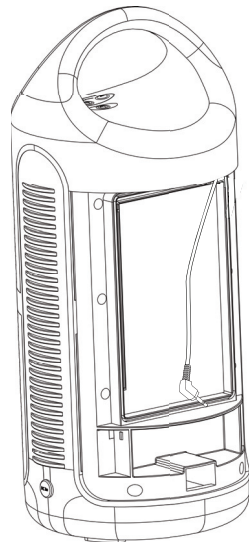

1. Open the storage compartment on the back panel to show the attached 3.5mm cable.
2. Connect the cable to the headphone output on your MP3 player or CD player (or the audio output jack on your computer) and start playback.
3. Make sure the speaker is on. Then press the  $\phi$  button on the top of the speaker. The light on the front of the speaker will change to solid green. You should hear sound coming from the speaker now. To switch back to the speaker's **Bluetooth** connection, press the  $\phi$  button again.

**Note:** You may  $\boxtimes$  your connected device, such as iPhone or iPod touch, inside the closed compartment while the speaker is playing.

**Warning:** This product is designed to work with line level outputs or headphone outputs only. **DO NOT** connect it directly to speaker outputs as it will permanently damage the speaker.

## TURNING THE SPEAKER OFF

1. Press and hold the Power button  $\phi$  on the top of the speaker to turn the speaker off.
2. Confirm that the speaker is off by verifying that the indicator light on the speaker's front panel is no longer illuminated.

**Note:** When you turn off the speaker in Bluetooth mode, you will hear 4 beeps to indicate Bluetooth mode is turned off.

## TROUBLESHOOTING

The following troubleshooting guide takes you through some of the more common problems associated with the installation and/or operation of a wireless system. If the problem persists, please call toll-free at 1-800-732-6866 or visit [www.acoustic-research.com](http://www.acoustic-research.com).

Issue:	Cause and solution:
No sound	<ul style="list-style-type: none"><li>• Check that the AC power adapter is fully inserted into the wall outlet and the power cord from the AC adapter is firmly connected to the speaker's power input jack.</li><li><b>or</b></li><li>• If you're using batteries for the speaker, check that they are fresh and inserted with correct polarity (+, -). Make sure the batteries are fresh and replace if necessary.</li><li>• Confirm that the speaker is turned on.</li><li>• Check that the audio source component (stereo, MP3 player, etc.) is turned on and transmitting sound as it normally should.</li><li>• Make sure the volume on your audio source is turned up.</li><li>• Check that the speaker volume is turned up.</li><li>• Move the <b>Bluetooth</b> device and the speaker closer together. The <b>Bluetooth</b> wireless technology generally can operate within a range of 35 feet. However results may vary based on other factors such as room layout, wall material, weather conditions, etc.</li><li>• Make sure you have switched to the speaker's <b>Bluetooth</b> connection when streaming audio with <b>Bluetooth</b>.</li><li>• Make sure you entered the correct passkey when pairing your device.</li></ul>
Cannot pair the speaker with your <b>Bluetooth</b> device	<ul style="list-style-type: none"><li>• Make sure the <b>Bluetooth</b> capability of your device is turned on and discoverable.</li><li>• Move the <b>Bluetooth</b> device and the speaker closer together. The <b>Bluetooth</b> wireless technology generally can operate within a range of 35 feet. However results may vary based on other factors such as room layout, wall material, weather conditions, etc.</li><li>• Make sure your device supports audio transfer.</li><li>• Turn off all other nearby <b>Bluetooth</b> devices or disable their <b>Bluetooth</b> functionality.</li><li>• <b>Bluetooth</b> Reset: Press and Hold the Pair Button for 12 seconds. (Fast double beep on reset). This resets the <b>Bluetooth</b> module in the speaker.</li></ul>

## SPECIFICATIONS

### Speaker

- **Bluetooth**<sup>®</sup> wireless technology: **Bluetooth** v2.1 + A2DP profile
- 2-way acoustic design: 3" driver, 1.5" tweeter
- Audio output power: 5W (Maximum)
- Audio line-in
- Distortion : 0.5%
- S/N Ratio : 65dB (typical)
- Operation distance : Up to 10 meters (open area)
- Frequency response: 20Hz - 20kHz
- Operates using supplied AC adapter or six (6) AA batteries (not included)

\***Maximum range; results may vary according to environment.**

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

"This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

### RF Exposure Warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

### Industry Canada Regulatory Information

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The **Bluetooth**<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Audiovox Accessories Corporation is under license. Other trademarks and trade names are those of their respective owners.

## 12 MONTH LIMITED WARRANTY

Audiovox Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product.

The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

**U.S.A.:** Audiovox Return Center, 150 Marcus Blvd., Hauppauge, New York 11788

**CANADA:** Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit #3 Door 16, Mississauga Ontario L5T 3A5