

AWSHTB



AR® wireless speaker **quick start guide**

Welcome

Congratulations on your purchase of this Acoustic Research Elite Series speaker, the ultimate in massive wireless sound. This guide takes you through the steps to get set up.

Instructions en français 7


Instrucciones en español 13

Getting to know Bluetooth

Bluetooth wireless is a quick and easy way to connect a smartphone to a speaker or a headset. There are basically two steps to making Bluetooth work.

PAIRING:

The two devices get to know each other.

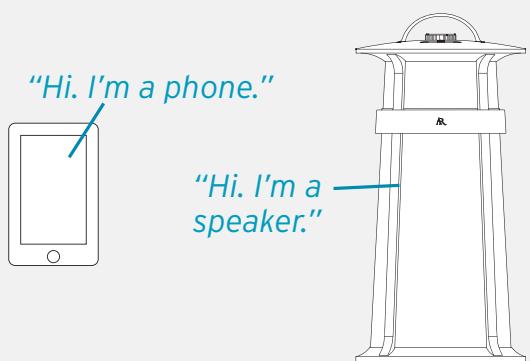

CONNECTING:

The two devices do something together (like play music).

This guide takes you through the steps to get started.




1 Unpack

Make sure the following items came in this package.

- **Wireless Speaker**
- **Speaker Cover**
- **3.5mm AUX In Cable**

2 Power the speaker


Plug the speaker's built-in power cord into a working outlet or surge protector.

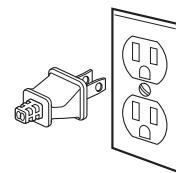

3 Turn the speaker on

Press the **On/Off** button on the top of the speaker to turn it on.

The **Pair** light on the top of the speaker blinks blue.

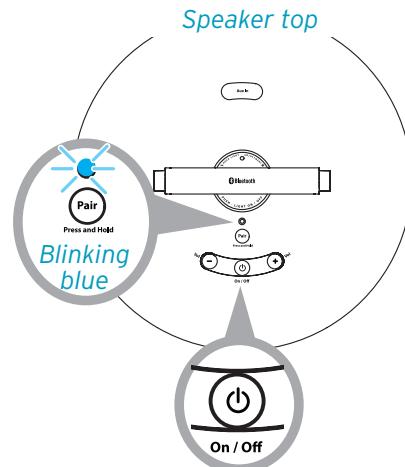


4 Enable Bluetooth on your device

If it isn't already on, turn on the Bluetooth function of your device.

Notes:

Make sure the left **Pair** light on the top of the speaker is blinking. (If it isn't, press and hold the **Pair** button on the top of the speaker until the speaker gives an audio signal.)


If you've previously paired a different Bluetooth device with this speaker, the speaker will automatically attempt to reconnect to that device when you switch the speaker on. If you want to pair to a new device, press and hold the **Pair** button on the speaker until the speaker gives an audio signal.

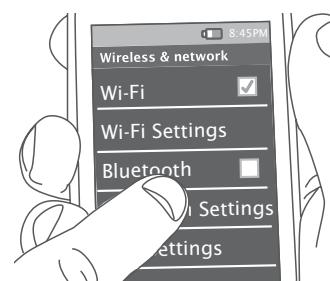


5 Select AR Hatteras from the list of devices

Select **AR Hatteras** from the list of Bluetooth devices available.

Notes: If you don't see **AR Hatteras** in the list of Bluetooth devices on your phone, choose "Scan" from your phone's Bluetooth menu. The process of enabling Bluetooth and connecting varies from device to device. See your device's owners manual for more information and specific instructions.

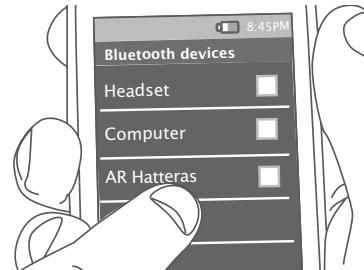

The speaker gives an audio signal when it's finished connecting to your smartphone. The **Pair** light on the top of the speaker turns solid blue.

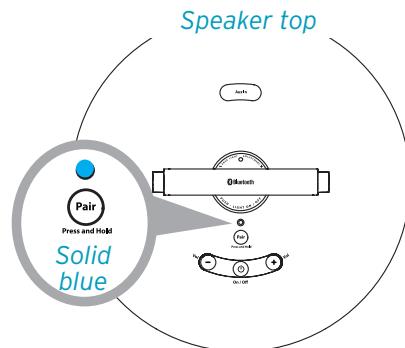

6 Start playing music on your device


Start playing music on your Bluetooth device.

Note: Make sure your device's volume is set to at least 75%.



The speaker starts streaming your music wirelessly.

To control the volume, press the + and - buttons on top of the speaker, or use the volume controls on your Bluetooth device.

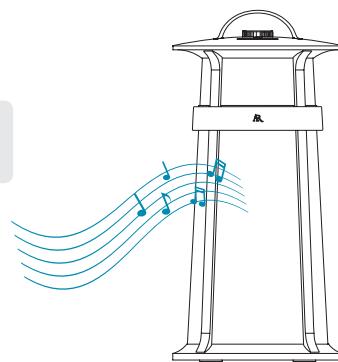


Bluetooth Wireless Connection Tips

- Make sure the Bluetooth capability of your device is turned on.
- Make sure there's nothing plugged into the speaker's **Aux In** jack when you're trying to use Bluetooth.
- The Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters). This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to the speaker, move closer to it.
- If your device asks you for a password to connect, use "0000".

Using the AUX input

Use the audio cable included with this speaker to connect the audio output from your device to the **Aux In** audio input on the top of the speaker (you'll need to open the rubber flap protecting the jack). The speaker automatically switches to the **Aux In** audio. The **Pair** light on the top of the speaker turns white.

To listen to Bluetooth audio again, unplug the cable from the speaker's **Aux In** jack.

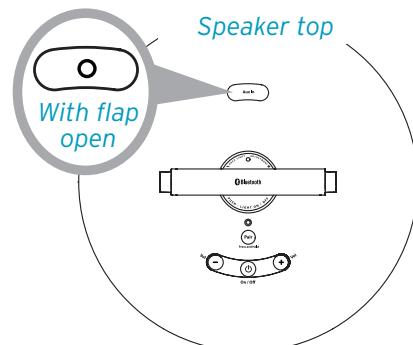

Using the built-in lighting

This Elite Series wireless speaker offers two modes of adjustable lighting, to suit different settings and situations.

Dimmer Mode provides adjustable area lighting.

Music Pulse Mode provides a visible pulse to your music, with light that accompanies the beat.


The speaker's lighting is controlled via the **AREA LIGHT ADJUSTMENT** dial on top of the speaker.

To turn on the light: press the dial once.

To adjust the light: turn the dial.

To use Music Pulse Mode: press the dial a second time. Then start playing music.

To turn the light off: press the dial a third time.

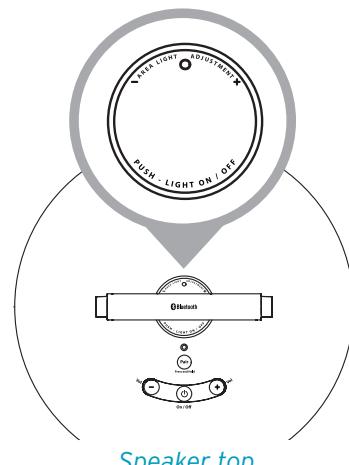

Tour of the Elite Series wireless speaker

Top

Pair indicator shows the connection status of the speaker.



Solid blue means the speaker is connected via Bluetooth.

Fast blinking blue means the speaker is ready to pair via Bluetooth.

Slow blinking blue means the speaker is reconnecting via Bluetooth.

Solid white means an audio cable is plugged into the **Aux In** jack.

On/Off button turns the speaker on and off.

Pair button initiates pairing with a Bluetooth device.

Volume - and **+** buttons increase or decrease the volume of the speaker's audio.

Aux In jack lets you connect directly to the speaker to listen to an audio source.


AREA LIGHT ADJUSTMENT lets you set the speaker's built-in light to Dimmer Mode or Music Pulse Mode.

To turn on the light: press the dial once.

To adjust the light: turn the dial.

To use Music Pulse Mode: press the dial a second time. Then start playing music.

To turn the light off: press the dial a third time.

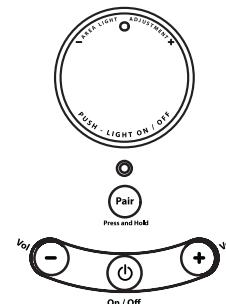



AR® haut-parleur sans fil **guide de démarrage rapide**

Bienvenue

Toutes nos félicitations pour l'achat de ce haut-parleur Série Elite de Acoustic Research offrant les capacités inégalées et imposantes d'un son sans fil. Ce guide présente les étapes permettant de commencer à utiliser le produit.


English instructions	1
Instrucciones en español.....	13

Familiarisation avec Bluetooth

La liaison sans fil Bluetooth est une solution rapide et facile pour connecter un téléphone intelligent à un haut-parleur ou à un casque d'écoute. Il y a deux étapes fondamentales pour faire fonctionner Bluetooth.

APPARIEMENT :


Les deux appareils apprennent à se connaître.

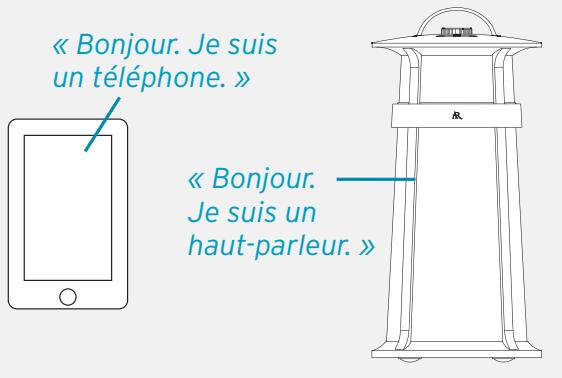

CONNEXION :

Les deux appareils font quelque chose ensemble (comme diffuser de la musique).

Ce guide présente les étapes permettant de commencer à utiliser le produit.

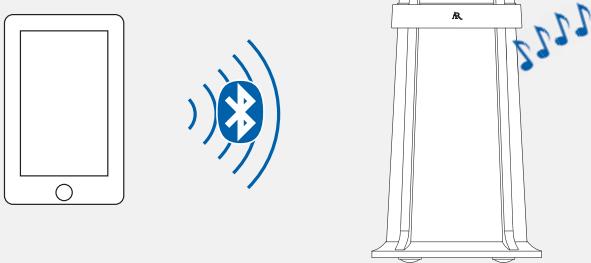


1 Déballer

Assurez-vous que les articles suivants sont inclus dans l'emballage.

- **Haut-parleur sans fil**
- **Housse du haut-parleur**
- **Câble AUX IN de 3,5 mm**

2 Alimentation du haut-parleur


Branchez le cordon d'alimentation intégré du haut-parleur dans une prise sous tension ou dans un parasurtenseur.

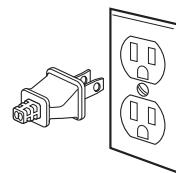

3 Allumer le haut-parleur

Appuyez sur le bouton **On/Off** situé sur le dessus du haut-parleur pour l'allumer.

Le voyant Pair situé sur le dessus du haut-parleur clignote en bleu.

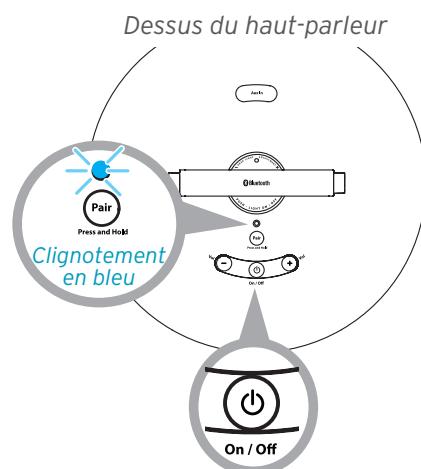


4 Activer la fonction Bluetooth sur l'appareil

Si la fonction Bluetooth de l'appareil n'est pas encore activée, activez-la.

Remarques :

Vérifiez que le voyant **Pair** situé sur le dessus du haut-parleur clignote. (S'il ne clignote pas, appuyez sur le bouton **Pair** situé sur le dessus du haut-parleur et maintenez-le enfoncé jusqu'à ce que le haut-parleur émette un signal audio.)

Si un autre appareil Bluetooth a été apparié antérieurement au haut-parleur, celui-ci, lorsqu'il est allumé, essaie automatiquement de se reconnecter à cet appareil. Si vous désirez appairer un nouvel appareil, appuyez sur le bouton **Pair** sur le haut-parleur et maintenez-le appuyé jusqu'à ce qu'il émette un signal sonore.

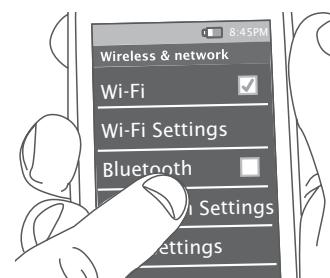


5 Sélectionner AR Hatteras sur la liste des appareils


Sélectionnez **AR Hatteras** sur la liste des appareils Bluetooth disponibles.

Remarques : si **AR Hatteras** ne s'affiche pas sur la liste des appareils Bluetooth de votre téléphone, sélectionnez « Scan » sur le menu Bluetooth du téléphone.

Le processus d'activation Bluetooth et de connexion varie d'un appareil à l'autre. Se reporter au manuel du propriétaire concernant l'appareil pour obtenir des informations supplémentaires et des instructions spécifiques.

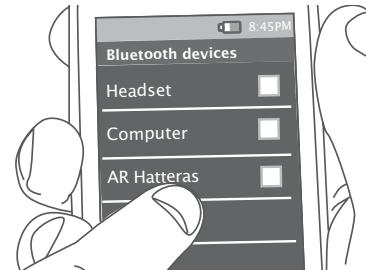

Le haut-parleur émet un signal sonore lorsque la connexion à votre téléphone intelligent est terminée. Le voyant **Pair** situé sur le dessus du haut-parleur devient bleu en continu.

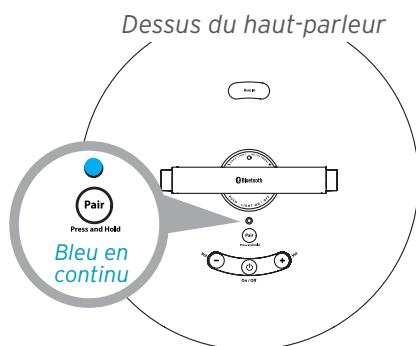

6 Démarrer la lecture de musique sur l'appareil


Démarrez la lecture de musique sur l'appareil Bluetooth.

Remarque : Veiller à régler le volume de votre appareil à 75 % au minimum.



Le haut-parleur diffuse la musique en continu grâce à sa connexion sans fil.

Pour contrôler le volume, appuyez sur les boutons + et - situés sur la partie supérieure du haut-parleur, ou utilisez les commandes de volume sur votre appareil Bluetooth.

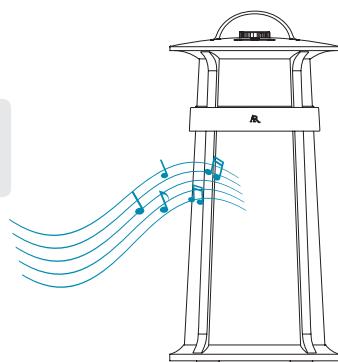


Conseils pour la connexion sans fil Bluetooth

- Vérifiez que la fonction Bluetooth de votre appareil est activée.
- Vérifiez que rien n'est branché dans la prise **Aux In** du haut-parleur lorsque vous essayez d'utiliser Bluetooth.
- La connexion sans fil Bluetooth dispose d'une portée d'environ 10 m (33 pi). Cependant, cette portée peut varier en fonction d'autres facteurs, tels que l'agencement de la pièce, le matériau des murs, les obstacles, la performance Bluetooth de l'appareil, etc. En cas de problème de connexion avec le haut-parleur, se rapprocher du haut-parleur.
- Si l'appareil demande un mot de passe pour se connecter, utiliser « 0000 ».

Utilisation de l'entrée auxiliaire AUX

Utilisez le câble audio inclus avec ce haut-parleur pour connecter la sortie audio de votre appareil à l'entrée audio **Aux In** située sur le dessus du haut-parleur. (il sera peut-être nécessaire d'ouvrir le volet en caoutchouc qui protège la prise) Le haut-parleur passe automatiquement à audio Aux In. Le voyant **Pair** sur le dessus du haut-parleur devient blanc.

Pour écouter de nouveau l'audio via Bluetooth, débranchez le câble de la prise **Aux In** du haut-parleur.

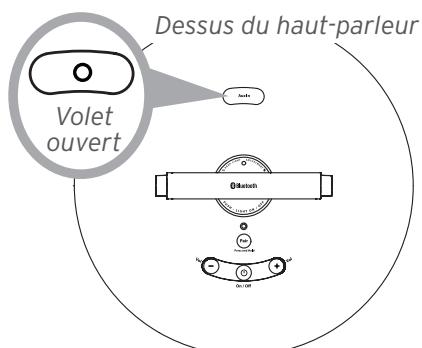

Utilisation de la fonction intégrée d'éclairage

Ce haut-parleur sans fil de la série Elite offre deux modes d'éclairage réglables adaptés à des contextes et des environnements différents.

Le mode Dimmer (tamisé) permet un éclairage réglable selon l'endroit.

Le mode Pulse ajoute une pulsation visible à la musique car l'éclairage suit le rythme de la musique.


L'éclairage du haut parleur est contrôlé par l'intermédiaire du cadran **AREA LIGHT ADJUSTMENT** situé sur le dessus du haut-parleur.

Pour activer l'éclairage : appuyez sur le cadran une fois.

Pour régler l'éclairage : tournez le cadran.

Pour utiliser le mode Music Pulse : appuyez sur le cadran une deuxième fois. Ensuite il suffit de lancer la lecture de musique.

Pour éteindre l'éclairage: appuyez sur le cadran une troisième fois.

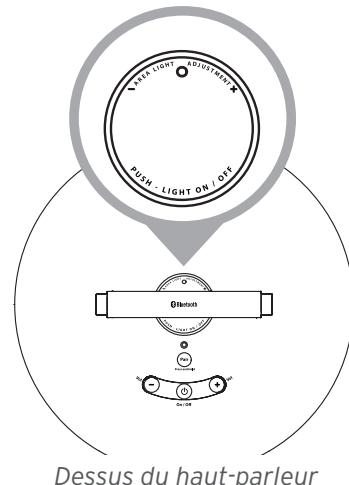

Présentation du haut-parleur sans fil

Série Elite

Dessus

Le voyant **Pair** indique l'état de connexion du haut-parleur.

Bleu en continu indique la connexion du haut-parleur via Bluetooth.

Clignotement rapide bleu indique que le haut-parleur est prêt pour l'appariement via Bluetooth.

Clignotement lent bleu indique la reconnexion du haut-parleur via Bluetooth.

Blanc en continu indique lorsqu'un câble audio est branché dans la prise Aux In.

Le bouton **On/Off** permet d'allumer ou d'éteindre le haut-parleur.

Le bouton **Pair** démarre l'appariement avec un appareil Bluetooth.

Les boutons **Volume -** et **+** baissent ou augmentent le son du haut-parleur.

La prise **Aux In** permet la connexion directe au haut-parleur pour écouter une source audio.


AREA LIGHT ADJUSTMENT permet de régler la fonction d'éclairage intégrée du haut-parleur, Mode « **Dimmer** » ou mode « **Music Pulse** ».

Pour activer l'éclairage : appuyez sur le cadran une fois.

Réglage de l'éclairage: tourner le cadran.

Pour utiliser le mode Music Pulse : appuyez sur le cadran une deuxième fois. Ensuite il suffit de lancer la lecture de la musique.

Pour désactiver l'éclairage : appuyez sur le cadran une troisième fois.

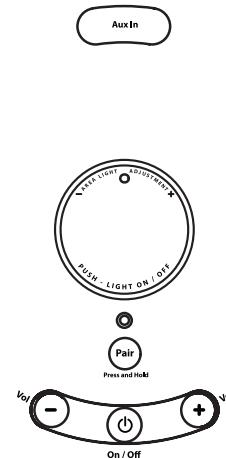



AR® altavoz inalámbrico guía de inicio rápido

Bienvenido

Felicidades por su adquisición de este altavoz de la Serie Elite de Acoustic Research, lo último en sonido masivo inalámbrico. Esta guía lo lleva a través de los pasos para poder comenzar.

English instructions 1

Instructions en français 7


Lo que usted debe saber sobre Bluetooth

Bluetooth inalámbrico es una forma rápida y fácil de conectar un teléfono inteligente a un altavoz o un auricular. Básicamente, hay dos pasos para hacer que éste funcione.


SINCRONIZACIÓN:

Los dos dispositivos se conocen entre sí.

"Hola. Soy un teléfono".

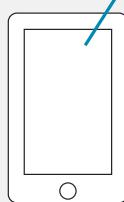



"Hola. Yo soy un altavoz".

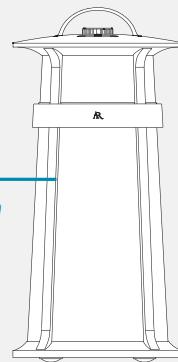

CONEXIÓN:

Los dos dispositivos hacen algo conjuntamente (tal como reproducir música).

Esta guía lo lleva a través de los pasos para poder comenzar.

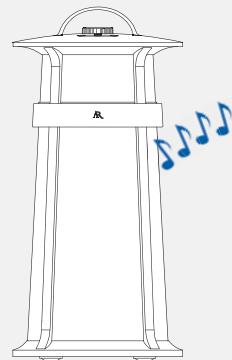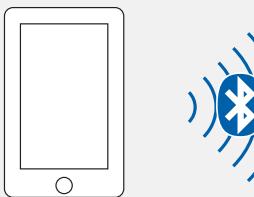


1 Desempaque

Asegúrese que los siguientes artículos estén incluidos en el empaque.

- Altavoz inalámbrico
- Cubierta del altavoz
- Cable AUX in de 3.5 mm

2 Alimentación del altavoz


Enchufe el cordón de alimentación integrado en el altavoz en un tomacorriente de pared o protector contra sobretensiones.

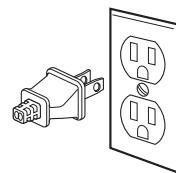

3 Cómo encender el altavoz

Oprima el botón **On/Off**  ubicado en la parte superior del altavoz para encenderlo.

La luz indicadora **Pair** en la parte superior del altavoz parpadea en color azul.

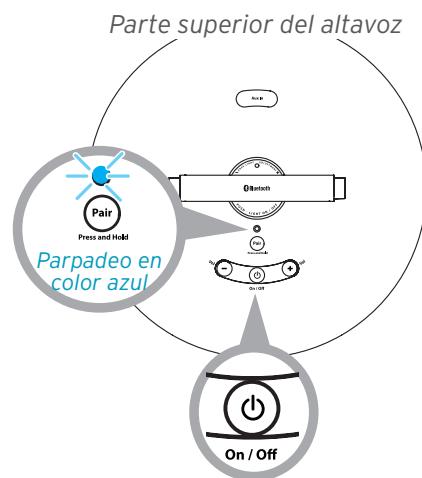


4 Active la función Bluetooth en su dispositivo

Si aún no está encendido, active la función de Bluetooth de su dispositivo.

Notas:

Asegúrese que la luz indicadora **Pair** en la parte superior del altavoz esté parpadeando. (De lo contrario, oprima y no suelte el botón **Pair** ubicado en la parte superior del altavoz hasta que el altavoz emita un sonido.)

Si anteriormente sincronizó un dispositivo Bluetooth diferente con este altavoz, el altavoz intentará automáticamente reconectarse a ese dispositivo cuando encienda el altavoz. Si desea sincronizarse a un nuevo dispositivo, mantenga oprimido el botón **Pair** del altavoz hasta que el altavoz emita un sonido.

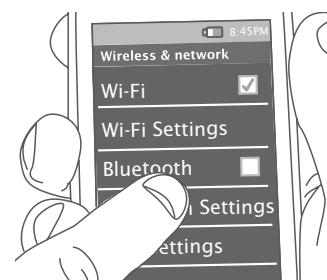


5 Seleccione AR Hatteras en la lista de dispositivos


Seleccione **AR Hatteras** en la lista de dispositivos Bluetooth disponibles.

Notas: Si no aparece **AR Hatteras** en la lista de dispositivos Bluetooth en su teléfono, seleccione "Scan" en el menú de Bluetooth de su teléfono.

El proceso de activación de Bluetooth y de la conexión varía según el dispositivo. Consulte el manual del usuario del dispositivo para obtener información adicional e instrucciones específicas.

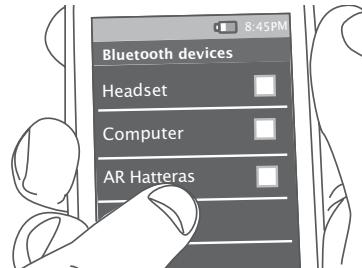

El altavoz emite un sonido cuando termina de sincronizar y conectarse al teléfono inteligente. La luz indicadora **Pair** en la parte superior del altavoz se enciende de color azul continuo.

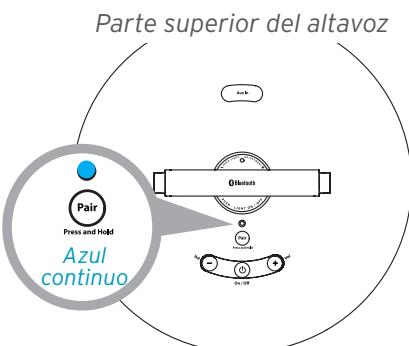

6 Comience a reproducir música en su dispositivo


Comience a reproducir música en su dispositivo Bluetooth.

Aviso: Asegúrese que el volumen de su dispositivo está ajustado al menos a un 75%.



El altavoz canaliza la música inalámbricamente.

Para controlar el volumen, oprima los botones + y - en la parte superior del altavoz, o utilice los controles de volumen en su dispositivo Bluetooth.

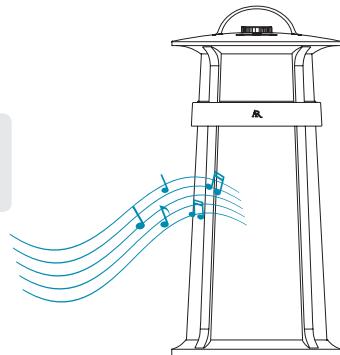


Consejos para la conexión inalámbrica Bluetooth

- Asegúrese que la función Bluetooth del dispositivo esté activada.
- Asegúrese que no haya nada acoplado al conector **Aux In** del altavoz cuando esté intentando utilizar Bluetooth.
- La conexión inalámbrica Bluetooth funciona a un alcance de aproximadamente 33 pies (10 metros). Sin embargo, este alcance puede variar dependiendo de otros factores, tales como el diseño de la habitación, el material de las paredes, obstáculos, el desempeño de Bluetooth de su dispositivo, etc. Si tiene problemas para conectarse con el altavoz, acérquese más.
- Si su dispositivo le solicita un código para conectarse, utilice "0000".

Uso de la entrada AUX

Use el cable de audio incluido con este altavoz para conectar la salida de audio de su dispositivo a la entrada de audio **Aux In** ubicada en la parte superior del altavoz (tal vez necesitará abrir la solapa de goma que protege al conector). El altavoz cambia automáticamente a la señal de audio Aux In. La luz indicadora **Pair** en la parte superior del altavoz se enciende de color blanco continuo.

Para escuchar nuevamente el audio a través de Bluetooth, desenchufe el cable del conector **Aux In** del altavoz.

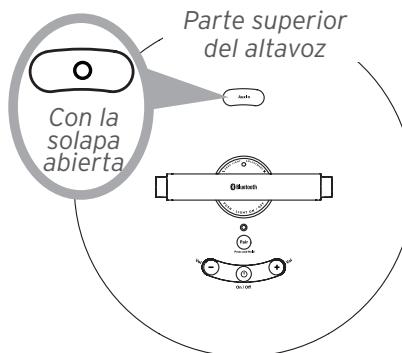

Uso de la luz integrada

El altavoz inalámbrico de la Serie Elite ofrece dos modos de ajuste de la iluminación, para adaptarse a diferentes ambientes y situaciones.

El modo de atenuación ofrece iluminación que se ajusta al área.

El modo de modulación de pulso brinda un pulso visible a su música, con iluminación que acompaña el ritmo.


La iluminación del altavoz se controla a través del disco selector **AREA LIGHT ADJUSTMENT** en la parte superior del altavoz.

Para encender la luz: oprima el disco selector una vez.

Para ajustar la luz: gire el disco selector.

Para usar el modo de modulación de pulso: oprima el disco selector una segunda vez. Enseguida comience a reproducir música.

Para apagar la luz: oprima el disco selector una tercera vez.

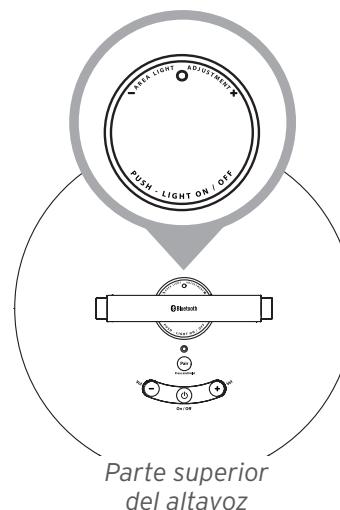

Recorrido del altavoz inalámbrico de la Serie Elite

Parte superior

La luz indicadora **Pair** muestra el estado de conexión del altavoz.

Azul continuo significa que el altavoz está conectado a través de Bluetooth.

Parpadeo rápido en color azul significa que el altavoz está listo para la sincronización a través de Bluetooth.

Parpadeo lento en color azul significa que el altavoz está reconectando a través de Bluetooth.

El color blanco continuo significa que un cable de audio está acoplado al conector Aux In.

El botón **ON/OFF** enciende y apaga el altavoz.

El botón **Pair** inicia la sincronización con un dispositivo de Bluetooth.

Los botones **Volume -** y **+** incrementan o disminuyen el volumen de sonido del altavoz.

El conector **Aux In** le permite conectarse directamente al altavoz para escuchar una fuente de audio.

AREA LIGHT ADJUSTMENT le permite ajustar la luz integrada del altavoz en modo de atenuación o de modulación de pulso.

Para encender la luz: oprima el disco selector una vez.

Para ajustar la luz: gire el disco selector.

Para usar el modo de modulación de pulso: oprima el disco selector una segunda vez. Enseguida comience a reproducir música.


Para apagar la luz: oprima el disco selector una tercera vez.



Important Information

for Acoustic Research AWSHTB

IMPORTANT SAFETY INSTRUCTIONS PLEASE READ AND SAVE FOR FUTURE REFERENCE

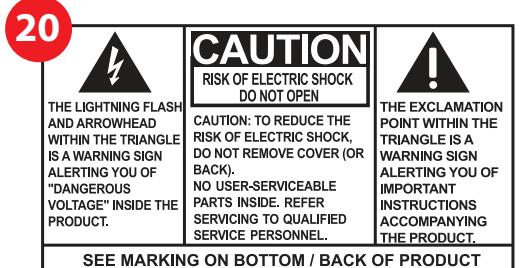


WARNING: TO PREVENT FIRE OR
ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE
THIS PRODUCT TO RAIN OR MOISTURE.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



This is class II equipment designed with double or reinforced insulation so it does not require a safety connection to electrical earth (US: ground).

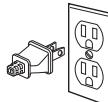

AC OUTLET POWER SUPPLY: 100-240 V ~ 50/60 Hz

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

Care and Maintenance

- Always use a soft cloth to clean the speaker and transmitter. Never use any product containing alcohol or other solvents as they may damage the surface.
- Use caution when plugging the power transformers in an AC outlet to avoid the risk of electric shock.
- If the speaker are used outside on a deck or patio, make sure you take them indoors in the event of a rainstorm to prevent possible damage.
- Do not operate or store the system in extreme temperatures (32°F/0°C ~ 122°F/50°C).

18

16

10

11

15

19

8

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



S3125A

12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
17. **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
18. **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
19. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



20- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.


21- Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Important Information

for Acoustic Research AWSHTB

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE FOR FUTURE REFERENCE

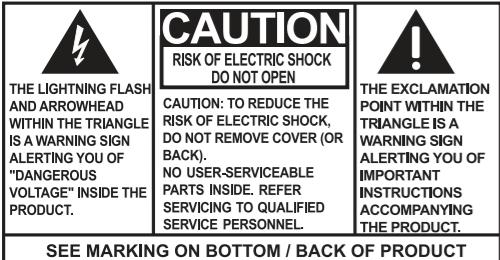

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



This is class II equipment designed with double or reinforced insulation so it does not require a safety connection to electrical earth (US: ground).

Plugging in for power

AC OUTLET POWER SUPPLY: 100-240 V ~ 50/60 Hz

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

Care and Maintenance

- Always use a soft cloth to clean the speaker and transmitter. Never use any product containing alcohol or other solvents as they may damage the surface.
- Use caution when plugging the power transformers in an AC outlet to avoid the risk of electric shock.
- If the speaker are used outside on a deck or patio, make sure you take them indoors in the event of a rainstorm to prevent possible damage.
- Do not operate or store the system in extreme temperatures (32°F/0°C ~ 122°F/50°C).

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

RF Exposure Warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Industry Canada Regulatory Information

This device complies with Industry Canada Licence-exempt RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Industry Canada Regulatory Information

CAN ICES-3 (B)/NMB-3 (B)

IC Radiation Exposure Statement: This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by VOXX Accessories Corporation is under license. Other trademarks and trade names are those of their respective owners.

Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No.: _____

Purchase Date: _____

Dealer/Address/Phone: _____

12 Month Limited Warranty

VOXX Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product.

The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

U.S.A: Audiovox Return Center, 150 Marcus Blvd., Hauppauge, New York 11788

CANADA: Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit #3 Door 14, Mississauga Ontario L5T 3A5

Information importante

pour Acoustic Research AWSHTB

IMPORTANTES INSTRUCTIONS DE SECURITE

BIEN LIRE ET CONSERVER POUR REFERENCE ULTERIEURE



AVERTISSEMENT: POUR REDUIRE LE RISQUE D'INCENDIE OU DE CHOC ELECTRIQUE, N'EXPOSEZ PAS CET APPAREIL A LA PLUIE OU A L'HUMIDITE.

Instructions de sécurité importantes

1. Lire ces instructions.
2. Conserver ces instructions.
3. Respecter tous les avertissements.
4. Suivre toutes les instructions.
5. Nettoyer seulement avec un chiffon sec.
6. Ne bloquer aucune ouverture de ventilation. Installer conformément aux instructions du fabricant.
7. Ne pas installer près d'une source de chaleur, par exemple des radiateurs, des registres de chaleur, des poêles ou autres appareils (amplificateurs, par exemple) qui produisent de la chaleur.

Cet appareil de classe II est doté d'une isolation double ou renfermée et ne requiert pas de mise à la terre de sécurité.

Branchement

ALIMENTATION COURANT ALTERNATIF : 100-240 V ~ 50/60 Hz
La prise de l'appareil est polarisée (une des fiches est plus large que l'autre) et ne peut s'enclencher que d'une seule façon dans une prise de courant alternatif. Si la prise n'est pas complètement insérée dans la prise murale, retournez la prise et essayez de l'insérer dans l'autre sens. Si elle ne rentre toujours pas, contactez un électricien agréé pour changer la prise ou utilisez une autre prise. N'essayez pas de contourner cette mesure de sécurité.

Entretien et maintenance

- Toujours utiliser un chiffon doux pour nettoyer le haut-parleur et l'émetteur. Ne jamais utiliser un produit qui contient de l'alcool ou d'autres solvants, car il risque d'endommager la surface.
- Faire preuve de prudence lors du branchement des transformateurs dans une prise de courant alternatif, afin d'éviter les risques de choc électrique.
- Si les haut-parleurs sont utilisés à l'extérieur, sur une terrasse ou sur un patio, veiller à les rentrer à l'intérieur en cas d'orage pour éviter de les endommager.
- Ne pas utiliser ou entreposer le système à des températures extrêmes (32°F/0°C ~ 122°F/50°C).

Déclaration de la FCC

Cet appareil est conforme à la partie 15 du règlement de la FCC. Le fonctionnement est sujet aux deux conditions suivantes :
1) Cet appareil ne doit pas provoquer de brouillage préjudiciable et (2) cet appareil doit accepter tout brouillage reçu, y compris le brouillage susceptible de provoquer un fonctionnement indésirable.

Remarque : cet équipement a été soumis à des essais et a été déclaré conforme aux limites stipulées pour un appareil numérique de classe B, conformément aux spécifications de la partie 15 du règlement de la FCC. Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio. Cependant, il est impossible de garantir qu'aucun brouillage ne se produira dans une installation particulière. Si cet équipement cause un brouillage de la réception de radio ou de télévision, ce qu'il est possible de déterminer en éteignant puis en rallumant l'équipement, l'utilisateur est prié d'essayer de corriger le brouillage au moyen de l'une ou de plusieurs des mesures suivantes :

