

1875

User Guide (Draft)

WARNING

It is the responsibility of the vehicle operator to ensure their vehicle is parked in a safe and responsible manner.



1. a) **Manual transmission:** When leaving the vehicle, it is the user's responsibility to ensure that the gearshift lever is in the NEUTRAL position and the parking brake is engaged in order to avoid accidents upon remote starting.
b) **Automatic transmission:** When leaving the vehicle, it is the user's responsibility to ensure that the gearshift lever is in "Park" in order to avoid accidents upon remote starting.
(Note: Make sure that the automatic vehicle cannot start in "Drive".)
2. It is the user's responsibility to ensure that the remote starter is disabled or put into valet mode before servicing.

Designed & engineered in Canada

Directed[®]
ELECTRONICS CANADA, INC.

INDUSTRY CANADA USER NOTICE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Table of Contents

Introduction.....	3
Using the Remote Control	4
Vehicle Presets	4
Heater & Heated Seat.....	4
Windshield Wipers & Radio & Headlights.....	4
Arming the Starter Kill	4
Remote-Starting Your Vehicle.....	5
Setting Your Vehicle Into Ready Mode.....	5
Remote-starting	6
Driving Off.....	6
Remote Starter Features.....	6
Remote Door Locks.....	6
Remote Trunk Release.....	7
Idle Mode.....	7
Valet Mode.....	7
Panic Mode.....	8
Quick Lockout™.....	8
Cold Weather Mode.....	8
Extended Run Time.....	9
Disable/Enable LED flashing.....	9
Constant output.....	9
Advanced Features: Installation-programmable Options.....	10
Ignition-controlled Door Locks.....	10
Secure Lock.....	10
Safe Start.....	10
Engine Run Time.....	10
Turbo Mode.....	10
“Home Valet™” Mode.....	11
AUX 1.....	11
Horn Chirp Timing.....	12
Multi-car Operation.....	12
OEM-Style Alarm.....	12
Intrusion Codes via horn.....	12
Multi-Level Features (default state).....	13
Troubleshooting Poor Transmitting Range.....	14
Diagnostics – Parking Light Flash Table.....	15

GOVERNMENT REGULATIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with the Industry Canada Radio Standards Specification RSS 210. Its use is authorized only on a no-interference, no-protection basis; in other words, this device must not be used if it is determined that it causes harmful interferences to services authorized by IC. In addition, the user of this device must accept any radio interface that may be received, even if this interference could affect the operation of the device.

Warning! Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Introduction

This is a state-of-the-art remote car starter system. The system is packed with advanced features such as priority access to the driver's door (commodity features) and the Safe Start children safety feature.

With many advanced functions, this product will satisfy any one of your expectations from high-end commodity and security systems, without neglecting any standard feature commonly offered by entry-level starters.

Using the ASRF1501 Remote Control

Your Remote Car Starter is equipped with a 5-button multi-channel remote control. It can operate two independent vehicles equipped with a Remote Car Starter (see **Multi-Car Operation page-12**, later in this Guide, for second-car transmitter functions).

The functions of the transmitter are as follows:



LOCK: Locks the Doors and arms the STARTER KILL.



UNLOCK: Unlocks the Doors and disarms the STARTER KILL. Activates the AUX 2 output if Priority Door Access is configured.



TRUNK: Opens the TRUNK or activates the AUX 3 output.



START/STOP: Remote start/stop. **Cold Weather Mode** by pressing the **SHIFT** button and then pressing and holding the **START/STOP** button for 3 seconds.

AUX.

SHIFT: This button serves as a second function button. In combination with the other four buttons, this button allows to assign different functions to those buttons.



N.B.: Pressing the AUX then Lock button will activate the AUX 2 output.

Vehicle Presets

Heater & Heated Seat

When leaving the vehicle it is recommended to preset the accessory controls in preparation for the next remote start. Settings for the blower motor (fan), front and rear, as well as heated seats (if equipped) should not be left on HIGH. It is recommended to leave the settings on LOW or MEDIUM instead.

Windshield Wipers & Radio & Headlights

Certain vehicles require the radio and / or windshield wiper and / or headlight circuits to become energized while running under remote start. When leaving the vehicle you must ensure that the windshield wiper and headlight switches are OFF. Leaving the headlight switch ON on certain types of vehicles could cause them to remain ON even after remote starter shut down, resulting in a dead battery.

Arming the Starter Kill

This added security feature will prevent the vehicle from starting with the Ignition key when the starter kill is armed. If the system was installed with the starter kill option, you will not be able to start the vehicle with the key unless the system has been unlocked first or put into **Valet Mode** (**page-7**)


Note: If the Starter Kill is installed, the vehicle will benefit from a protection against starter motor damage that could occur after remote-starting the engine should the user, by force of habit, turn the ignition key to the CRANK position.

The Starter Kill (if installed) can be configured by the installer either to Passive Mode (so as to arm automatically) or Active Mode (so as to require the user's intervention for arming). By default, your Remote Car Starter is configured to Passive Mode.

Passive mode:


To arm the Starter Kill, press the  button on the transmitter, **OR**

1. In Passive Mode, the Starter Kill will automatically arm 1 minute (by default) or 3 minutes (if configured this way) after the ignition is turned OFF or once the last door is closed (if the doors are monitored).
2. The LED on the antenna will flash quickly during the countdown preceding the activation of the Starter Kill.
3. Once the activation countdown expires, the LED will send a series of quick double flashes to indicate that the Starter Kill is now armed.


To disarm the Starter Kill, press the  button on the transmitter.

- The Starter Kill will automatically rearm itself after 1 minute (by default) or 3 minutes (if configured this way) if no door is left opened (if the doors are monitored) and the ignition is not turned ON.

Active Mode:

To arm the Starter Kill, press the  button on the transmitter.

1. The parking lights will flash once.
2. The LED on the antenna will flash slowly.
3. If remote door locks are installed, this will also lock the doors and arm the OEM-style alarm.

To disarm the Starter Kill, press the  button on the transmitter.

1. The parking lights will flash twice.
2. The LED on the antenna will remain OFF.
3. If remote door locks are installed, this will also unlock the doors.

Remote-Starting Your Vehicle

Setting Your Vehicle Into Ready Mode

If your vehicle has a manual transmission you must read the following indications. The unit must first be set to Ready Mode in order to start the vehicle by remote. If the unit is not set to Ready Mode, it cannot remote start the vehicle. Please note that Ready Mode can be enabled by the remote or the handbrake, depending on the option that was selected by your installer. Therefore, you must follow the appropriate procedure between the two described below in order to set your vehicle into Ready Mode.







Once the system is set to Ready Mode, the vehicle can be remote started and stopped at any time. The system will exit Ready Mode if a door, the hood or the trunk is opened, if the brake pedal is pressed, if the parking brake is disengaged or if the ignition key is turned to the **IGNITION ON (RUN)** position.

To set the system to Ready Mode:


If Ready Mode is enabled by remote

If Ready Mode is enabled by handbrake

1. Ensure that all the doors, hood and trunk are closed. Make sure that the gear selector is in the


neutral position.	
2. With the engine already running, apply the parking brake once and release the brake pedal.	2. With the engine already running, apply the parking brake twice within 10sec. Make sure to release the brake pedal. The parking lights will flash 3 times quickly and remain lit. Skip to step 4.
3. Within 20 sec. of engaging the parking brake, press and hold  ,  or  on the transmitter. The parking lights will flash 3 times quickly and remain lit.	
4. Remove the key; the engine will continue running.	
5. Exit the vehicle and close all doors, hood and trunk.	
6. Press for approx. 1 second either: <ul style="list-style-type: none"> •  to lock the doors and shut down the engine; •  to unlock the doors and shut down the engine; •  to shut down the engine without affecting the doors. 	
7. The parking lights will flash twice to confirm ready mode activation.	

Remote-starting

Press the  button for approximately 1 second. The parking lights will turn ON to inform you that the Remote Car Starter has received your signal. Approximately 5 seconds later, the engine will start. The parking lights will remain ON during the pre-programmed run time of the engine.

If your vehicle has an automatic transmission and it does not start at the first attempt, the system will shut down, wait a few seconds and try to start the engine again. There will be 3 start attempts before the system gives up.

Driving Off

With the vehicle running under remote control, press the  button to disarm and unlock the doors. Enter the vehicle and do the following:

Turn the ignition key to the IGNITION ON (RUN) position. (Do not turn the key to the CRANK position while the engine is running. This would cause the starter motor to re-engage.)

Press the brake pedal to disengage the remote starter unit.


You are now ready to drive off.

Remote Starter Features

Remote Door Locks

If your system was installed with the Remote Door Locks option, you will have the convenience of remote keyless entry.

To lock your doors and arm the starter kill (if installed):


1. Press and hold the  button for approx. 1 sec.
2. The parking lights will flash once to confirm that the doors have been locked

To unlock your doors and disarm the starter kill (if installed):

1. Press and hold the  button for approx. 1 sec.

2. The parking lights will flash twice to confirm that the doors have been unlocked.

Remote Trunk Release





If your system was installed with the Remote Trunk Release option, you can open your trunk by pressing the  button for 3 seconds on the remote transmitter. In addition, this will also disarm the OEM style alarm.


Idle Mode

Convenience feature: Idle Mode allows you to keep the engine running and the doors locked while you stop, for example, at a convenience store or for a short delivery

This feature allows you to let the remote starter take over control of the vehicle (i.e. no Key in the Ignition Switch) while the engine is running.

If your vehicle has an automatic transmission, proceed as follows to set the system to Idle Mode:

1. With the engine running, make sure to release the brake pedal and press the   or  button on the transmitter until the parking lights come ON.
2. Remove the ignition key from the ignition switch.
The engine will continue running.
3. Exit the vehicle and close all doors, hood and trunk.
4. Press the  button to lock the doors, to arm the starter kill and to arm the OEM style alarm.

If your vehicle has a manual transmission, Idle Mode can be activated through the same routine as that used for **Ready Mode** (page-5); at the last step, press  button to lock the doors, arm the system and leave the engine running.

Note1: The engine will continue running until the user re-enters the vehicle or until the expiration of the engine run time.

Note2: If the pre-programmed run-time expires or if the user shuts down the engine by remote control, the vehicle will enter Ready Mode.

Caution!! Do not leave children or pets unattended in a vehicle standing in Idle Mode.

Valet Mode

When the vehicle is in Valet Mode, the remote starter and alarm functionalities are disabled. If the vehicle needs to be serviced, or if you park it indoors, the Valet Mode will prevent the engine from being remote-started accidentally.

Any of the following features will put your remote car starter into Valet Mode:

- Ignition Valet: This feature allows you to put your system into Valet Mode by using the ignition key.
- Remote valet: This feature allows you to put your system into Valet Mode by using the transmitter.



To put the system into Valet Mode

To put the system into Valet mode using the KEY (Ignition Valet Mode):

1. Insert the ignition key into the ignition switch. Within 10 sec., turn the key 5 times successively into the IGNITION/RUN and OFF positions.
2. The parking lights will flash three times.
3. Turn the ignition OFF.

4. The LED on the antenna will come ON solid to indicate that the vehicle has successfully entered Valet mode.

To put the system into Valet mode using the TRANSMITTER (Remote Valet Mode):



1. Press the  and  buttons simultaneously until the parking lights flash three times.
2. The LED on the antenna will come ON solid to indicate that the vehicle has successfully entered Valet mode.

To take the system out of Valet Mode

To take the system out of Valet mode using the KEY (Ignition Valet Mode):

1. Insert the ignition key into the ignition switch. Within 10 sec., turn the key 5 times successively into the IGNITION/RUN and OFF positions.
2. The parking lights will flash twice.
3. Turn the ignition OFF.
4. The LED on the antenna will flash quickly to indicate that the vehicle is now out of Valet mode.

To put the system out of Valet mode using the TRANSMITTER (Remote Valet Mode):

1. Press the  and  buttons simultaneously until the parking lights flash twice.
2. The LED on the antenna will flash quickly to indicate that the vehicle is now out of Valet mode.

The system will warn you if someone attempts to remote start the vehicle while in Valet Mode:

The parking lights will:
Turn ON then OFF; then
Flash twice.

Panic Mode

Note: Panic mode can only be activated if the horn has been adequately configured by the installer.

In an emergency situation, you can activate panic mode by pressing and holding the **AUX** button for more than 3 seconds, until the horn starts honking. If the vehicle is under a remote start, the engine will shutdown automatically before setting off the horn. You can stop the horn by pressing:



(this will lock your doors and deactivate panic mode), or



(this will unlock your doors and deactivate panic mode).

Furthermore, the panic mode can be stopped by activating **Valet Mode** (page-7)

* Panic Mode will automatically shut down after 30 sec.


Quick Lockout™

(Also called Secure Panic.) For fast protection in emergency situations, the system will LOCK all doors when you press the brake pedal while you hear the sound signal. (Quick Lockout is only available when panic mode has been set off.)

Cold Weather Mode


If the vehicle has a manual transmission, **Ready mode** (page-5) should be set before entering Cold Weather mode. When Cold Weather Mode is active, the engine starts every 2 hours and runs for 3 minutes (or for 8 or 20 minutes with diesel engines). Cold Weather Mode automatically ends after 24 hours (or 12 starts).

To enter Cold Weather Mode:

- Rapidly press **AUX** twice. The remote's LED will start flashing.
- Press and hold  until the parking lights will flash for 2 seconds, pause, and then **flash three times**.

To exit Cold Weather Mode, do any one of the following actions:

- Open the hood.
- Start the engine by remote.
- Turn the ignition key to the **IGNITION ON (RUN)** position.
- Rapidly press **AUX** twice. The remote's LED will start flashing.

Press and hold  until the parking lights will flash for 2 seconds, pause, and then flash twice.

If Safe Start is enabled, you can activate Cold Weather Mode by:


- Pressing and releasing the  button, then;
- Pressing and holding the  button until the parking lights flash 3 times.

To verify whether the system is in Cold Weather Mode (automatic transmissions only):

 
Press the brake pedal:


If the vehicle is in cold weather mode, the parking lights will remain ON while the brake pedal is pressed.

Extended Run Time

With the vehicle running under a remote start, pressing and holding the  button for more than 3 seconds will reset the run time counter to zero and restart the run time cycle from the beginning.



- The horn (if programmed) will honk once;
- The parking lights will flash slowly 3 times then remain lit.

To stop the vehicle at any moment, simply press the  button. This procedure can only be carried out once per remote start.





Example: If your Module is programmed for a runtime of 3 minutes and your vehicle has been running for 2 minutes already, pressing the  button will reset the counter to zero and the Engine will run for another cycle (in this case, 3 minutes).

Disable/Enable LED flashing

To disable the LED: Press  and  simultaneously until the parking lights flash three times

To Enable the LED: Press  and  simultaneously until the parking lights flash once.

Constant output

- Pressing and holding the  button for more than 3 seconds will lock all doors and will send a constant pulse as long as the  button is held down (maximum of 15 seconds). This constant pulse can be configured to activate certain functionalities such as rolling up the windows – Please refer to your installer to see if your vehicle is compatible with this option.
- Pressing and holding the  button for more than 3 seconds will unlock all doors and will send a constant pulse as long as the  button is held down (maximum of 15 seconds).

This constant pulse can be configured to activate certain functionalities such as rolling down the windows – Please refer to your installer to see if your vehicle is compatible with this option.

Advanced Features: Installation-programmable Options

The Remote Car Starter was designed with flexibility and OEM integration in mind. With its programmable options, this unit can single-handedly control nearly any electrical system in your vehicle.

Caution: The programming of your system should be left to a professional. Changing any one of the settings may affect the operation of your Remote Car Starter.

Ignition-controlled Door Locks

This is an added security feature. If your Remote Car Starter was installed with the Ignition-Controlled Door Locks option, the doors will automatically lock as soon as the ignition key is turned to the **IGNITION ON (RUN)** position while the brakes are pressed. The remote car starter will also lock any door that was unlocked and opened (then closed) the next time the brake pedal is pressed. When the key is turned to the **OFF** position, the doors will automatically be unlocked.


Secure Lock

(Disabled by default) Before your vehicle can be remote-started, the factory security system must first be disarmed. The Secure Lock feature may be required on certain vehicle models with factory security systems that automatically unlock the doors when the security system is disarmed.


To keep your vehicle protected when the factory security system is disarmed for a remote start, Secure Lock will relock your doors as soon as the vehicle is started. Once the engine is shut down by remote or after its runtime has expired, Secure Lock will also rearm your factory security system and relock the doors.


Safe Start

This feature will eliminate accidental remote starts, e.g. when children are playing with the transmitter.

Safe start enabled: If this feature is enabled, the user must press the  button twice within 3 seconds to remote-start the vehicle.

Swap start: If this feature is enabled;

1. Rapidly press **AUX** twice. The remote's LED will start flashing.
2. While the LED is flashing, press  to remote start the car.

The **AUX 2** output can be activated by pressing the  button.




Engine Run Time


On a gas engine, the Remote Car Starter can be programmed to run the engine for 3, 15, or 25 minutes (15 minutes by default). On a diesel engine, the Remote Car Starter can be programmed to run the engine for 8, 20, or 30 minutes (20 minutes by default).

Turbo Mode




If Turbo Mode is configured at installation, it will allow a turbocharger to idle down after the user leaves the vehicle: the unit will take over the vehicle and keep it running for 60 seconds (or until it is shut down by remote control), then shut down the engine.

If your vehicle has an automatic transmission, proceed as follows to set the system to Turbo Mode:

1. With the engine running, make sure to release the brake pedal and press the  ,  or  button on the transmitter until the parking lights come **ON**.

2. Remove the ignition key from the ignition switch.
The engine will continue running.
3. Exit the vehicle and close all doors, hood and trunk.
4. Press the  button; this will lock the doors, arm the OEM-style alarm (if configured) and confirm that the vehicle is in Turbo Mode.
5. The engine will shut down after 60 seconds.

If your vehicle has a manual transmission, follow all steps of the **Ready Mode** routine ([page-5](#)) to activate Turbo Mode. At the last step,

- Press  to lock the doors and have the engine shut down after 60 seconds; The parking lights will flash 3 times and remain lit.
The OEM-style alarm and starter kill (if configured) will be armed.
- Press  to unlock the doors and have the engine shut down after 60 seconds; The parking lights will flash 3 times and remain lit.
- Press  to shut down the engine without affecting the doors.





Note: The vehicle will enter Ready Mode once the engine run time expires.

“Home Valet™” Mode

If configured at installation, this feature will remotely set the vehicle to a no-remote-start mode: if the vehicle is parked indoors there is no danger of it starting accidentally by remote control. If the vehicle has a manual transmission, it should be set into ready mode before activating the Home Valet™.

Note: Once the Home Valet Mode is activated, the vehicle will not start by remote, but the OEM alarm functions will remain active.

To take the system into home valet mode:

1. Press the  or  button.
2. Within 3 seconds, press the  and  buttons simultaneously for 3 sec.
3. The P-lights will flash once

To take the system out of home valet mode:

- Turn the ignition key to the **IGNITION ON (RUN)** position.



The system will warn you if someone attempts to start your vehicle while it stands in home valet mode. The parking lights will:


Turn ON then OFF; then
Flash twice, pause; then
Flash twice again.

AUX 1



Note: This 500 mA negative Aux 1 output can be used for many different applications

Priority door:

This great feature allows the user to unlock solely the driver's door with a single press of the  button on the transmitter, and to unlock the other doors, if desired, by pressing the  button for a second time.

The output will provide a 1-second negative output when the  button is pressed a second time on the transmitter.

Horn Confirmation:

AUX 1 can be programmed to trigger the horn every time the  button is pressed, or when the  button is pressed twice within 3 seconds. When horn confirmation is activated, panic mode is enabled. If horn confirmation is disabled, panic mode will not be available.

Horn Chirp Timing








 

 
The pulse duration can be configured by your installer (from 5 ms to 200 ms).


Multi-car Operation

This option allows the owner of two vehicles, both equipped with the same remote starter model, to control both systems with a single remote control. To control the second vehicle:

Press TRUNK + LOCK buttons simultaneously:..... LOCK
Press TRUNK + UNLOCK simultaneously:..... UNLOCK
Press TRUNK + START/STOP simultaneously:..... START
Press TRUNK + START/STOP simultaneously:..... STOP






Or

Press  2X QUICK  > LOCK: LOCK
Press  2X QUICK  > UNLOCK: UNLOCK
Press  2X QUICK  > START/STOP:..... START
Press  2X QUICK  > START/STOP: STOP
Press  2X QUICK  > TRUNK: TRUNK

Note: If the multi-level features have been modified from their default state by your installer, the  button may have to be pressed twice, three or four times, according to the option you chose.

OEM-Style Alarm

The OEM-style alarm (if configured by your installer) monitors the doors, hood and ignition switch of your vehicle. It will sound the horn if a door or the hood is opened, or if the key is turned in the ignition.


- To arm the OEM-style alarm, press the  button on the transmitter.
 - The OEM-style alarm will ONLY arm if the  button on the transmitter is pressed.
 - The LED on the antenna will flash slowly to indicate that the OEM-style alarm is now armed.
- To disarm the OEM-style alarm, press the  button on the transmitter.
 - To stop the horn from sounding if the OEM-style alarm is triggered, press the  or  button, or put the system in and out of Valet Mode (page-7)

Intrusion Codes via horn

The system monitors the following:

- Doors
- Hood
- Ignition

Note: If an intrusion has occurred the HORN will sound for a maximum of 1minute.

If an intrusion has occurred and  pressed, the horn provides an intrusion code corresponding to the type of intrusion that occurred.

Diagnostic table:

1x = power interruption	4 x = Doors intrusion
3x = Hood	6x = Ignition

Multi-Level Features (default state)

The multi-level features allow you to access different features of your vehicle or of a second car by pressing the shift button. By default, the multi-level features are programmed as follows:

Basic Features (*press the **AUX** button 2X quickly*)

- AUX** 2X QUICK ➤ LOCK:..... aux 2
- AUX** 2X QUICK ➤ TRUNK:..... status request
- AUX** 2X QUICK ➤ START/STOP..... cold weather

Multi-Car Operation (*press the **AUX** button 2X quickly and then 1X slowly*)

- AUX** 2X QUICK ➤ **AUX** ➤ LOCK:..... 2nd car lock
- AUX** 2X QUICK ➤ **AUX** ➤ UNLOCK:..... 2nd car unlock
- AUX** 2X QUICK ➤ **AUX** ➤ START/STOP:..... 2nd car start/stop
- AUX** 2X QUICK ➤ **AUX** ➤ TRUNK:..... 2nd car trunk

Customized Features (*press the **AUX** button 2X quickly and then 2X slowly*)

(*May not be applicable for certain vehicles*)

Your installer can add customized features such as turning on the radio, opening sliding doors, etc.

- AUX** 2X QUICK ➤ **AUX** ➤ **AUX** ➤ LOCK:..... customized feature 1
- AUX** 2X QUICK ➤ **AUX** ➤ **AUX** ➤ UNLOCK:..... customized feature 2
- AUX** 2X QUICK ➤ **AUX** ➤ **AUX** ➤ TRUNK:..... customized feature 3
- AUX** 2X QUICK ➤ **AUX** ➤ **AUX** ➤ START/STOP:..... customized feature 4

Your installer can customize the system as to personalize these multi-level features in an order that best suits you. Your options are:

Option 1:

- Level 1 (requires pressing the **AUX** button 2X quickly) ➔ Multi car operation
- Level 2 (requires pressing the **AUX** button 3X quickly) ➔ Basic features
- Level 3 (requires pressing the **AUX** button 4X quickly) ➔ Customized features

Option 2:

- Level 1 (requires pressing the **AUX** button 2X quickly) ➔ Basic features
- Level 2 (requires pressing the **AUX** button 3X quickly) ➔ Multi car operation
- Level 3 (requires pressing the **AUX** button 4X quickly) ➔ Customized features

Option 3:




- Level 1 (requires pressing the **AUX** button 2X quickly) ➔ Customized features
- Level 2 (requires pressing the **AUX** button 3X quickly) ➔ Multi car operation
- Level 3 (requires pressing the **AUX** button 4X quickly) ➔ Basic features

Option 4:

- Level 1 (requires pressing the **AUX** button 2X quickly) ➔ Basic features
- Level 2 (requires pressing the **AUX** button 3X quickly) ➔ Customized features
- Level 3 (requires pressing the **AUX** button 4X quickly) ➔ Multi car operation

Example: If the multi-level features have been modified from their default state to option 3, the setup would be as follows:

For "Basic features":

- To access the **AUX-2** feature, the user needs to press on the **AUX** button **four** (4) times followed by the  button.
- To access the **status request** feature, the user needs to press on the **AUX** button **four** (4) times followed by the  button.
- To access **cold weather mode**, the user needs to press on the **AUX** button **four** (4) times followed by the  button.

Troubleshooting Poor Transmitting Range

Many factors may affect the operating range of the transmitter. Some of these are:

- The condition of the battery in the transmitter.
- The operating environment (for example: downtown radio-frequency noise, airports, cellular phone towers...)
- Metal: any type of metal will affect operating range. This includes the metal in the car.
- The shape of the vehicle can affect range as well; vans in general have an especially poor range.
- The shape of the roof and A-pillars brings about considerable radio-frequency deflection (in this case the signal from the remote control). As a result, the direction in which the vehicle is facing in relation to the remote control can affect the range. Straight on – standing in front of the vehicle – generally gives you the greatest range; the second best performance is from the back. Using the remote control from either side of the vehicle will usually give the lowest range.
- The range will be significantly lower in a crowded parking lot than in open space.
- Always hold the transmitter high, approximately at shoulder height. Holding the transmitter against your chin will also increase your range: your head acts as an antenna.
- The operating range will be somewhat lower on vehicles equipped with an aftermarket or factory alarm.

Diagnostics – Parking Light Flash Table

Parking lights flashes	Description
1	<ul style="list-style-type: none"> • Doors locked. • Trunk released. • Start signal received from the remote. • Runtime has expired
2 fast	<ul style="list-style-type: none"> • Doors unlocked • Valet mode is deactivated
2 slow	<ul style="list-style-type: none"> • Shutdown by remote
4 fast	<ul style="list-style-type: none"> • Shutdown by brake • A remote start was attempted while the brake pedal is engaged.
3 slow	<ul style="list-style-type: none"> • Runtime is extended.
3 fast	<ul style="list-style-type: none"> • Valet mode activated.
10 fast	<ul style="list-style-type: none"> • Shutdown by hood • A remote start was attempted while the hood is open.
ON → twice	<ul style="list-style-type: none"> • Cold weather mode deactivated
ON → 3 times	<ul style="list-style-type: none"> • Cold weather mode activated.
Solid ON	<ul style="list-style-type: none"> • Engine is running under remote start.
Flash for 30sec	<ul style="list-style-type: none"> • Panic mode is triggered.
Flash for 60sec	<ul style="list-style-type: none"> • Alarm is triggered.
ON → twice → twice	<ul style="list-style-type: none"> • A remote start was attempted while the system is in home valet.