Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news

Photo Speed Dial Handset for use with VTech CareLine™



This user's manual provides you with installation and use instructions. Please

read this manual thoroughly to ensure proper installation and operation of this VTech product.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.



elephones identified with this have reduced noise and ference when used with ost T-coil equipped hearing ids and cochlear implants. he TIA-1083 Compliant ogo is a trademark of the communications Industry Association. Used under license.



The ENERGY STAR $^{\circ}$ program www.energystar.gov) recognizes nd encourages the use of roducts that save energy and elp protect our environment. We are proud to mark this product with the ENERGY STAR $^{ ext{ iny B}}$ label indicating it meets the latest energy efficiency guidelines.


Congratulations


on purchasing your new VTech product. Before using this product, please read mportant safety instructions.

following items. Save your sales receipt and original packaging in the event warranty service is necessary.

Parts checklist

Your product package contains the

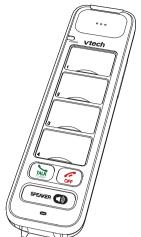

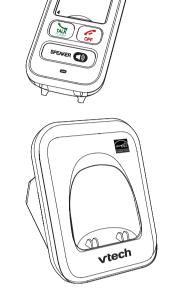



User's manual


nstall the batterv

Install the battery as shown below. **Ø**NOTES

  Use only supplied battery. • If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

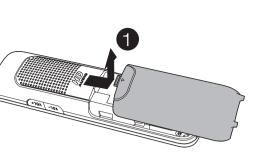

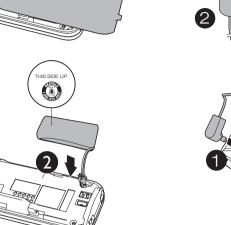





Connect and charge the battery

Charge the battery provided with this product

only in accordance with the instructions and

oriented in a vertical or floor mount position.

The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-

limitations specified in this manual.

• The adapter is intended to be correctly

Use only the adapter provided.

the-table or cabinet outlet.

Connect the charger

ØNOTES

Once you have installed the battery and placed the handset in the charger, the **CHARGE** light indicates the battery status (see the table below).


• For best performance, keep the handset in

the charger when not in use. • The battery is fully charged after 12 hours of

ontinuous charging.				
HARGE light	Battery status	Action		
ashes d every seconds	and the handset	Charge without interruption (at least 30 minutes).		

10 seconds	and the handset is not in charger. The handset cannot dial out.	(at least 30 minutes).
Red	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
Green	The battery is fully charged.	To keep the battery charged, place it in the charger when not in use.

ndset overview

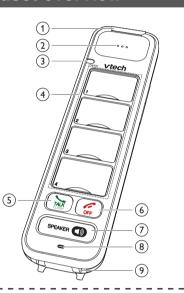

- 1 Incoming call light
- 2 Earpiece
- 3 CHARGE light
- 4 Photo speed dial keys Press to dial a preset number.
- Make or answer a call.
- Press to put the current call on hold During a call, press to answer an incoming call when you receive a call waiting alert.

5 - TALK

- Hang up a call.
- Silence the ringer temporarily while the phone is ringing.
- Mute the paging tone.

7 — SPEAKER 🜒

- Make or answer a call using the speakerphone.
- Switch between the speakerphone and the earpiece.
- 8 Microphone
- 9 Charging pole 10 - Speakerphone
- 11 Battery compartment cover 12 – VOL+
- Increase the ringer volume and the listening volume.

13 – VOL-

- Decrease the ringer volume and the listening volume.
- Silence the ringer temporarily while the phone is ringing.
- Mute the paging tone.

Charger overview



1 – Charging pole

Lights overview

The following table summarizes the lights patterns on the handset under various conditions.

CHARGE | • Red when the handset battery

Flashes red every 10 seconds

is charging.

		 when the handset battery is low and not charging. Green when the handset battery is fully charged. Alternates red and green quickly when handset registration is in progress. Alternates red and green slowly when the handset is not registered and not in charger.
	Incoming call light	 Flashes orange slowly when the handset received an incoming call.
	TOUS	 Green when the handset is on earpiece mode. Flashes green slowly when the handset received an incoming call. Flashes green twice every 3 seconds when line in use while the handset is idle.

Before use

"Out of range"

"Low battery"

Voice prompts

The following table summarizes voice

prompts you hear under certain conditions.

"Not registered" | Any key is pressed when the

Condition

handset is not registered.

Any key is pressed when

A photo speed dial key, IA

, or speaker (1) is pressed

when the handset battery

the handset is out of range.

There are two types of Careline series telephone. The instructions to register and configure your SN6307 handset are different for those two types of Careline systems series telephone. Use the diagrams on the right to identify

is low.

your Careline telephone, and then refer to the respective section for instructions.

Operating range

This cordless handset operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office. When the handset is out of range, the

handset plays the voice prompt "Out of

range" if any key is pressed. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press M. Move closer to the telephone base, then press to answer the call. During a call, if the handset is moved out

of range, the call will end automatically, and you will hear a notification tone.

Identify your Careline telephone



Read the instructions for SN1157/SN1197/SN6147/SN6196/SN6197 telephone



Read the instructions for SN6127/SN6187 telephone

For SN1157/SN1197/SN6147/SN6196/SN6197 telephone:

SPEAKER (1)


Add and register a handset

Register each new SN6307 handset to your Careline series telephone base before use. Your telephone system supports a maximum of 12 devices.


Charge the new handset without interruption for

at least 30 minutes before registering it to the telephone base. . Press **MENU** on the telephone base

when it is not in use.

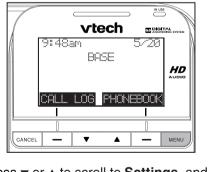

Press ▼ or ▲ to scroll to Settings, and then press **SELECT**.

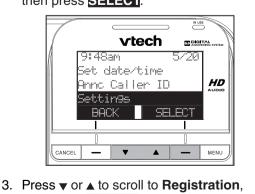


then press **SELECT**. The telephone base shows **Registering...** Please wait.

vtech **Edition** SETTINGS

vtech

User's manual

4. Put the handset in the charger. The handset **CHARGE** light alternates red and green quickly to indicate the registration is in progress.

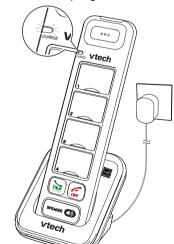

You hear a confirmation tone when the registration process completes. It takes up to 60 seconds to complete the registration. If registration fails, you hear an error tone, and the **CHARGE** light alternates red and green slowly when it is taken out of the cradle. Start again from Step 1 above.

- You cannot register a handset if any other system devices is in use.
- · The telephone base shows Registration slots are full when you try to register more than 12 devices to it.


• To cancel the registration, press CANCEL or

Set photo speed dial entries

speed dial entries stored in the telephone

If you have assigned the photo speed dial entries at the telephone base before, your handset is ready to use. Skip this part and read Insert photos for speed dial keys. **⊘**NOTES

- You can store the same phone number in
- If you have a pendant (SN6167) registered to your telephone base, the speed dial entries of the pendant are the same as the first two photo speed dial entries of the telephone base and the handset
- Editing or deleting an entry in phonebook
- 1. Press **MENU** on the telephone base when it is not in use.

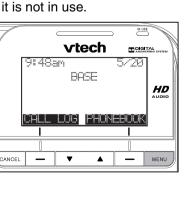

Your handset has four photo speed dial keys. It retrieves the same set of photo


- more than one photo speed dial slots.
- does not affect the photo speed dial entries.




Press an unassigned photo speed dial key on the telephone base, and then go to Step 4.



2. Press ▼ or ▲ to scroll to Photo speed dial, and then press **SELECT**.

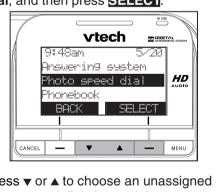


3. Press ▼ or ▲ to choose an unassigned photo speed dial slot, and then press SELECT.

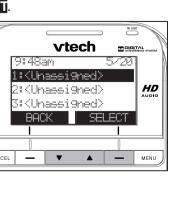

4. When the base displays **MEMORY X NUMBER**, use the dialing keys to enter a number (up to 30 digits).

- Press ▼ or ▲ to move the cursor to the left or right. Press X/DELETE or BACKSPACE to
- erase a digit. Press and hold X/DELETE to erase all digits.
- Press and hold PAUSE to enter a dialing pause (a **P** appears).

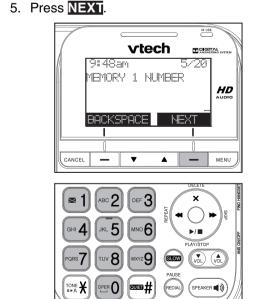

6. When the base displays **MEMORY X NAME**, use the dialing keys to enter a name (up to 15 characters). Press once or several times on the

dialing keys to enter the selected

character. By default, the first character of each word is uppercase, and the rest is

- lowercase.
- Press **0** to add a space.
- Press X/DELETE or BACKSPACE to erase a character.
- Press **SAVE**. The screen displays Memory X saved and you hear a



- Press ▼ or ▲ to move the cursor to the left or right.
- Press TONE * to switch between the uppercase and lowercase characters.
- Press and hold X/DELETE to erase all characters.



Add and register a handset


For SN6127/SN6187 telephone:

Register each new SN6307 handset to your Careline series telephone base before use. Your telephone system supports a maximum of 12 devices.


ØNOTE

Charge the new handset without interruption for at least 30 minutes before registering it to the telephone base

Press and hold FIND HANDSET at the telephone base until the IN USE light turns red.

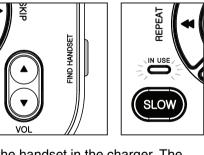

2. Put the handset in the charger. The handset **CHARGE** light alternates red and green quickly to indicate the registration is in progress.

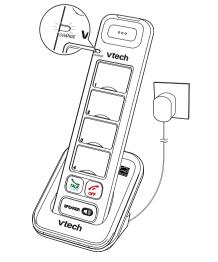

You hear a confirmation tone when the registration process completes. It takes up to 60 seconds to complete the registration. 2. Press ▼ or ▲ to scroll to Phonebook, If registration fails, you hear an error tone, and the CHARGE light alternates red and green slowly when it is taken out of the cradle. Start again from Step 1 above.

 You cannot register a handset if any other system device is in use.

 When you already have 12 registered devices and you try to register another handset to the telephone base, you hear four beeps from the telephone base.

et photo speed dial entries Your handset has four photo speed

telephone base. Make sure you store the photo speed dial entries in the phonebook naming Photo 1. Photo 2, Photo 3 and Photo 4 respectively. **⊘**NOTES

Names for the photo speed dial entries are

dial keys. It retrieves the photo speed

dial entries from the phonebook in the

- case-sensitive A space must be entered between "Photo" and the number when entering the name of a photo speed dial entry.
- Deleting an entry in phonebook will remove the associated photo speed dial entry.

- 1. On a SN6127/SN6187 handset, press **MENU** when idle.
- and then press **SELECT**. Press ▼ or ▲ to scroll to Add contact. and then press **SELECT**.

Orange when the handset is

on speakerphone mode.



4. When the handset displays ENTER **NUMBER**, use the dialing keys to enter a number (up to 30 digits).



- Press ▼ or ▲ to move the cursor to the left or right.
- Press **DELETE** to erase a digit. Press and hold DELETE to erase all
- Press and hold PAUSE to enter a dialing pause (a **P** appears).

Copy a number from the redial list by pressing **REDIAL** then press **▼**, **▲** or **REDIAL** repeatedly to find the desired number. Press **SELECT** to copy the number.

5. Press **SELECT** to save.

6. When the handset displays **ENTER NAME**, use the dialing keys to enter Photo 1, Photo 2, Photo 3 or Photo 4. Press once or several times on the dialing keys to enter the selected character

By default, the first character of each word is uppercase, and the rest is lowercase.



- Press ▼ or ▲ to move the cursor to the left or right.
- Press 0 to add a space. • Press TONE ** to switch between the


characters.

- uppercase and lowercase characters. Press DELETE to erase a character. • Press and hold DELETE to erase all
- Press **SELECT** to save. The handset displays **Saved** and you hear a confirmation tone.

You can add desired photos into the photo speed dial compartments, or write the contact name on the photo speed dial cards.

To add a photo, use the photo speed dial card as a tool to crop your desired photo, and then insert it as shown below.

ØNOTE The handset is shipped with protective stickers covering the photo speed dial compartments. Remove the protective sticker before use.

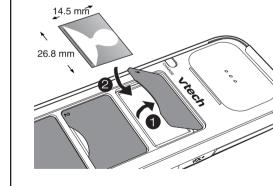

Adjust ringer volume You can adjust the ringer volume level, or

 When the handset is not in use, press VOL- or VOL+.

Settings

turn the ringer off.

When the ringer volume is set to off, the handset still rings when you press FIND HANDSET or FIND HS at the telephone base.

nsert photos for speed dial Your handset follows the quiet mode setting

Quiet mode

you know who the caller is. When you have an incoming call, the handset speaks "Call from..." and the name of the caller based on the phonebook or caller ID information. If the caller's name is private or unknown, the phone number up to the last 11 digits will be announced. If the caller's phone number is also private or unknown, no

To turn on or off this feature, refer to the

Caller ID announce section in the user's

 
manual of the telephone base.


 To use the caller ID announce feature, you must subscribe to caller ID service from your telephone service provider

information will be announced.

registered, the telephone system supports caller ID announce for all handsets/pendants. If six or more handsets/pendants are registered, the system supports caller ID announce for the first four registered handsets/pendants only.

When there are up to five handsets/pendants



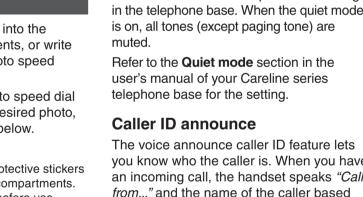

Make a call

Press a photo speed dial key to dial.

 Press or SPEAKER , and then a photo speed dial key to dial.

Answer a call • Press TALK or SPEAKER (1).

End a call

Press or place the handset back in the charger.

Speakerphone

 During a call, press SPEAKER to switch between the speakerphone and the

Adjust listening Volume

During a call, press VOL- or VOL+.

When you subscribe to call waiting service

Call waiting

from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call.

- Press to put the current call on hold and take the new call.
- Press at any time to switch back and forth between calls.

Temporary ringer silence

When the telephone is ringing, you can temporarily silence the handset ringer without disconnecting the call. The next call rings normally at the preset volume.

If this product has memory dialing locations,

numbers (e.g., police, fire, medical) in these

locations. If you do store or test emergency

you may choose to store emergency telephone

numbers, please: Remain on the line and briefly

explain the reason for the call before hanging

Perform such activities in off-peak hours, such

This device complies with Industry Canada

Operation is subject to the following two

interference that may cause undesired

conditions: (1) this device may not cause

harmful interference, and (2) this device must

Privacy of communications may not be ensured

accept any interference received, including

as early morning or late evening.

licence-exempt RSS standard(s).

Industry Canada

Press VOL- or

Join a call in progress You can use a maximum of four devices at a time on a call.

- Press or SPEAKER (1) to join the call.
- To exit the call, press or place the handset back in the charger. The call continues until all devices hang up.

Find handset

You can use the **Find handset** feature on the telephone base to find misplaced handsets.

- Press a photo speed dial key, A, or SPEAKER **(1)** to stop paging.
- Press or VOL- to mute the paging

Deregister handsets

Your telephone system supports a maximum of 12 devices.

want to register a SN6307 handset, you have to deregister all devices first. Then register your desired devices individually. ()CAUTION

If you have registered 12 devices, and you

• Deregister with caution! Once done. all devices will be deregistered from your telephone system.

- You cannot deregister all devices if any other system device is in use.
- Even if your devices have run out of battery. you can still deregister them by following the nstructions in this section.
- To register any cordless handset or pendant back to the telephone base, refer to the user's manual of your Careline series telephone for details.

For SN1157/SN1197/SN6147/ SN6196/SN6197 telephone:

▶/■

IN USE

DIGITAL ANSWERING SY

vtech

Deregister

all devices?


NO YES

_ ▼ **A** _ _ N

2. Immediately press **YES** or **FIND HS**

the telephone base until the **IN USE** 1. Press and hold **FIND HS** at the light flashes red. telephone base until the IN USE light flashes and the telephone base shows

2. Immediately press #FIND HANDSET again within 5 seconds. Registering... Please wait followed by Deregister all devices?.

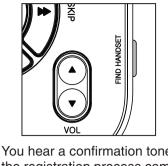

You hear a confirmation tone when the registration process completes. It takes about 10 seconds to complete the deregistration.

Press and hold FIND HANDSET at

If deregistration fails, you need to reset the system and try again. To reset, unplug the power and the telephone line cord from the telephone base. Then plug the cords back in again.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

General product care

Taking care of your telephone Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

for C-UL compliance only

Mesures de sécurité importantes

blessures corporelles ou d'électrocution, suivez

2. Observez toutes les instructions et mises en

3. Débranchez ce téléphone de la prise murale

nettoveurs liquides ni en aérosol. N'utilisez

qu'un chiffon doux et légèrement humecté

que près d'un bain, d'un lavabo, d'un évi

de cuisine, d'un bac de lavage ou d'une

piscine, ou dans un sous-sol humide ou

Ne déposez pas ce téléphone sur un chariot,

ne l'installez pas dans une unité murale ou un

support ou table chancelants. L'appareil

pourrait tomber et être sérieusement

4. N'utilisez pas ce produit près de l'eau, tel

avant de le nettoyer. N'utilisez pas de

Afin de réduire les risques d'incendie, de

lorsque vous utilisez votre téléphone :

garde inscrites sur l'apparei

instructions

sous la douche.

endommagé.

. Lisez et comprenez bien toutes les

toujours ces mesures préventives de base

For SN6127/SN6187 telephone Avoid water

IN USE

should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any

When you are not going to use the handset for some time, remove the rechargeable battery from the handset. Store the handset the charger and the adapter in a cool and dry

Frequently asked questions

Below are the questions most frequently asked www.vtechphones.com or call 1 (800) 595-9511 for customer service. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

oes not work	is installed properly,
t all.	battery is installed a
	is installed properly, battery is installed a charged correctly. F optimum daily perfo return the handset to charger after use.

My handset

registered to a Careline series telephone base.

mportant safety instructions

when there is an | handset is not in use.

ncoming call.

cannot dial out. For different type of Careline

instructed.

series telephone base, the

Make sure you have set the

photo speed dial setup

| photo speed dial entries

in the telephone base as

For increased sound qualit

speakerphone, place the

handset on a flat surface

with the keys facing up.

Press VOL+ to increase

the ringer volume when the

Make sure the quiet mode

is off. Check the setting on

your telephone base.

while using the handset

procedure is different.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions. 2. Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry non-abrasive cloth for Do not use this product near water such as
- laundry tub or a swimming pool, or in a wet basement or showe Do not place this product on an unstable

near a bath tub, wash bowl, kitchen sink,

- table, shelf, stand or other unstable surfaces. Slots and openings in the back or bottom of
- the charger and handset are provided for ventilation. To protect them from overheating these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not

L'étude effectuée par l'organisme WRS n'a

This product should be operated only from

type of power supply in your home or office

consult your dealer or local power company

cord. Do not install this product where the

product through the slots in the charger or

handset because they may touch dangerous

Never spill liquid of any kind on the product.

not disassemble this product, but take it to

an authorized service facility. Opening or

removing parts of the charger or handset

other than specified access doors may

other risks. Incorrect reassembling car

cause electric shock when the product is

expose you to dangerous voltages or

1. Do not overload wall outlets and extension

. Unplug this product from the wall outlet

facility under the following conditions:

When the power supply cord or plug is

If liquid has been spilled onto the product

If the product has been exposed to rain or

If the product does not operate normally

Adjust only those controls that are

extensive work by an authorized

If the product has been dropped and

13. Avoid using a telephone (other than

the charger and/or handset has been

· If the product exhibits a distinct change in

cordless) during an electrical storm. There

leak in the vicinity of the leak. Under certain

when the adapter is plugged into the power

outlet, or when the handset is replaced in its

ircumstances, a spark may be created

is a remote risk of electric shock from

14. Do not use the telephone to report a gas

covered by the operation instructions

Improper adjustment of other controls

may result in damage and often requires

technician to restore the product to normal

by following the operating instructions.

and refer servicing to an authorized service

3. Do not allow anything to rest on the power

Never push objects of any kind into this

voltage points or create a short circuit.

10. To reduce the risk of electric shock, do

cord may be walked on.

subsequently used.

damaged or fraved.

operatior

damaged

performance.

the type of power source indicated on the

marking label. If you are not sure of the

avantages pour les téléphones sans fil téléphoniques sans fil comme étant aussi

Alimentation électrique : Le socle de ce téléphone sans fil doit être branché à si le courant est coupé.

Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du les interférences.

Piles rechargeables : Manipulez les piles adéquate entre la pile et le chargeur.

métallique de nickel : Jetez ces blocs-piles des blessures corporelles si elles sont

What is not covered by this limited warranty?

1. Product that has been subjected to misuse,

accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or Product that has been damaged due

to repair, alteration or modification by

representative of VTech; or Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna

Product to the extent that the problem is caused by use with non-VTech accessories

serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or

States of America or Canada, or used for commercial or institutional purposes for rental purposes); or 7. Product returned without a valid proof of

purchase (see item 2 on the next page); or

How do you get warranty service? NOTE: Before calling for service, please review

controls and features may save you a service Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred

in the transport of the Product(s) to the

Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is Potential TV interference: Some cordless

o minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference Rechargeable batteries: Exercise care in handling batteries in order not to create a

short circuit with conducting material such

as rings, bracelets and keys. The battery o

burned or punctured, they could release

caustic material which could cause injury

telephones operate at frequencies that may

cause interference to televisions and VCRs

Should use the wireless telephone at the ear

WTR's evaluation did not identify any risk to

Privacy: The same features that make a

cordless handset by radio waves, so there

conversations could be intercepted by radio

cordless handset. For this reason, you should

not think of cordless telephone conversations

• Electrical power: The telephone base of this

working electrical outlet. The electrical outlet

cordless telephone must be connected to a

should not be controlled by a wall switch.

is a possibility that the cordless telephone

receiving equipment within range of the

as being as private as those on corded

between the telephone base and the

opposite the pacemaker.

using wireless telephones.

interrupted.

About cordless telephones

conductor may overheat and cause harm Observe proper polarity between the battery and the battery charger Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if

The RBRC® seal

The RBRC® seal on the nickel-metal hydride bystanders with pacemakers from other persons battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. cordless telephone convenient create some The RBRC® program provides a convenient limitations. Telephone calls are transmitted alternative to placing used nickel-metal hydride batteries into the trash or municipal waste,

VTech's participation in RBRC® makes it easy

which may be illegal in your area.

for you to drop off the spent battery at local operate the equipment. retailers participating in the RBRC® program or at authorized VTech product service centers. Please call **1 (800) 8 BATTERY™** for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® is a registered

Battery Recycling

Corporation.

FCC and IC regulations

This equipment has been tested and found to

comply with the requirements for a Class B

digital device under Part 15 of the Federal

Communications Commission (FCC) rules.

reasonable protection against harmful

interference in a residential installation

This equipment generates, uses and can

radiate radio frequency energy and, if not

instructions, may cause harmful interference

to radio communications. However, there is

no guarantee that interference will not occur

in a particular installation. If this equipment

does cause harmful interference to radio or

television reception, which can be determined

prepaid. VTech assumes no risk for damage

by turning the equipment off and on, the user is

installed and used in accordance with the

These requirements are intended to provide

trademark of Rechargeable



FCC Part 15

Canadian requirement:

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request The plug and jack used to connect this

equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed

that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the

to be connected to a compatible modular jack

installation instructions in the user's manual

to your telephone line and still have them ring

when you are called. The REN for this product is

encoded as the 6th and 7th characters following

the US: in the product identifier (e.g., if ## is 03,

the REN is 0.3). In most, but not all areas, the sun

of all RENs should be five (5.0) or less. For more

information, please contact your telephone service

This equipment may not be used with Party

Lines. If you have specially wired alarm dialing

does not disable your alarm equipment. If you

have questions about what will disable alarm

equipment, consult your telephone service

If this equipment is malfunctioning, it must

be unplugged from the modular jack until the

problem has been corrected. Repairs to this

procedures, follow the instructions outlined

If this equipment is causing harm to the

telephone network, the telephone service

provider may temporarily discontinue your

interrupting service. If advance notice is not

possible. You will be given the opportunity to

correct the problem and the telephone service

provider is required to inform you of your right

to file a complaint with the FCC. Your telephone

facilities, equipment, operation, or procedures

service provider may make changes in its

that could affect the proper functioning of

this product. The telephone service provide

is required to notify you if such changes are

If this product is equipped with a corded or

telephone service. The telephone service

provider is required to notify you before

practical, you will be notified as soon as

telephone equipment can only be made by the

manufacturer or its authorized agents. For repai

provider or a qualified installer.

under the Limited warranty.

equipment connected to your telephone line

ensure the connection of this equipment

The Ringer Equivalence Number (REN) is used

to determine how many devices you may connec

- one or more of the following measures: • Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a
- circuit different from that to which the receiver is connected.

encouraged to try to correct the interference by

Consult the dealer or an experienced radio/

TV technician for help. Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone. To ensure safety of users, the FCC has

established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC This Class B digital apparatus complies with

CAN ICES-3 (B)/NMB-3(B) **FCC Part 68 and ACTA**

cordless handset, it is hearing aid compatible ______ incidental, consequential, or similar damages Technical specifications (including, but not limited to lost profits or

associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation

Please retain your original sales receipt as proof of purchase

above limitation or exclusion may not apply to

1921.536-1928.448 MHz Channels 5

effective FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.

Batterv

Power adapter: 6V AC @ 300mA

VTech Communications, Inc. A member of THE VTECH GROUP OF COMPANIES. VTech is a registered trademark of VTech Holdings Limited Specifications are subject to change without notice. © 2014 VTech Communications, Inc. All rights reserved. 05/14. SN6307_CIB_V2.0 Document order number: 91-007352-020-100

The term "IC:" before the certification registration number only signifies that the Industry Canada technical specifications were The Ringer Equivalence Number (REN) for

when using this telephone.

this terminal equipment is NAN. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

Applicable". This product meets the applicable Industry Canada

Remark: The word "NAN" means "Not

technical specifications. RF radiation exposure statement

The handset complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

California Energy Commission pattery charging testing instructions

This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be

When first purchased and properly installed for charging (see **Install the battery**), put the handset on the charger to charge. The CEC battery charging testing mode is activated while

If you have registered the handset to a Careline series telephone base, below are the testing

For SN1157/SN1197/SN6147/SN6196/SN6197 To activate the CEC battery charging

testing mode **⊘**NOTE

Your telephone base and the corded handset can still function normally when the CEC battery charging testing mode is activated. Press and hold FIND HS at the telephone

- base until the **IN USE** light flashes and the telephone base shows Registering... Please wait followed by Deregister all Immediately press **YES** or **FIND HS**
- within 5 seconds. To deactivate the CEC battery charging testing mode

Register your handsets back to the telephone base. Refer to the Add and register a handset section of your Careline series user's manual and this

For SN6127/SN6187 telephone:

deregistration

in again.

To activate the CEC battery charging

You hear a confirmation tone when

the registration process completes. It

takes about 10 seconds to complete the

If deregistration fails, you need to reset

the system and try again. To reset, unplug the

telephone base. Then plug the cords back

power and the telephone line cord from the

- testing mode Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding.
- **HANDSET**, plug the telephone base power adapter back to the power outlet. After about 20 seconds, when the IN USE light starts flashing quickly, release #/FIND HANDSET and then

While you press and hold /FIND

When the phone successfully enters the CEC battery charging testing mode, the **IN USE** light turns off.

press it again within 5 seconds.

When the phone fails to enter this mode, repeat Step 1 through Step 3 above. The telephone base will be powered up as

Then the telephone base is powered up

- normal if you fail to press **FIND HANDSET** 6. Le boîtier de l'appareil est doté de fentes et within 2 seconds in Step 3. d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, To deactivate the CEC battery charging ces ouvertures ne doivent pas être obstruées en placant l'appareil sur un lit, divan, tapis Unplug the telephone base power adapter ou autre surface similaires. Ne placez pas from the power outlet, then plug it back in. cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus
- cabinet fermé qui ne possède pas d'aération Register your handsets back to the telephone base. Refer to the **Add and** 7. Ne faites fonctionner cet appareil qu'avec le register a handset section of your type d'alimentation indiqué sur les étiquettes Careline series user's manual and this de l'appareil. Si vous ne connaissez pas le manual. voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
 - 8. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire. 9. N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils
 - dans l'appareil. 10. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service

d'électrocution. N'échappez pas de liquides

pourraient toucher à des points de tension

dangereux ou court-circuiter des pièces,

ce qui constituerait un risque d'incendie ou

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower

Electrical storms Electrical storms can sometimes cause powe surges harmful to electronic equipment. For

your own safety, take caution when using electrical appliances during storms. Cleaning your telephone

experience poor sound quality when

using the Your telephone has a durable plastic casing that handset speakerphone The handset does not ring

about the cordless telephone. If you cannot find the answer to your question, visit our website at

ormance to the Make sure the handset has

qualifié s'il doit être réparé. En enlevant

tensions dangereuses ou autres dangers

similaires. Un remontage inadéquat per

être à l'origine d'une électrocution lors

Débranchez l'appareil avant de procéde

au nettoyage. Utilisez un chiffon humide et

d'une utilisation ultérieure de l'appareil

11. Ne surchargez pas les prises de courant et les

12. Débranchez cet appareil de la prise

VTech dans les cas suivants

endommagé ou écorché

de courant et communiquez avec le

département de service à la clientèle de

Lorsque le cordon d'alimentation est

Si du liquide a été échappé dans

Si l'appareil a été exposé à une source

d'humidité telle que la pluie ou l'eau.

normalement en respectant les

instructions de fonctionnement

Réglez uniquement les commandes

des autres commandes pourraient

provoquer un dommage qui pourrait

technicien autorisé afin de rétablir le

fonctionnement normal de l'appareil

et/ou le combiné a été endommagé.

13. Évitez d'utiliser un téléphone (autre qu'un

14. N'utilisez pas le téléphone pour rapporter

sans fil) pendant un orage. Les éclairs

de sa performance.

indiquées dans le les instructions de

fonctionnement. Les réglages incorrects

exiger un travail exhaustif de la part d'un

Si le produit a été échappé et que le socle

Si le produit affiche une nette diminution

peuvent être à l'origine d'une électrocution.

une fuite de gaz à proximité de la fuite. En

pourrait être provoquée lorsque l'adaptateur

lorsque le combiné est déposé sur le socle.

des concentrations de gaz inflammables,

Une flammèche dans un tel endroit pourrait

provoguer un incendie ou une explosion. De

tels environnements peuvent comprendre:

à moins que la ventilation soit adéquate.

des endroits où l'on utilise de l'oxygène

Ceci est un événement commun associé à la

certaines circonstances, une flammèche

est branché à une prise de courant, ou

• Si le produit ne fonctionne pas

le couvercle, vous vous exposez à des

Make sure the charger

médical sans ventilation adéquate: des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz naturel, etc

15. Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en 16. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour

maintenir l'adaptateur en place si celui-ci est

barnché dans une prise au plafond ou sous

CONSERVEZ CES INSTRUCTIONS

• MISE EN GARDE : N'utilisez que la pile

une table/ armoire.

- Ne ietez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales.
- N'ouvrez pas et ne mutilez pas la pile L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte • Soyez prudents lorsque vous manipulez les

par des matériaux conducteurs.

selon les instructions et limites spécifiées dans ce quide d'utilisation. Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement

piles afin d'éviter les courts-circuits provoqués

aux téléphones numériques sans fil) organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiagues implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des Etats-Unis, la firme WTR recommande aux médecins :

fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une Ils doivent tenir le téléphone sans fil à prise de courant, et ne devrait pas déposer le une distance d'au moins six pouces du combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant stimulateur cardiaque.

• Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque. tel que dans une poche de chemise, lorsque • Ils doivent utiliser le téléphone sans fil en

l'appuyant sur l'oreille qui se trouve dans la

Avis aux détenteurs de stimulateurs cardi-

direction opposée au stimulateur cardiaque pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de

À propos des téléphones sans fil Confidentialité : Les mêmes

caractéristiques qui constituent des affichent également des restrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées par des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications confidentielles que celles des téléphones à

une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou

Possibilité d'interférences aux téléviseurs : magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur magnétoscope afin de réduire possiblement

avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité Les bloc-piles rechargeables à l'hydrure

de manière écologique et sécuritaire. Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer brûlées ou percées.

What does this limited warranty cover? The manufacturer of this VTech Product

warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United

cradle. This is a common event associated

with the closing of any electrical circuit. The

user should not plug the phone into a power

outlet, and should not put a charged handse

into the cradle, if the phone is located in an

environment containing concentrations of

there is adequate ventilation. A spark in

medical use of oxygen without adequate

solvents; gasoline vapors; etc.); a leak of

Only put the handset next to your ear when

correctly oriented in a vertical or floor mount

position. The pronas are not designed to

hold the plug in place if it is plugged into a

ceiling, under-the-table or cabinet outlet.

SAVE THESE INSTRUCTIONS

Do not dispose of the battery in a fire. Check

Do not open or mutilate the battery. Released

electrolyte is corrosive and may cause burns

or injury to the eyes or skin. The electrolyte

not to create a short circuit with conductive

Charge the battery provided with this product

only in accordance with the instructions and

Exercise care in handling batteries in order

imitations specified in this manual

Precautions for users of implanted

Cardiac pacemakers (applies only to digital

Wireless Technology Research, LLC (WTR)

multidisciplinary evaluation of the interference

implanted cardiac pacemakers. Supported b

the U.S. Food and Drug Administration, WTR

Should keep wireless telephones at least six

directly over the pacemaker, such as in a

Should NOT place wireless telephones

breast pocket, when it is turned ON.

between portable wireless telephones and

an independent research entity, led a

recommends to physicians that:

inches from the pacemaker.

mited warranty

with local waste management codes for

• CAUTION: Use Only Supplied Battery.

special disposal instructions

may be toxic if swallowed.

cardiac pacemakers

cordless telephones):

Pacemaker patients

ventilation; industrial gases (cleaning

The power adapter is intended to be

natural gas; etc.

Battery

it is in normal talk mode

such an environment could create a fire or

flammable or flame-supporting gases, unless

explosion. Such environments might include:

States of America and Canada. What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's

authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or simila design. We will retain defective parts, modules or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a

Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped (b) the time remaining on the original one-year warranty; whichever is longer.

This limited warranty does not cover:

anyone other than an authorized service

5. Product whose warranty/quality stickers, product serial number plates or electronic

- shipped for repair from outside the United (including but not limited to Products used
- 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the

the user's manual - a check of the Product's

will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered

What must you return with the Product to get warranty service? 1. Return the entire original package and contents including the Product to the VTech service location along with a description o

by this limited warranty.

the malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or

Other limitations This warranty is the complete and exclusive

agreement between you and VTech It supersedes all other written or oral communications related to this Product, VTech provides no other warranties for this Product The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives

3. Provide your name, complete and correct

mailing address, and telephone number.

you specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including

those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above service location. VTech will return repaired or limitation may not apply to you. In no event replaced Product under this limited warranty. Transportation, delivery or handling charges are shall VTech be liable for any indirect, special,

or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or revenue, inability to use the Product or other proof of purchase does not meet the terms of this limited warranty, VTech will notify you and of incidental or consequential damages, so the

Frequency Crystal controlled PLL synthesizer

Nominal Maximum power allowed by

requirements 2.4V 400mAh, Ni-MH battery pack

Designed to fit your home.