

vtech®

User's Manual

Scroll & Learn Camera™



© 2012 VTECH
Printed in China
91-001651-000 US

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**[®]

To learn more about **Preschool Learning**[™] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Scroll & Learn Camera™**.

Your child will feel like a real photographer with the **Scroll & Learn Camera™**! This role-play camera's engaging buttons, turning lens, sound effects and LED light will encourage your child to snap away as they learn. Four modes of play encourage your child to take pretend photos, create funny pictures, learn vocabulary words and explore the world around them. The LCD display and arrow buttons allow your child to scroll from one image to the next as they explore 40 different objects from a variety of places, such as the zoo, beach, and playground. Fun sounds and music add to the excitement!

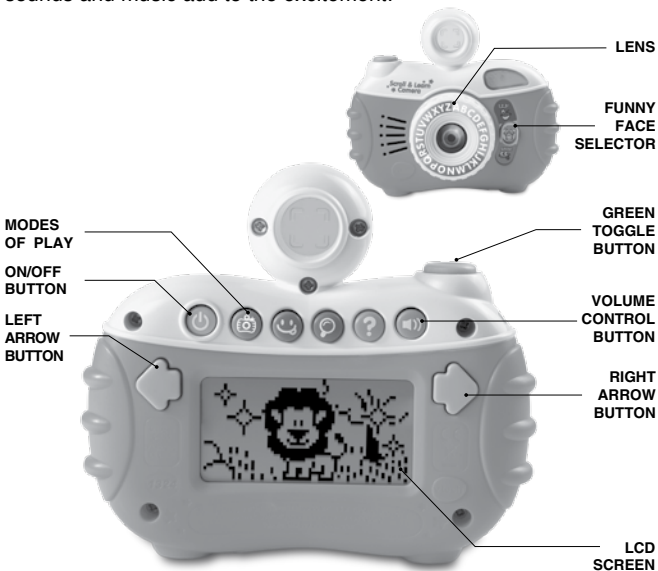

INCLUDED IN THIS PACKAGE

- Scroll & Learn Camera™
- Scroll & Learn Camera™ instruction manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep the user's manual as it contains important information.

Unlock the packaging locks:

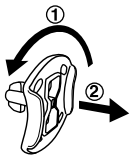


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

POWER SOURCE

 The **Scroll & Learn Camera™** operates on 2 "AA" sized batteries (AM-3/LR6). The "AA" sized batteries included in the unit are for demo purposes only and are not long-life batteries.



BATTERY INSTALLATION

NOTE: For best performance, remove all factory-installed batteries and use new, alkaline batteries.

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit and open it.
3. Insert 2 “AA” sized batteries as illustrated.
4. Close the battery cover.



RECHARGEABLE BATTERIES ARE NOT RECOMMENDED.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF BUTTON

 
To turn the unit on, press the **ON/OFF BUTTON**. You can also turn the **LENS** or slide the **FUNNY FACE SELECTOR** to wake up the unit.

Press the **ON/OFF BUTTON** again to turn the unit off.



2. LENS

Turn the **LENS** to create a zoom in or zoom out effect on the LCD.

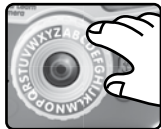

3. FUNNY FACE SELECTOR

Slide the **FUNNY FACE SELECTOR** to see a funny face on the LCD. Press the **GREEN TOGGLE BUTTON** to take a picture!



4. GREEN TOGGLE BUTTON

Press the **GREEN TOGGLE BUTTON** to take a picture. Hold it down to take additional pictures quickly. Click, click, click!



5. LEFT/RIGHT ARROW BUTTONS

Use the **ARROW BUTTONS** to scroll through pictures or choose an object.



6. FOUR MODE BUTTONS

When the unit is turned on, press one of 4 **MODE BUTTONS** to start playing.



7. AUTOMATIC POWER OFF

To save power, the **Scroll & Learn Camera™** automatically shuts down if it does not receive any input after several minutes.

8. VOLUME CONTROL BUTTON

To adjust the volume, press the **VOLUME CONTROL BUTTON** to choose from high, medium or low volume.



GAME MODES

Your **VTech® Scroll & Learn Camera™** includes a total of 4 game modes:

1. QUICK PICS

Ready to be a little photographer? Use the **LEFT/RIGHT ARROW BUTTONS** to scroll through different locations, and then press the **GREEN TOGGLE BUTTON** to take a picture! You can also hold down the **GREEN TOGGLE BUTTON** to take more snapshots.



2. PICTURE FUN

Let's get creative! First pick a character by using the **LEFT/RIGHT ARROW BUTTONS** to scroll, and then press the **GREEN TOGGLE BUTTON**. After you've picked your character, next use the **LEFT/RIGHT**



ARROW BUTTONS to scroll through a selection of funny masks and costumes, then press the **GREEN TOGGLE BUTTON** to take a picture.

3. EXPLORE & LEARN

Where would you like to visit? Choose a place by using the **LEFT/RIGHT ARROW BUTTONS** to scroll, and then press the **GREEN TOGGLE BUTTON** when you find a place you like. Next, use the **LEFT/RIGHT ARROW BUTTONS** to scroll and explore the different objects. Wow, so many surprises! Press the **GREEN TOGGLE BUTTON** to take a picture of one. Cool!



4. PICTURE PLAY

Time for a little quiz. Listen to the questions carefully and use the **LEFT/RIGHT ARROW BUTTONS** to scroll between choices, and then press the **GREEN TOGGLE BUTTON** to pick your answer.



CARE & MAINTENANCE

1. Keep your **Scroll & Learn Camera™** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping it. **Never** try to dismantle it.
5. Always keep **Scroll & Learn Camera™** away from water.

WARNING:

- A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colours or patterns.
- While the **Scroll & Learn Camera™** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor.
- Please note that focusing on a screen at close range and handling a keyboard for a prolonged period of time may cause fatigue or discomfort.
- We recommend that children take a 15 minute break for every hour of play.

TROUBLESHOOTING

1. If your Scroll & Learn Camera™ stops working or does not turn on:

- Check your batteries. Make sure the batteries are fresh and properly installed.
- If you are still having problems, visit our web site at **www.vtechkids.com** for troubleshooting tips.

2. If you can't hear any sound:

Press the volume control button to adjust the sound level.

3. If the screen is frozen and not responding to any input:

Take out the batteries and wait for a few minutes, then put them back and turn on the unit again.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have.

A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem occurred.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

Company: **VTech**® Electronics North America, L.L.C.

Address: 1155 West Dundee Rd., Suite 130, Arlington Heights, IL 60004 USA

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

IMPORTANT NOTE:

Creating and developing Electronic Learning products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur.

It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A services representative will be happy to help you.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

COPYRIGHT NOTICES

Copyright 2012 **VTech**[®] Electronics North America, L.L.C. All Rights Reserved. **VTech**[®] and the **VTech**[®] logo are registered trademarks of **VTech**[®] Electronics North America, L.L.C. All other trademarks are property of their respective owners.