



BT05S USER GUIDE

Portable Bluetooth Speaker



AZ7111 MADE IN CHINA

WELCOME

Thank you for purchasing the portable Bluetooth Speaker.

The delivers impactful wireless audio without the hassle of cables and docking stations.

It's the perfect companion to any phone, mp3 player, tablet or laptop!


BLUETOOTH™ (wireless audio) OR **3.5mm STEREO** (wired audio)

CHARGE EuphonicTOTE™

USB

CONTENTS

EuphonicTOTE™ ANATOMY	PAGE 3
1. IMPORTANT SAFETY NOTE	4
2. POWER UP	5
3. GET CONNECTED	6
4. GET LISTENING	8
5. TROUBLESHOOTING	9
SPECIFICATIONS	10
SAFETY INFORMATION	11

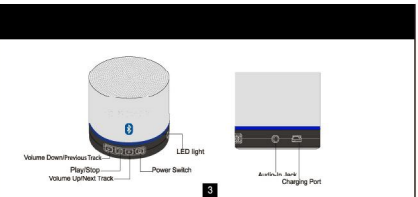

To obtain warranty service, you must deliver the product with the valid proof of purchase in the form of original sales receipt from Wov Technologies or a Wov Technologies retailer knowing the product name and the date of purchase, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to our Support Centre. Please visit our website www.wovtech.com/support or email to support@wovtech.com for customer assistance. We do not warrant the product to have no defects in materials or workmanship under normal use.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Product Code: **NO4130128**

IMPORTANT SAFETY NOTE

- Read, follow, and keep these instructions.
- Pay attention to all warnings.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) which produce heat.

WARNING:
To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

- Protect the power cord from being walked on or pinched, particularly at the plug and the point where it exits from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.

WARNING:
No naked flame sources - such as candles - should be placed on the product.

WARRANTY (U.S. Only)

Wov Technologies warrants this product against defects in materials or workmanship, under normal use, in accordance with the specifications and warnings, for a period of 12 months from the original date of purchase of the product. Pursuant to this Limited Warranty, Wov Technologies will, at its option: (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purpose of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications.

This warranty does not cover only the hardware components packaged with the Product. It does not cover product issues caused by any other reasons, including but not limited to, damage or misuse and resulting from defects in materials or workmanship under normal use.

There are no other express or implied warranties. Wov Technologies' liability is limited to repair or, at its sole option, replacement of the product. Incidental, special and consequential damages are disclaimed where permitted by law.

POWER UP

For best results, fully charge your EuphonicTOTE™ before use.

FOR A FULL CHARGE
Plug EuphonicTOTE™ into your wall outlet or computer via micro USB cable.

WHEN BATTERY IS LOW
You will hear prompt tone.

WHEN CHARGED
The LED RING turns RED.

WHEN FULLY CHARGED
The LED RING turns OFF.

NOTE:
It takes 2 hours to charge your EuphonicTOTE™ to 80% charge. A full charge takes approximately 3 hours.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

FCC NOTICE
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. The device may not cause harmful interference, and
2. The device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION
• Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
• This device and its accessories must be protected or operating in conjunction with any other antenna or transmitter.

GET CONNECTED

Connect to EuphonicTOTE™ wirelessly via Bluetooth® or via 3.5mm stereo input.

2-1 CONNECT WIRELESSLY

MUSIC PLAYERS

PHONES **TABLETS**

When using EuphonicTOTE™ as a speakerphone, please note that EuphonicTOTE™'s built-in microphone only works while connected via Bluetooth.

Your EuphonicTOTE™ can wirelessly stream audio from any Bluetooth device within 33 feet. Just follow the steps below:

CAUTION

- Do not use abrasive cleaners to clean your EuphonicTOTE™ Speaker because this could cause scratches and damage.
- Do not bring your EuphonicTOTE™ Speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your EuphonicTOTE™ Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your EuphonicTOTE™ Speaker yourself. It does not contain any user-serviceable components.
- Do not attempt to replace your EuphonicTOTE™ Speaker battery. It is built-in and is not chargeable.

Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.

Turn off your EuphonicTOTE™ Speaker prior to boarding an aircraft. Do not use the EuphonicTOTE™ Speaker inside an aircraft unless allowed by your airline.

Use only the EuphonicTOTE™ Speaker and the EuphonicTOTE™ Speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

WARNING:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2-2 PREPARE YOUR EuphonicTOTE™ FOR PAIRING
1. Press and hold the ON/OFF switch for at least 3 seconds.
2. Wait for the LED light to flash green & blue. You will hear a "To To" sound and it is ready to pair.

2-3 PREPARE YOUR PHONE OR DEVICE Turn on Bluetooth.
ON AN IPHONE: "POD" OR IPAD? Go to SETTINGS > GENERAL > and enable BLUETOOTH.
ON A BLACKBERRY? Go to SETTINGS>OPTIONS >BLUETOOTH and enable BLUETOOTH.

2-4 MAKE THE CONNECTION
Go to your device's Bluetooth® settings. ADD OR SEARCH FOR DEVICES. When IN SOUNDING, tap EuphonicTOTE™.

2-4 OR PLUG & PLAY
No Bluetooth? EuphonicTOTE™ also connects via 3.5mm stereo input. Plug audio from any device with a headphone jack or audio output.

BATTERY/CHARGER HAZARD

- Do not dispose of your EuphonicTOTE™ Speaker in a fire. The battery could explode causing injury or death.
- Do not charge the battery in accordance with the user instructions supplied with the EuphonicTOTE™ Speaker, because this may result in electric shock.
- Do not charge the EuphonicTOTE™ Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the EuphonicTOTE™ Speaker when it is being charged. Always unplug the charger first before cleaning the EuphonicTOTE™ Speaker.

Automobile Accident Hazard

- Do not leave or store the EuphonicTOTE™ Speaker or any of its accessories near or over your automobile's air bag because serious injury may occur when an air bag deploys.

Fall Hazard
Do not place the EuphonicTOTE™ Speaker on high surfaces such as shelves. During music playback the EuphonicTOTE™ Speaker may move which could cause the EuphonicTOTE™ Speaker to fall and fall off of the edge.

GET LISTENING

4-1 GET THE BEST SOUND
For best listening results, make sure your EuphonicTOTE™ is resting on its base and speaker grill facing upwards.

When connected wirelessly via Bluetooth®, it's best to turn the volume on your phone/device fully up and then use the PLUS and MINUS BUTTONS on your EuphonicTOTE™.

When connected via 3.5mm stereo input, your phone/device may distort the audio signal if turned up too loud. Turn down the volume on your phone/device before adjusting the volume on your EuphonicTOTE™.

4-2 CONNECTION PRIORITY
Incoming and outgoing calls will always take precedence over any playback. Audio content via 3.5mm stereo input will override wireless audio via Bluetooth.

SAFETY INFORMATION

WARNING:
These safety warnings and cautions are intended to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard
• Do not expose your EuphonicTOTE™ Speaker to liquid, moisture, humidity, or rain. Do not use the EuphonicTOTE™ Speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the EuphonicTOTE™ Speaker to moisture could result in electric shock.
• Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the EuphonicTOTE™ Speaker. Such actions could result in electric shock.

- Clean the EuphonicTOTE™ Speaker only with a dry cloth.
- Do not expose your EuphonicTOTE™ Speaker to extremely high or low temperatures.
- Do not leave your EuphonicTOTE™ Speaker in direct sunlight for extended periods of time.
- Do not leave your EuphonicTOTE™ Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

TROUBLESHOOTING

1. HEARING DISTORTION
A. Lower the volume on your EuphonicTOTE™ and/or phone/device. (See section 5.1 Get the Best Sound).
B. Make sure it's charged up. Check for low battery, then charge EuphonicTOTE™ via USB.

2. NOT LOUD ENOUGH?
A. Turn up the volume on your phone/device or your EuphonicTOTE™.
B. Make sure it's charged up.
C. Plug EuphonicTOTE™ in to your phone/device via 3.5mm stereo cable.

3. UNABLE TO PAIR WITH BLUETOOTH™ DEVICE?
A. Confirm that your phone/device is Bluetooth compatible.
B. Follow 3 GET CONNECTED instructions in this guide.
C. Visit www.wovtech.com/support.

4. EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH?
A. Move EuphonicTOTE™ closer to your phone/device.
B. Make sure it's charged up.
C. Turn off your EuphonicTOTE™ and phone/device, then power up and reconnect.

SPECIFICATIONS

Frequency Response:	180 Hz-20,000 Hz
Signal to noise ratio:	≥80dB
Speaker Diameter:	42mm
Maximum Power Output:	3W
Bluetooth:	Bluetooth 2.1 Class II A2DP V1.2
Charging Time:	2-3 hours
Size:	63 x 63 x 56 mm ± 0.2mm
Weight:	215g ± 5g

BLUETOOTH RANGE: 33ft (10m)
BLUETOOTH VERSION: 2.1 + EDR INFORMATION