

BT226

WIRELESS SPEAKER


User's Manual

Please read this manual before using the product.


THANK YOU FOR CHOOSING BT226

This speaker provides superior sound quality and mobility, combined with rugged construction and the convenience of hands-free wireless operation.

WHAT'S IN THE BOX

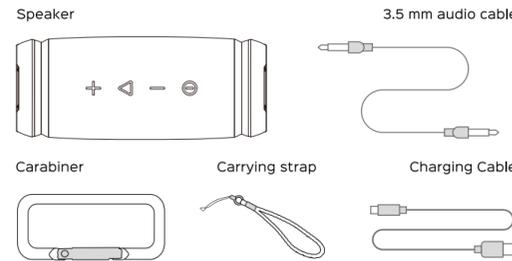

BUTTONS AND PARTS

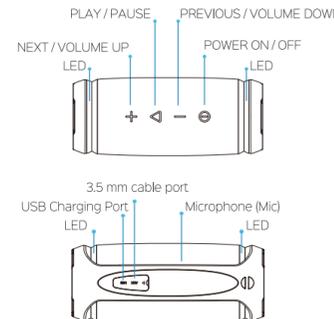

FUNCTION	OPERATION
Power on	Press and hold the POWER button for 3 seconds
Power off	Press and hold the POWER button for 5 seconds
Play / Pause	Press the PLAY / PAUSE button
Volume +	Press the VOLUME UP button
Volume -	Press the VOLUME DOWN button
Answer phone call	Press the PLAY / PAUSE button
Reject phone call	Press and hold the PLAY / PAUSE button for 2 seconds
End phone call (hang up)	Press the PLAY / PAUSE button
Redial	Press and hold the PLAY / PAUSE button for 3 seconds
Next track	Press and hold the VOLUME UP button for 2 seconds
Previous track	Press and hold the VOLUME DOWN button for 2 seconds
Switch between Wireless / 3.5 Audio cable	Press the POWER button
Factory reset	Press and hold the VOLUME UP and the VOLUME DOWN buttons simultaneously for 5 seconds

SETTING UP YOUR BT226

Turn ON

Press and hold the POWER button for 3 seconds. You will hear the sound cue and the BLUE LED light will start flashing.

Turn OFF

Press and hold the POWER button for 5 seconds. You will hear the sound cue and the flashing BLUE LED light will turn OFF.

WIRELESS PAIRING

Make sure **BT226** is fully charged and that the AUX cable is not plugged in.

1. Turn ON your speaker by pressing and holding the POWER button for 3 seconds. You will hear the sound cue and the LED will start flashing BLUE, indicating that the speaker is in pairing mode.
2. Activate the Wireless Mode on your device (smartphone, tablet, laptop).
3. Select **BT226** from the Wireless devices list. Keep it within 3 feet / 1 meter of the speaker while pairing.
4. If necessary, enter passcode 0000.
5. Once BT226 is successfully paired and connected, the LED will stop flashing and stay BLUE.

RE-PAIRING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned ON again. If reconnection does not happen automatically, the speaker will start looking for any other previously paired device speaker will start looking for any other previously paired device within the effective distance range.

BT226 can remember up to 8 recently paired devices.

TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

The TWS technology allows you to wirelessly pair two speakers together to create a dual-channel system for true stereo sound.

- Turn the wireless mode on your smart device OFF.
- Place the two speakers near each other (the distance should not be over 3 feet / 1 meter).
- Power ON both speakers simultaneously. You will hear "Power on" voice cue, and the LED indicators will flash BLUE.
- Double click the POWER button on one of the speakers. The LED indicator on this speaker will start flashing BLUE and GREEN, indicating pairing of the speakers.
- Once paired, you will hear "Stereo Mode" voice prompt, and one of speaker's LED

indicator will slowly flash BLUE. The other speaker LED will turn BLUE.

- Turn the wireless mode on your smart device ON.
- Choose BT226 from the list of paired devices, and click Connect.
- You should hear "Connected", and both speakers' LED indicators will stay BLUE.
- Now you can use the speakers in stereo mode. Kindly note, that the maximum distance between speakers should not exceed 33 feet / 10 meters.

NOTE: If the speakers were already paired with each other, you would skip step 4, as they will switch to the stereo mode automatically. After turning both speakers ON simultaneously, wait for "Stereo mode" voice cue. Then turn on wireless mode on your smart device, and the speakers will connect to it seamlessly.

To disable the TWS function:

While both speakers are ON, press and hold the VOLUME UP and VOLUME DOWN buttons simultaneously on one of the speakers until you will hear "Disconnected" Voice prompt, indicating the connection is lost.

AUDIO PLAYBACK

To pause and resume playback when connected wirelessly, press the PLAY button. To adjust the volume, press the VOLUME UP or the VOLUME DOWN button while listening to music.

To change the track on the BT226, press and hold the VOLUME UP or the VOLUME DOWN button for 2 seconds.

3.5 MM AUDIO CABLE CONNECTION

You can connect **BT226** to compatible devices using the supplied 3.5 mm audio cable.

Plug one end of the 3.5 mm audio cable into the 3.5 mm cable port on the bottom side of the speaker (under the cover). Plug the other end into the 3.5 jack on your device. Turn the speaker ON. You will hear the sound cue and the LED light will turn GREEN. Now you can play **music and audio**.

NOTE: On-device control is not supported for the VOLUME, NEXT, PREVIOUS and PAUSE functions when using the 3.5 mm audio cable. Phone calls management using the PLAY / PAUSE button is not supported. You will need to make adjustments using your smart device.

BT226

PHONE CALLS

BT226 can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during calls.

To Answer / End Call: Press the PLAY / PAUSE button.

To Reject Call: Press and hold the PLAY / PAUSE button for 2 seconds.

To Redial: Press and hold the PLAY / PAUSE button for 3 seconds.

NOTE: For better call quality, face the microphone when you speak.

TROUBLESHOOTING

PROBLEM	SOLUTION
Not powering on	Make sure the speaker is fully charged. Charge for 2 hours, if necessary. Press and hold the POWER button for 3 seconds.
Not pairing	Make sure the 3.5 mm audio cable is not plugged in. Make sure the speaker is not paired with any other device, as it can only pair with one device at a time. Press the VOLUME UP and the VOLUME DOWN buttons simultaneously and hold for 3-5 seconds.

	This will force the speaker to forget previously paired devices. Repeat the steps for pairing as previously described. Alternatively, disconnect the device from your speaker and remove BT226 from your device's pairing list. Try to pair again.
Not finding a wireless driver on your laptop	Make sure your laptop supports wireless connections. If it doesn't, you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.
Frequent disconnection and noise	Ensure that the distance between your device and the speaker is less than 33 feet / 10 meters. Ensure that nothing is blocking the signal between your device and the HD77. Check if the music is paused. Check if the volume level is set both on the source device and on the speaker. Check if the speaker is running out of power.

CHARGING

One full battery charge provides up to 20 hours of playing time at 35% volume, and up to 12 hours at medium volume. When the battery is running low, you will hear a voice signal.

BT226 may be used while charging in both Wireless Mode and 3.5 mm audio cable modes.

To charge the speaker, plug one end of the cable supplied into the Micro-USB charging port under the rubber cover at the side of the speaker. Plug the other end of the charging cable into a standard USB port. It takes up to 4 hours to fully charge. If the speaker is turned OFF, the LED light will turn on RED. If the speaker is turned ON, it will start flashing RED and BLUE. The RED light will turn OFF when the speaker is charged.

Be sure to use a 5V DC, 0.5-2 A adaptor or charger. Using the power source with lower power will increase the overall charging time. Maximize the battery lifespan by charging your speaker through a computer's USB port. Unplug BT226 from the charging cable and the cable itself from the power source when not in use.

If the speaker is left unused, even the fully charged battery will lose its charge over time. We recommend fully charging the BT226 speaker at least twice a month to maintain sufficient battery life.

SAFETY RULES

Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or become combustible. The damage to your device can void the manufacturer's warranty.

Do not let your device get wet - liquids can cause serious damage. Water damage to your device can void the manufacturer's warranty. Make sure the speaker is completely dry before charging. Clean only with a dry cloth.

Avoid exposing **BT226** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause deformation of BT226 components and reduce battery life and the lifespan of your new speaker. Don't put the device's LED lights close to humans' or animals' eyes. Do not use BT226 during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock.

RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the US, there are a couple of options:

1) Best Buy has a recycling program. Just take the broken speaker with you next time you visit a BestBuy store.

This link will help you to find the best location: <https://www.bestbuy.com/site/store-locator/>

2) Check for other possible locations next to you on these websites (just enter your ZIP to find a location):

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In Canada, please visit the link below for help: <https://thinkreuse.net>

In UK, please visit the link below for help: <https://www.recycle-more.co.uk/>

SPECIFICATIONS

Battery	Up to 20 hours playing time (35% volume) Up to 9 hours (100% volume) 5200 mAh 3.7 V, rechargeable Li-Ion Input 5 V / 0.5 A - 2 A 4.2 HFP, A2DP, AVRCP, GAVDP, AVDTP, SPP, AVCTP
Wireless connection version	12.5 W x 2
Output power	IPX6
Water resistance	Black
Color	Micro-USB
Charging port	4 hours
Charging time	33 ft / 10 m
Signal Range	100 Hz - 16 KHz
Frequency response	3.5 mm jack
Audio port	1.37 lbs / 620 g
Weight	3 x 3 x 7.3 inches / 78 x 78 x 186 mm
Dimensions	

THANK YOU

We truly appreciate that you chose Weiking as your trusted brand of wireless speakers and sincerely hope you enjoy the great sound and seamless usability **BT226** provides. We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please let us know by contacting us at sales@weiking.cn. We care about our customers more than anything and are always here to serve you.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.