


尺寸：70x100mm， 材质：100g书纸，1C+1C，风琴折页

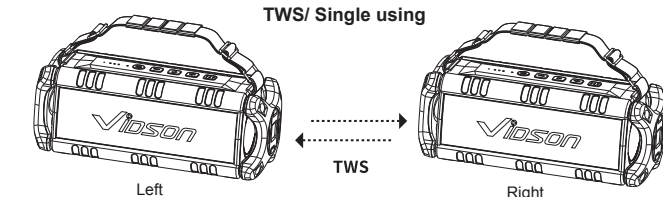


TWS/ Single using

Left TWS Right

TWS

1. Turn on two devices, Blue LED flash.
2. Select one of the devices and double press the Power button, and then they will pair each other. (The main device: Blue and Green LED Alternately flash)
3. After successfully pairing, Main device blue LED slow flash, auxiliary device blue LED long light.
4. In your phone, search BT228 and connect, after successfully connecting, the two devices can play music together.
5. Disconnect TWS, press + - buttons together, the Blue LED fast flash (every 2 seconds) means it has been disconnected.

Buttons:

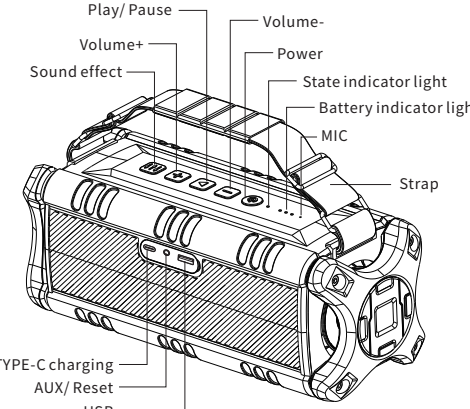

USB Mode	Insert USB to USB mode	Indoor: Green LED long light/Outdoor: Green LED slow Flash (every 1 second)
TWS Pairing	Double press "⏻"	Blue and Green LED Alternately flash
TWS Successful Pairing	/	Main device blue LED slow flash, auxiliary device blue LED long light
Disconnect TWS	Press + - together	Blue LED fast flash
Sound effect switch	Short press "🔊" Sound effect button	Indoor: State indicator light long light Outdoor: State indicator light flash
Volume Up	Short press +	/
Volume Down	Short press -	/
Next Song	Long press +	/
Previous Song	Long press -	/
Pause/Play/Mute	Short Press "⏻" (Mute in AXU mode)	/
Low Battery Alarm	Battery Voltage lower than 6.5V	/
Low Battery Shutdown	Battery Voltage lower than 6.2V	/
Charging	Insert 5V USB	Red LED Long Light
Charging Finished	Auto completed	Red LED Off
Reset	Use the toothpick or other insulator insert AUX hole	LED off

Note: The volume and mode have memory function. When Power on, the speaker will continue the volume and mode of the last Power off. And every time the sound effect is indoor effect.

Operation


Items	Instructions	LED States
Power On	Long press "⏻" for 2-3 seconds under Power off situation	Blue LED On
Power Off	Long press "⏻" for 2-3 seconds under Power on situation	LED Off
Pairing	Auto to Enter Pairing Mode	Blue LED Flash (every 2 seconds)
Successful Pairing	Select Bluetooth Name on your Phone	Indoor: Blue LED long light/Outdoor: Green LED slow flash
Disconnect Bluetooth	Press "+"" together	Blue LED flash (every 2 seconds)
Reconnect	Will connect automatically with the last connected device	Indoor: Blue LED long light/Outdoor: Green LED slow Flash (every 1 second)
Receive the Call	Short press "📞" when incoming call (Under TWS, only the Main device have voice)	/
Reject the Call	Long press "📞" when incoming call (Under TWS, only the Main device have voice)	/
Hang up the Call	Short press "📞" when you are on call (Under TWS, only the Main device have voice)	/
Call back	Long press "📞" (Under TWS, only the Main device can talk)	Blue LED long light
Mode Switch	Short press "⏻"	/
AUX Mode	Insert AUX to AUX Mode	Indoor: Green LED long light/Outdoor: Green LED slow Flash (every 1 second)

Accessories:

- User manual x1
- Type-C cable (For Charging) x1
- 3.5mm AUX cable x1

Specifications

- Bluetooth version: BT4.2
- speaker unit: Diameter 70 mm outside magnet, 4ohm, 20W*2
Diameter 30 mm inner magnet, 8ohm, 10W*2
- SNR: ≥75DB
- Working time: 6-8 hours
- Charging voltage/current: TYPE C DC/2000MA
- Support USB Flash Drive, Music format: MP3,WAV,WMA,APE,FLAG
- Transmission: 10M (Vary from environment and devices)
- Battery voltage: 7.4V
- Battery: 2500mAh
- Charging time: 4-6hours
- THD: ≤10%
- Product size: 319.5*118*119.5mm

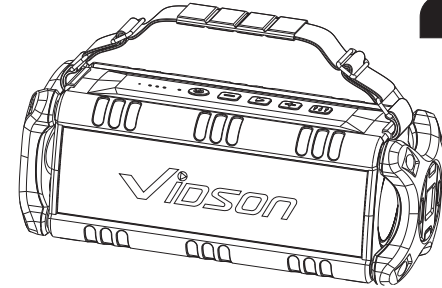

BT228
Outdoor Speaker
User Manual

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.