 


BT27S Bluetooth Speaker – User Manual

 
BT27S is a compact Bluetooth speaker that can be wirelessly connected to Bluetooth devices such as smart phones, tablets and computers to playback any music collection stored on them. Thanks to its powerful battery, the system delivers full stereo sound, x-BASS sound, separate from any mains supply, for up to 3-6hours and is the perfect companion for the park, whilst camping or on the beach. Process control, can get rid of complicated connections and wiring distance constraints, the user can enjoy high quality music .

CONNECT TO BT27S Speaker

BT27S Speaker ANATOMY

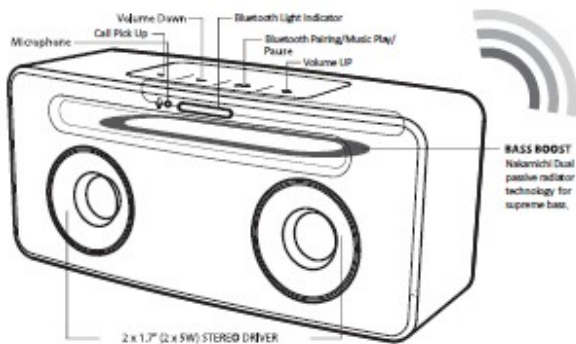

BUTTONS

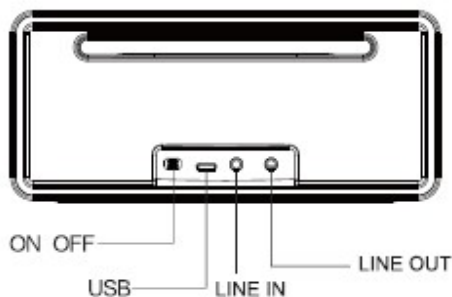

POWER SWITCH

Slide the ON/OFF switch to POWER ON the device until the power indicator lights up in green to turn on BT27S

VOLUME CONTROLS

Press and Hold the PLUS "+" and MINUS "-" buttons to Increase and Decrease volume.

MUSIC PLAY/ MUSIC PAUSE BUTTON

Use this button to control music play or pause.

CALL PICK UP/END BUTTON

Use this button to answer or end a call.

Press and Hold this button to make last call.

1. **IMPORTANT SAFETY NOTE**

- Read, follow, and keep these instructions.
- Pay attention to all warnings.
- Do not use this device near water.
- Clean only with a soft, dry cloth.
- Do not block ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) which produce heat.

WARNING:

To reduce the risk of fire or electrical shock, do not expose this device to rain or moisture.

- Protect the charging cables from being walked on or pinched, particularly at the plugs and the point where it exits from the device.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for long periods of time.
- Do not expose this device to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the device.

WARNING:

No open flame sources -such as candles- should be placed on the product.

2. **POWER UP**



For best results, fully charge your BT27S Speaker before use.

FOR A FULL CHARGE

Plug BT27S Speaker into your wall charger or computer via micro USB cable.

WHEN BATTERY IS LOW

The LED light flashes RED.

WHEN BATTERY IS CHARGING

The LED light will illuminate RED in color.

WHEN FULLY CHARGED

The LED light will turn OFF.

NOTE:

A full charge takes up to 4 hours.

IF THE LED IS...

FLASHING BLUE

BT27S Speaker is trying to connect to your phone/device or Bluetooth® device.

FLASHING RED

Battery is low. Power up!

 
ILLUMIATED BLUE

BT27S Speaker is connected to your phone/device or Bluetooth® device.

3 GET CONNECTED


CONNECTION OPTIONS

Connect to BT27S Speaker wirelessly via Bluetooth® or via 3.5mm stereo input.

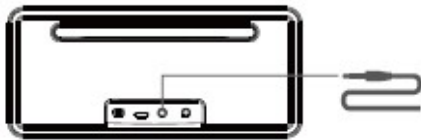


When using BT27S Speaker as a speakerphone, please note that BT27S Speaker's built-in microphone only works while connected via Bluetooth.

 3.1 CONNECT WIRELESSLY

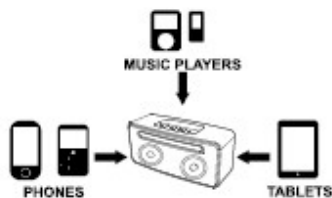

Your BT27S Speaker can wirelessly stream audio from any Bluetooth device within 10m .

 3.2 PREPARE YOUR SPEAKER FOR PAIRING

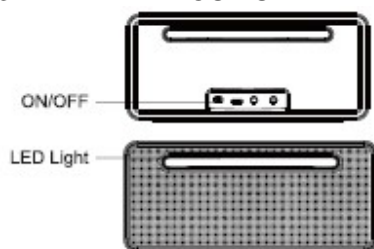

1. Switch ON/OFF SWITCH to ON.

2. Wait for the LED light to flash BLUE.
You will hear a quick "To" tone and it is ready to pair.

3.3 PREPARE YOUR PHONE OR DEVICE

Turn on Bluetooth®.

ON AN IPHONE®, IPOD®, OR IPAD®
Go to SETTINGS > enable BLUETOOTH

ON ANDROID®,
Go to SETTINGS > enable BLUETOOTH

ON A BLACKBERRY®
Go to SETTINGS/OPTIONS >BLUETOOTH and enable BLUETOOTH

3.4 MAKE THE CONNECTION

Go to your device's Bluetooth® settings.

ADD, SEARCH or SCAN FOR DEVICES

When "BT speakers" appears, select it.

When pairing is successful, you will hear a "To To" tone and the LED light will illuminate BLUE.
This is a one-time event per device. To pair your BT27S Speaker to another device, repeat steps 3.2 to 3.4.

3.5 PLUG & PLAY

Your Bluetooth bt27s Speaker also connects via 3.5mm stereo input.

Play audio from any device with a 3.5mm audio jack or audio output.

When BT27S Speaker connects via 3.5mm stereo input, the speaker's control panel functions, such as MUSIC PLAY/ PAUSE, VOLUME & TRACK CONTROLS, will not work. These functions can only be controlled from your audio source.

4 .GET LISTENING

4.1 GET THE BEST SOUND

For best listening results, make sure your BT27S Speaker is resting on its base and speaker grill facing towards you.

When connected wirelessly via Bluetooth®, it's best to maximize the volume on your phone/device and then use the BT27S Speaker.

When connected via 3.5mm stereo input, your phone/device may distort the audio signal if turned up too loud.

4.2 CONNECTION PRIORITY

Incoming and outgoing calls will always take precedence over audio playback. Audio content via 3.5mm stereo input will override wireless audio via Bluetooth.

5. GET TALKING

Your BT27S can be used as a wireless speakerphone. Just speak in the direction of the front grill. The built-in microphone only works when connected via Bluetooth®.

5.1 ANSWER/END A CALL

Press the PHONE CALL BUTTON on your BT27S Speaker to both answer and end a call.

5.2 DECLINE AN INCOMING CALL

Press and Hold the PHONE CALL BUTTON for 2 seconds.

5.3 MAKE A CALL

Use your phone to dial as usual. Listen and talk through your BT27S Speaker.

TROUBLESHOOTING

1. HEARING DISTORTION

A. Lower the volume on your BT27S Speaker and/or phone/device. (See section 4.1 GET THE BEST SOUND)

B. Make sure it's charged. Check for low battery, then charge BT27S Speaker via USB.

2. NOT LOUD ENOUGH?

A. Turn up the volume on your phone/device or your BT27S Speaker.

B. Make sure it's charged up.

3. UNABLE TO PAIR WITH BLUETOOTH® DEVICE?

A. Confirm that your phone/device is Bluetooth compatible.

B. Follow Section 4.1 GET CONNECTED instructions in this guide.

4. EXPERIENCING SIGNAL LOSS OR DROPOUTS VIA BLUETOOTH?

A. Move BT27S Speaker closer to your phone/device.

B. Make sure it's charged up.

C. Turn off your BT27S Speaker and phone/device, then power up and reconnect.

SPECIFICATIONS

Bluetooth: 4.0+EDR

Bluetooth Profile: A2DP, AVRCP

3.5mm Aux-in

Speaker Diameter: 1.7" x 2 + Passive Radiator

Audio Power Output: 5W x 2, 10W

Audio Frequency Response: 140Hz - 20KHz

Built-in Microphone

BATTERY & POWER

Battery: 4000mah

Music Streaming Time: 5 to 6 hours

Charging Time: 3 to 4 hours

Bluetooth Transmission Distance:

SAFETY INFORMATION

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not expose your BT27S Speaker to liquid, moisture, humidity, or rain. Do not use the BT27S Speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the BT27S Speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the BT27S Speaker. Such actions could result in electric shock.
- Clean the BT27S Speaker only with a soft, dry cloth.
- Do not expose your BT27S Speaker to extremely high or low temperatures.
- Do not leave your BT27S Speaker in direct sunlight for extended periods of time.
- Do not leave your BT27S Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

BATTERY/CHARGER HAZARD

- Do not dispose of your BT27S Speaker in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the BT27S Speaker.
- Do not attempt to disassemble the BT27S Speaker charger or force open the built-in battery because this may result in electric shock.
- Do not charge the BT27S Speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the BT27S Speaker when it is being charged. Always unplug the charger before cleaning.

Automobile Accident Hazard

- Do not leave or store the BT27S Speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

Fall Hazard

- Do not place the BT27S Speaker on high surfaces such as shelves. During music playback the BT27S Speaker may move which could cause the BT27S Speaker to shift and fall off of the edge.

CAUTION

- Do not use abrasive cleaners to clean your BT27S Speaker because this could cause scratches and damage.
- Do not bring your BT27S Speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your BT27S Speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your BT27S Speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your BT27S Speaker battery, it is built-in and is not changeable.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your BT27S Speaker prior to boarding an aircraft. Do not use the BT27S Speaker inside an aircraft unless allowed by your airline.
- Dispose of the BT27S Speaker and the BT27S Speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **SHENZHEN WEIKING TECHNOLOGY CO., LTD** may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.