

P710 Programmer User Manual

Programmer Package:

- 1. Programmer P710 x1 pc
- 2. USB cable (One is Black, One is White)
- 3. Batteries AAA x 3 pcs.
- A. Button function:
- 1. Power: Power on/off and turn the LED back light on/off.
- 2. ↑: move select bar up3. ↓: move select bar up4. OK: select/continue
- 5. ESC: Cancel
- B. Operation:
- 1. Connect to PC: Issue card, receive the lock data and send back the lock event.
- 2. Connect to lock:
- 2.1. Menu Initialize: Use arrow button to select Building Door and OK to initialize the Cylinder.
- 2.2. Menu Update: Update the data to corresponding lock.
- 2.3. Menu Set Time: Show the programmer time. Read time from lock and Write programmer time to

lock.

- 2.4. Menu Event: Read Event from lock.
- 2.5. Menu Diagnostic: Show the information of lock.
- 2.6. Menu Buzzer + LED: Test the buzzer and LED function of lock.
- 2.7. Menu Firmware: Choose "Control PCB" and then select FW file, the controller can show 28 files and

the file name length support to 8 words. Press OK to update the FW file.

- 3. Without connection:
- 3.1 Menu Setting: Adjust Contrast and back light of LED display. Choose language and Date format.
- 3.2 Menu Version: Show the FW version of programmer.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.