 


Tablet



User's Manual

 
Includes

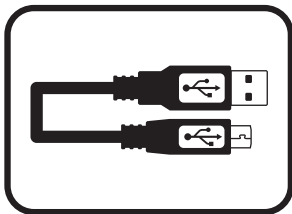


USB Cable



User Manual

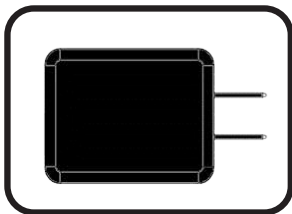

Power Adaptor

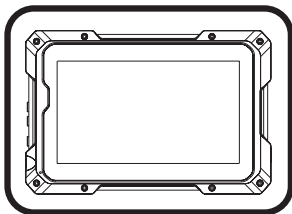 



Tablet

Features

SCREEN SIZE	7" Color TFT 800 x 480 Resolution
SPEAKER OUTPUT	1.0W (Max)
AUDIO JACK (OUTPUT)	3.5mm 10mW Stereo out
PROCESSOR DUAL CORE	1.2 GHZ
RAM	1 GB
INTERNAL MEMORY	8 GB
WIFI	802.11 b/g/n
CAMERA	Rear camera resolution 2 MP
TOUCH SCREEN	5 point multi-touch
VOICE RECORDING	Supported
OPERATING SYSTEM	Android 4.4 or Above
SD CARD SLOT	One Standard SD/SDHC Card slot, up to 32GB SD Card (not included)
MICRO USB	Interface to PC to upload/download files (5Pin Included)
POWER SUPPLY	5.0V/2A
BATTERY LIFE	3-6 Hours (depends on usage and settings)
BATTERY CAPACITY	3.7V 3200mAH
CHARGING TIME	4 Hours using DC Charger or 5 Hours using PC-USB
WATER RESISTANT	Weather resistant with rubber gasket

Control Layout

  1. Microphone
2. 3.5M Headphone Jack
3. Power Button
4. Volume “-” button
5. Volume “+” button
6. Speaker
7. Rear Camera

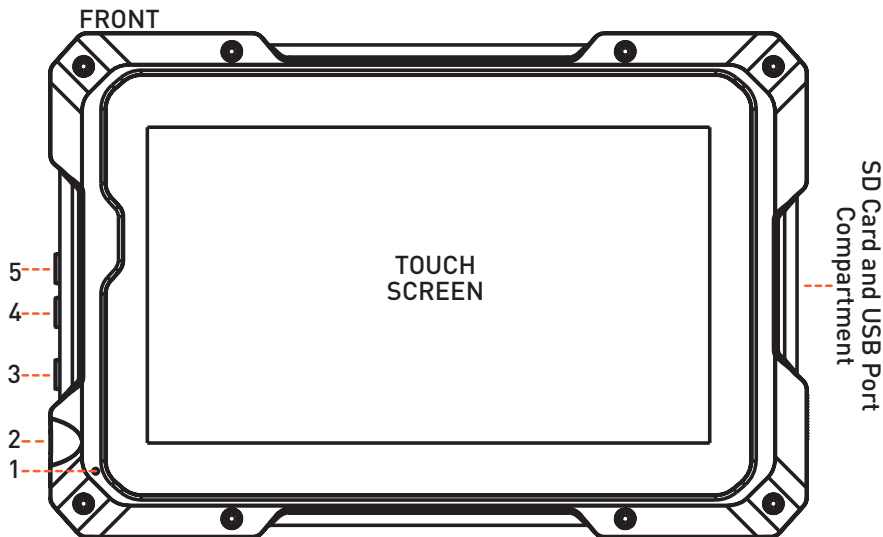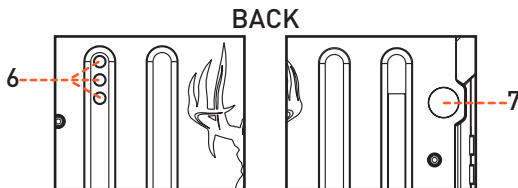


*Your Tablet can be used in portrait or landscape mode

Before You Begin

To use some of the best features of your new Tablet, you will need to connect to the Internet. Don't worry, it's easy. The First-Time Setup will walk you through the process. **To connect your Tablet to the Internet, you must have an Internet connection and a wireless network.**

 
High-Speed
Wireless Router

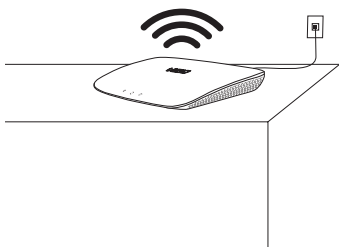


You can always use your Tablet without an Internet connection, but some features will be unavailable.

First-Time Setup

 
1. Press and hold the POWER button for 2 seconds to turn the Tablet on.

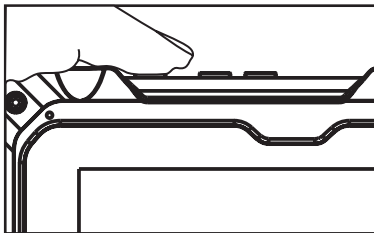

 
2. Select the language. Press the arrow to move to the next screen.

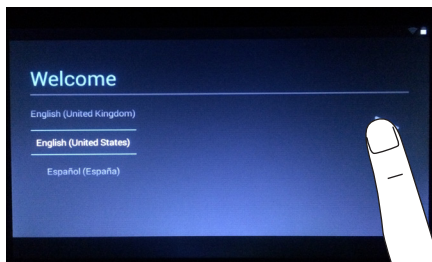

 
3. Select WiFi connection.

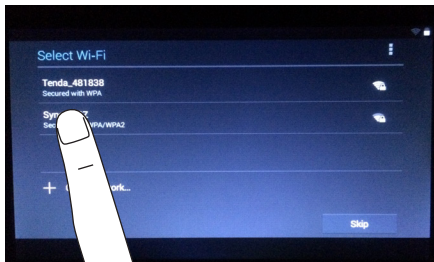

 
4. Once the WiFi is connected you can set up your Google account.

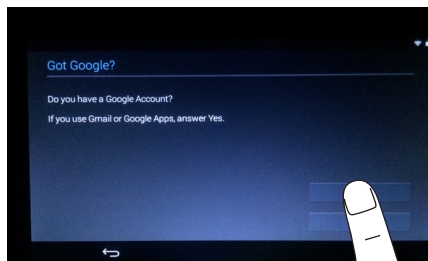

 
5. Touch the circle to see all apps and to begin setup.

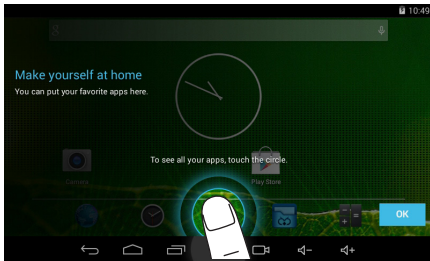

 6. Choosing apps to add to your Home screen. Press "OK" to start.

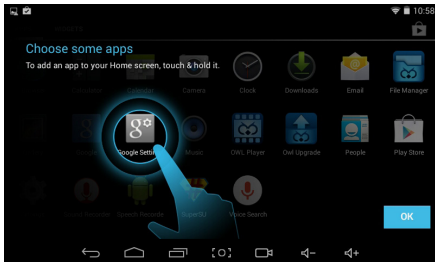


 7. Touch the desired apps and hold it to drop it onto your Home screen. Note: You can move the apps icon by holding it down and dragging it to the desired location. Also, to remove the apps icon hold down and drag to the top where it says X.

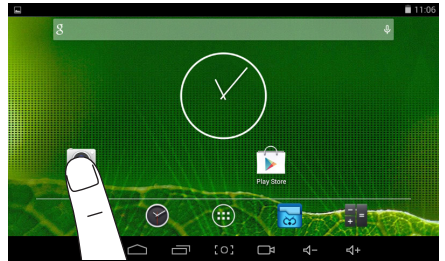


Wi-Fi Setup

 1. To connect your Tablet to a wireless network, go to "Settings". Tap the Wi-Fi to "ON".

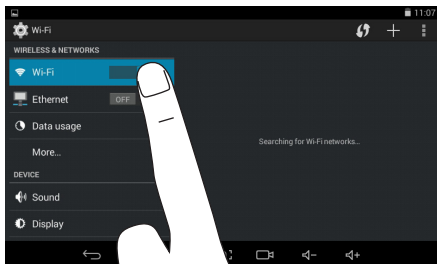


 2. It will show you a list of available Wi-Fi networks. Tap the name of your network (and enter your password if needed).

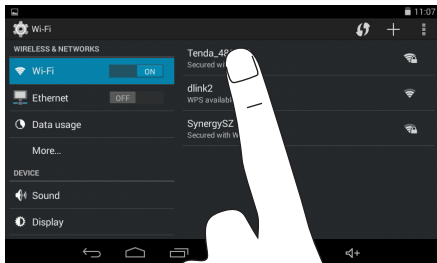

GMAIL Setup

 
To add a Gmail account tap the GMAIL icon. Either set up an existing or new account.

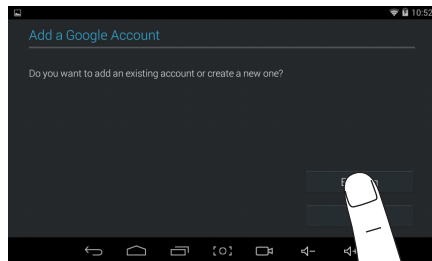

Follow the on screen directions.


Viewing Flextime or Pondwatch files

 1. Press the File Manager Icon.


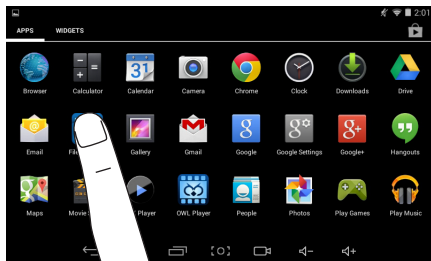


2. Inset SD Card containing the Flextime or Pondwatch video.

 
3. Browse to the Folder.

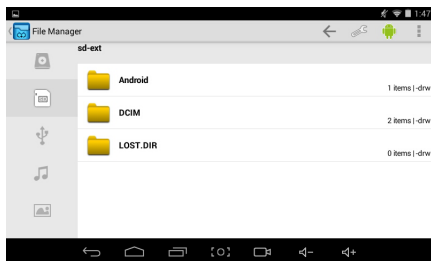

  4. Select the video file.

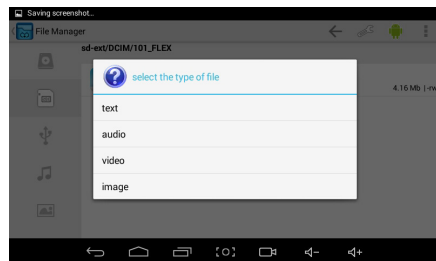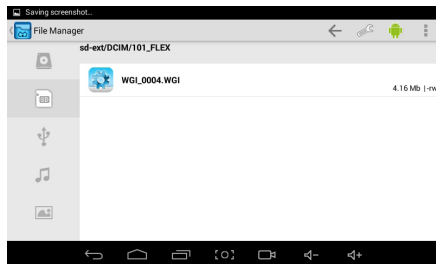

 
5. You will be asked to select a Player to play the desired file. Choose OWL player and press “ALWAYS”.

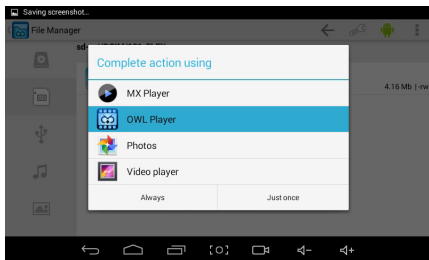

6. The video will begin to play.

Sleep Mode and Unlocking

 
The Tablet screen will turn off automatically after 1 minute if it is not being used. Sleep mode can be changed by going to “Settings”→“Display”→“Sleep”. This is called sleep mode. You can also press the Power button to put the Tablet in sleep mode.

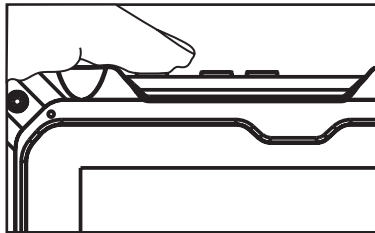

To wake the Tablet, press the Power button. The Lock screen will be displayed. Unlock the Tablet by tapping the lock symbol and sliding it off the screen.

Adding More APPS

 Play Store™ offers quick, easy access to a wide variety of applications developed specifically for the Android™ platform. These have been created by developers all over the world, and have been rated by your fellow Android users.

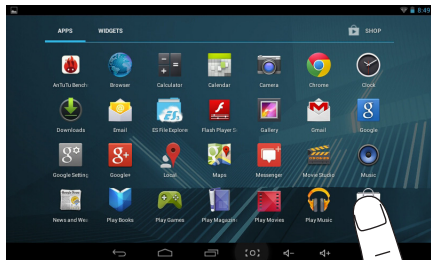


To shop for new apps, select the Play Store icon from the Home screen. You'll see the following:

- **Featured** - Scroll through the icons at the top to view featured apps
- **Applications** - Browse all applications or by category
- **Games** - Browse all games or by category
- **Search** - Lets you search the Market for apps


- **My downloads** - View the apps that you've already installed on your device

 You will need an Internet connection to download new apps from the Play Store. If you don't already have a free Google account, you can sign up for one in the Google Play Store.

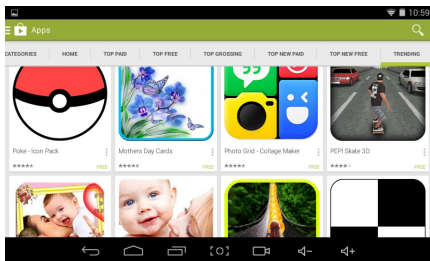

Charging Tablet

 1. Connect the Micro USB Cable to the Tablet.

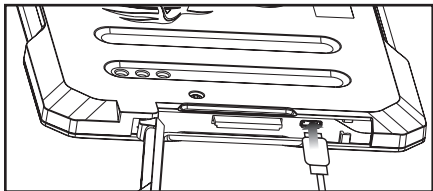


2. Connect the USB Cable to the power adaptor, then connect the power adaptor to an electrical outlet. (Another option is to connect USB Cable to a computer)


3. The ⚡ symbol in the battery icon means the Tablet is charging. When the battery icon has full bars, the Tablet is fully charged.

SD Card Slot

 1. With the Tablet facing down, open the SD Card door by sliding the door to the right. Once unlocked the door will spring open.

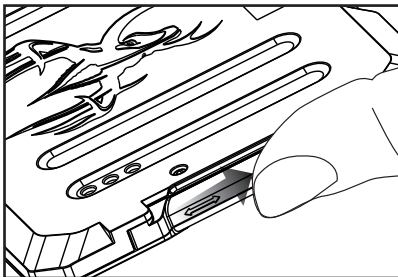

 
2. Load SD memory card (up to 32GB not included) into the SD CARD slot with the connectors facing down.

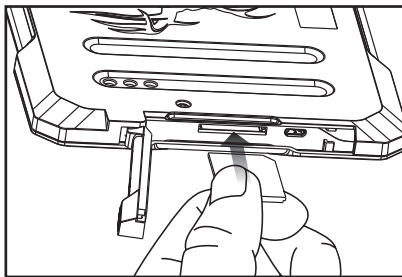

3. Close the door and slide it to the left.

Reset

 Tap “Settings”→“Back up and Reset”. This will erase all data from your tablet’s external storage, including your Google account, system settings, app settings, and downloaded apps.

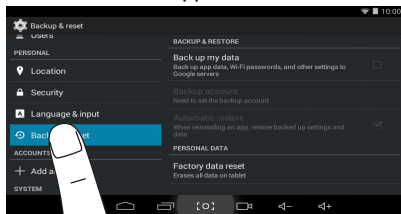

Important Safety Information

Read all the safety information below before using your Tablet. For additional information, read the User Manual available directly through an application in your Tablet.

DRIVING SAFELY

Use of your Tablet while driving may cause distractions and may be prohibited in some places. Always comply with local laws and regulations when driving. Driving safely is your primary responsibility, but if using your Tablet, NEVER type or read email or messages, navigate on the web or perform any other activity that takes your attention from driving.

ALWAYS keep your eyes on the road and your hands on the wheel, use voice-activated commands and focus on your driving.

SEIZURES/BLACKOUTS

Some people may be susceptible to epileptic seizures or strokes when exposed to flashing lights such as when playing games or watching video, even if those conditions have not been previously diagnosed.

If you or anyone in your family has a history of seizures or strokes, or if you have any other reason to think you or someone under your supervision may be susceptible to epileptic seizures or strokes, consult a doctor before playing games or watching video. If you experience headaches, blackouts, seizures, convulsion, eye or muscle

twitching, loss of awareness, involuntary movement, or disorientation stop using your Tablet and consult a doctor. To reduce risk hold your Tablet at a distance from your eyes, use it in a well-lit room, take frequent breaks and stop if you are tired.

WARNING ABOUT HEARING DAMAGE

Exposure to loud sounds can damage your hearing causing hearing loss and tinnitus (ringing or buzzing in the ears). With continued exposure to loud noises, ears may become accustomed to the sound level, which may result in permanent damage to hearing without any noticeable discomfort.

Loud Sounds + Time = Hearing Loss

The more time you spend exposed to loud sounds, the more likely you are to damage your hearing.

- Limit the amount of time you spend using headphones, or earpieces.
- Do not turn up the volume to block out surrounding noise.
- If you can't hear people speaking, turn down the volume.

If you experience a sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech or believe you may have experienced noise induced hearing loss, you should have your hearing checked by an ear doctor.

REPETITIVE MOTION

Repetitively performing actions such as press-

ing keys or typing, may result in occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Take breaks often and if you continue to have discomfort during or after such use, stop use and see a doctor.

GLASS PARTS

Your Tablet may contain glass parts. Dropping your Tablet on a hard surface or a substantial impact to your Tablet could break this glass. If the glass breaks, do not touch or attempt to remove it. Stop using your Tablet until the glass is replaced by an authorized service center.

POTENTIALLY EXPLOSIVE ATMOSPHERES

When you are in an area with potentially explosive atmosphere turn off your Tablet. Do not remove, install, or charge batteries to avoid creating sparks that can cause an explosion or fire resulting in serious injury or even death. Areas with potentially explosive atmospheres are often, but not always, clearly marked. Potential areas may include fueling areas, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders, or areas where you would normally be advised to turn off your engine.

CARE & MAINTENANCE

Do not use volatile solvents to clean this product. Such chemicals may damage it. To clean product, gently wipe it with a clean, dry, soft cloth.

BATTERY USE & CHARGING

Disposal and Recycling - You must dispose of this product properly, according to local laws and regulations. Because this product contains electronic components and a battery, it must be disposed of separately from household waste. Contact local authorities to learn about disposal and recycling options.

RADIO FREQUENCY (RF) EXPOSURE

Your Tablet contains radio transmitters and receivers. The antenna on your Tablet is around the perimeter. For optimal device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions: place your Tablet with the antenna away from your body.

Your Tablet is designed to comply with local regulatory requirements concerning exposure to RF energy. For additional information from the FCC about exposure to RF energy, see: www.fcc.gov/oet/rfsafety.

The World Health Organization (WHO) notes that present scientific information indicates that exposure to RF within the limits set by the ICNIRP guidelines (from 0-300 GHz) does not produce any known adverse health effect. Additional information can be found at www.who.int/emf.

RF ENERGY INTERFERENCE/COMPATIBILITY

RF transmitting electronic equipment such as

your Tablet is subject to, and may cause, interference with other electronic equipment. Always follow instructions to avoid interference problems and turn off your Tablet in any location where posted notices instruct you to do so.

AIRCRAFT

Turn off your Tablet whenever instructed to do so by airline staff. If your Tablet has an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult with your doctor before using your Tablet.

Persons with implantable medical devices should observe the following precautions:

- When your Tablet is ON, always keep it more than 15 centimeters (6 inches) away from the implantable medical device.
- Immediately turn your Tablet OFF if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your Tablet with your implantable medical device, consult with your doctor.

OPERATING TEMPERATURE

Your Tablet is designed to operate between the temperatures of 32° to 95° F (0° to 35° C). page 14

Legal/Compliance Info

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE: Specific Absorption Rate (SAR)

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. Your Tablet is designed to comply with local regulatory requirements concerning exposure to RF energy.

Technical Support

Industry Canada Certification

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Class B Compliance

This Class (B) digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Products are often returned due to a technical problem rather than a defective product. Our trained support personnel can often help to quickly resolve any problem. You can also get information about warranty service or repair after the warranty period by contacting our Support Department.

Hours of operation:

Monday - Friday: 8 am to 5 pm (CST)

Phone: 800-847-8269

Fax: 972-352-6633

Web: www.wildgameinnovations.com

Troubleshooting

Restarting the Tablet – Press and hold POWER button for 10 seconds, unit will go to standby, press power on again , unit will start up.

Cannot access the Google Playstore – make sure wifi is connected to Router with Internet.

Cannot connect to Router – make sure that the wifi SSID and password is correct.

How to Reset to Factory default – Settings-
→Backup & Resets--→Factory Data Reset

Warranty

DISCLAIMERS

WGI Innovations, LTD. is not responsible for damage, expense or injury caused by the unauthorized use of, alterations to, improper connection of and abuse or neglect of the WGI Innovations™ products.

WARRANTY

For the warranty to be in effect, you MUST completely fill out and mail the warranty card along with your proof of purchase to WGI Innovations within (14) days after the date of purchase. As an alternative to mail, you may also visit our website and register your product at www.wildgameinnovations.com (you are still required to mail WGI Innovations your proof of purchase before the warranty is placed in effect.) Follow the onscreen directions to complete the process.

WGI Innovations, LTD will replace all workmanship defects free of charge for ONE (1) YEAR after the date of purchase as long as your warranty is in effect.

This warranty DOES NOT COVER damage, expense or injury caused by unauthorized repairs, alterations, improper connection, shipping, abuse, theft, accident, animal damage, neglect or collateral loss.

When returning product(s) for service you MUST obtain a Return Merchandise Authorization (RMA) number from WGI Innovations, LTD. Please include name, UPS address (No P.O. Box), telephone number, RMA number and a complete description of the problem on all enclosed correspondence. When possible, pack product carefully in original carton. Customers are responsible for any shipping cost to WGI Innovations. WGI Innovations will pay the shipping cost of replacement product to the customer. We are not responsible for damage incurred in returning items for repair.

For product service send to:

WGI Innovations
602 Fountain Parkway
Grand Prairie, TX 75050
(800) 847-8269

Thank you for your purchase!

CUSTOMER SERVICE

WGI Innovations, LTD. stands behind every product we manufacture for a one year product workmanship warranty and a strong commitment to customer service. If you are in need of customer service for missing parts or need assistance with the operation or assembly of your product, we encourage you to call one of our customer service representatives and let us assist you with your WGI Innovations product.

DISCLAIMER

WGI Innovations, LTD. reserves the right to make changes to product features, functionality and physical design at its sole discretion. As a result, such changes may not be reflected in this version of the manual.

WGI INNOVATIONS, LTD

602 Fountain Parkway
Grand Prairie, TX 75050
800.847.8269

"Wildgame Innovations" and the "Button Logo" are TM trademarks of Wildgame Innovations, LLC.
"Sport Responsible", "Tablet" and "Flextime" are TM trademarks of WGI Innovations, LTD.
Any other trademarked or registered logos and names are property of their prospective owners.

