


(24)- (WHIRLPOOL) DUET DRYER **DOOR REVERSAL KITS**
#3979303, AND #3979304.

REVERSING THE DOOR SWING


Door Reversal Kit:

<u>Key</u>	<u>Description</u>
	Handle Filler
2	Hinge Cover
3	Door Handle

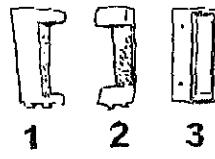


LOOSEN THE DOOR TRIM

1. Place a towel or a soft cloth on top of the dryer or work space to protect the door surface.
2. Loosen the plastic trim (1) above and below the handle filler (2).
3. Carefully pull out on the trim until it unsnaps and remove the handle filler and set it aside.

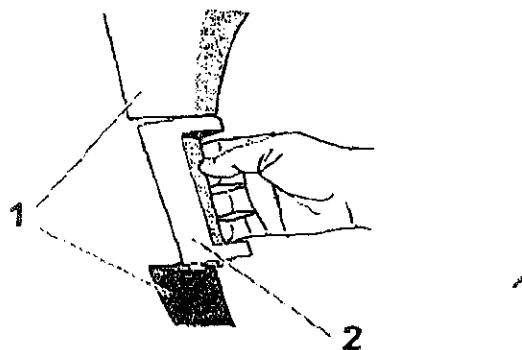


4. Loosen the plastic trim (1) above and below the hinge cover (3).
5. Carefully pull out on the trim until it unsnaps, remove the hinge cover, and set it aside.

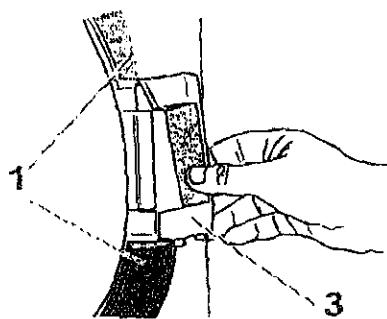

NOTE: Keep the original handle filler and hinge cover in case you decide to return the door to its original position. A new handle filler and hinge cover are provided in the door reversing kit that will be installed in a later step.

REMOVE THE DOOR


1. Open the dryer door.
2. Loosen the top keyhole screw, then remove the other four hinge screws.

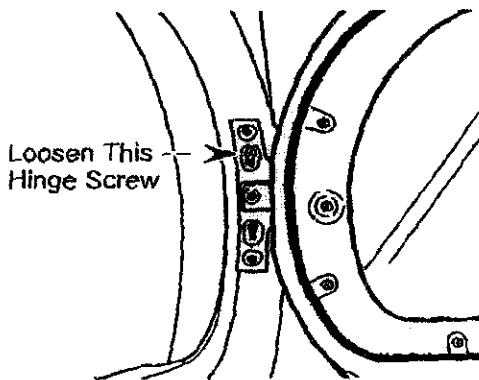


3. Lift the door from the top keyhole slot screw and place it on a padded surface with the inside door assembly facing up.
4. Remove the top keyhole slot screw and place it with the others.

Continued on the next page.

5. Remove the two screws from the door handle and remove the handle by pulling straight out on it. Set the handle aside and keep it in case you ever want to restore the door swing to its original position.

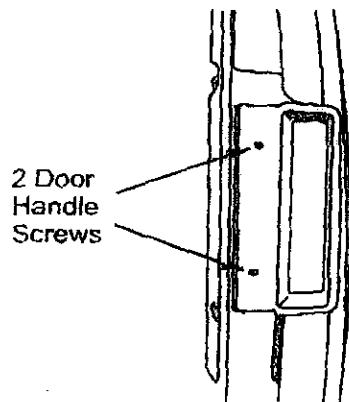


6. Remove the six screws that are indicated by the arrows, shown in the illustration. **Do not remove any of the other screws.**

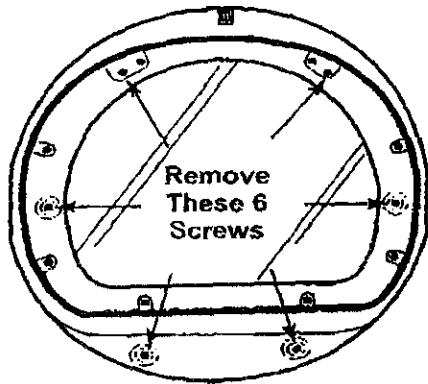


7. Lift the inner door assembly off of the outer door assembly and set the outer door assembly aside.

REVERSE THE HINGE & HINGE BRACKET

1. Place the inner door, screw head side facing up, on the padded work surface.
2. Remove the four door hinge screws.

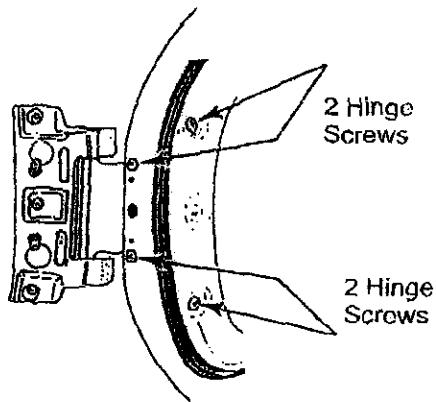


3. Remove the two screws from the handle bracket and remove the bracket.

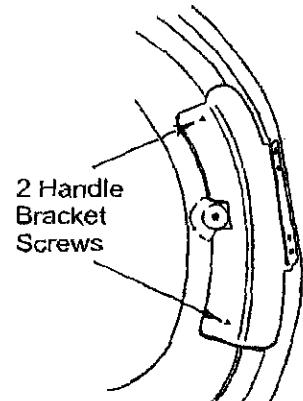


4. Mount the hinge to the other side of the door with the four screws you removed in step 2.
5. Mount the handle bracket to the other side of the door with the two screws you removed in step 3.
6. Set the inner door assembly aside.

REINSTALL THE DOOR


1. If necessary, clean both sides of the door glass before reassembling it.
2. Place the inner door assembly into the outer door assembly and align the hinge in the opening on the side. Fit the inside door assembly edge completely inside the outer door assembly.
3. Loosely install the six screws in the door. Once all of the screws are loosely installed, and the edges of the door are properly aligned, tighten the screws securely.

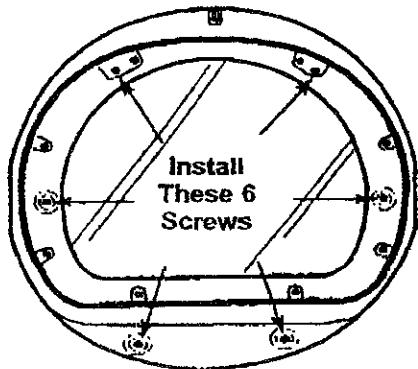

4. Insert the new handle into the side opening of the door. Make sure that the handle seats all the way in the opening, and that the holes are all aligned properly, then mount the handle with two screws.
5. Using a small screwdriver, remove the hole plugs in the door opening of the dryer, and install them in the former screw holes in the other side of the dryer. Be careful not to damage the finish.

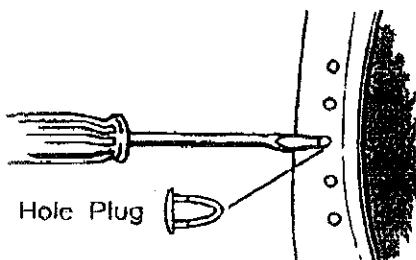

6. Install a screw halfway into the second hole from the top.

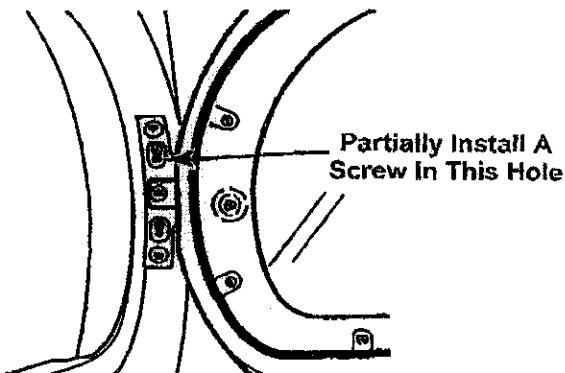

7. Hang the door hinge on the screw you just installed, then install the remaining four screws in their holes, and tighten the loose screw securely. Make sure that all five hinge screws are secure.

INSTALL THE NEW HANDLE FILLER AND HINGE COVER

1. Using the new handle filler that was provided with the reversing kit, hook the top of the handle filler onto the loosened upper door trim, and snap the joined pieces into place.
2. Hook the bottom of the handle filler onto the lower door trim and snap it into place.
3. Repeat steps 1 and 2 to install the hinge cover on the opposite side of the door.
4. Close the door and make sure that it latches securely.