
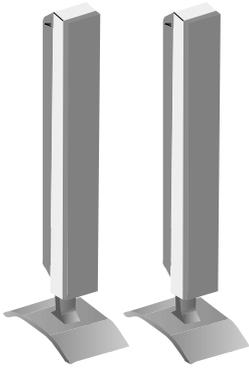
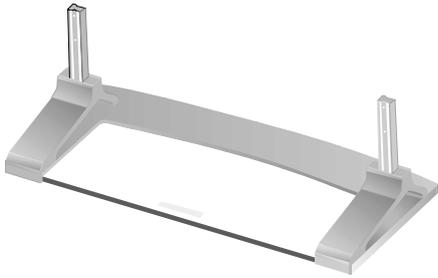



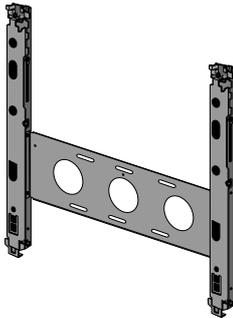


**Note**

The following items are optional accessories. Refer purchasing optional accessories from Daewoo Electronics Local retailer or the retailer from where you purchased the unit.

**Optional Accessories**
  
<p><b>Speakers</b></p> 	<p><b>DPE-P20J</b></p> <ul style="list-style-type: none"> <li>- Speaker Main Unit Dimension : 100(W) x 628(H) x 83(D) mm 39.37(W) x 24.72(H) x 3.27(D) inch</li> <li>- Dimension Including Speaker Stand : 170(W) x 729(H) x 194(D) mm 6.69(W) x 28.7(H) x 7.64(D) inch</li> <li>- Audio Amplifier : 10W + 10W</li> <li>- Impedance : 8Ω</li> <li>- Weight : 6.4kg(14.11 Lbs)</li> </ul>
<p><b>Table Top Stand</b></p> 	<p><b>DPE-T20G</b></p> <ul style="list-style-type: none"> <li>- Dimension : 667(W) x 212(H) x 320(D) mm 26.26(W) x 8.35(H) x 12.6(D) inch</li> <li>- Weight : 7kg(15.43 Lbs)</li> </ul>
<p><b>Wall Mounting Unit</b></p> 	<p><b>DSP/DP-HG10, DSP/DP-HG20, DSP/DP-HG22</b></p> <ul style="list-style-type: none"> <li>- Variable Angles : 0°, 10°, 15°, 20°</li> <li>- Dimension : 601(W) x 592(H) x 35(D) mm 23.66(W) x 23.31(H) x 1.9(D) inch</li> <li>- Weight : 4.5kg(10 Lbs)</li> </ul>



# CONTENTS

## PREPARATION

- 4 • Safety Precautions
- 8 • Checking Accessories
- 12 • Panel Controls
- 13 • Remote control
- 14 • To setup device change of remote control

## CONNECTION

 
- 15 • Antenna Connection
- 18 • To Watch TV
- 20 • Automatic Channel Memory
- 26 • Watching Digital Broadcasts
- 28 • Watching Cable Broadcasts
- 30 • Watching Satellite Broadcasts
- 32 • Watching a DVD Image
- 34 • Watching a VCR Image
- 36 • Watching a Camcorder/Game Console Image
- 38 • Connecting PC(15Pin D-Sub)
- 40 • Connecting PC(DVI)

## APPLICATION

- |   |  |
|---|--|
| 43 • Selecting Picture Mode             | 59 • MENU Background, Languages and key pad Lock Setting |
| 44 • Customizing Picture                | 61 • Enhancer Demo and Auto Power Setting.               |
| 46 • Adjusting Screen Size              | 63 • Closed Caption Setting                              |
| 48 • Adjusting Screen Position and Size | 65 • Time Setting  |
| 50 • Enlarging Screen Size              | 67 • Image Sticking Minimization(ISM)                    |
| 52 • Watching a Still Image             | 69 • Parental Lock Setting                               |
| 53 • Adjusting Auto Sound Mode          | 73 • Initialize Setting                                  |
| 54 • Customizing Sound Mode             | 75 • Setting Sleep Timer                                 |
| 56 • Selecting INPUT SIGNAL             |  |
| 58 • Checking the Current Input Signal  |  |

## MISC.

- 76 • Before Requesting Service
- 77 • SPECIFICATIONS

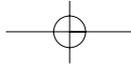


# Panel Controls

## Front Panel, Back Panel, Remote Control

\* Items having same names on Plasma display and the remote control would function in exactly the same way.
 
### Front


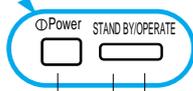


- Power control sensor
- Power Standby: Red - Standby  
Green - ON
- Power button




- Select when adjusting volume or select/adjust "MENU."
- Press when moving "MENU."

### Rear

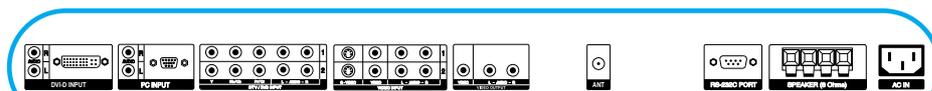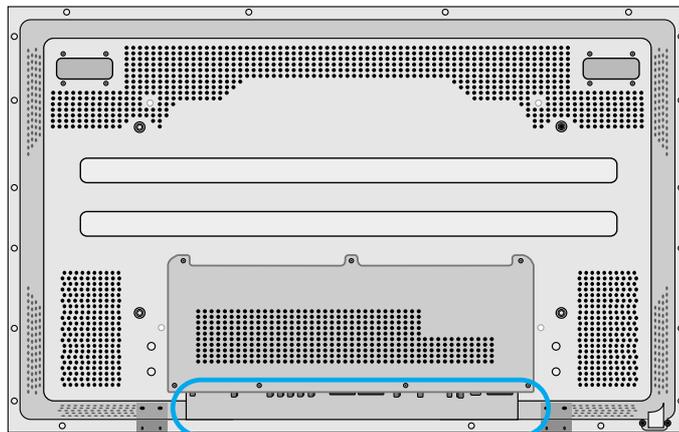 

 - DVI-D INPUT
- PC INPUT(15 pin D-sub)
- COMPONENT AV jacks (DTV/DVD INPUT jacks)
- S-VIDEO, AV INPUT, Cable Receiver INPUT jacks
- Monitor out
- ANT
- Used when manufacturing(For manufacturer use only)
- External Speaker
- Power



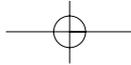

# Remote Control



## Note

- Use two "AAA" batteries.
- Be sure to use replacement batteries of the same type as the original ones.
- The life of a battery depends on how much it has been used.

\* The number in ( ) indicates the page in which the function of each button is explained in detail.

**TV/VIDEO(DVD)/SAT/CATV**  
Channel number (0~9)  
Use to select channel directly 0~9

**Display button**  
Indicates the current state and resolution.

**TV/VIDEO**  
Use this function to make video input selection. It changes in the following sequence TV -> Video1 -> Video2 -> TV

**ZOOM button**  
Used to zoom the screen. To enlarge, press the(+) button, and to return to the previous condition, press the(-) button.(Zoom Mode : Zoom 0~20)

**Menu button**  
Used to display a desired menu.

**Previous Channel button**  
It returns to previous channel.

**Mute button**  
Mute sound.

**Picture Mode button**  
Every press of the button cycles through the four different. Normal -> Movie -> Music -> News -> User.

**MTS button**  
This feature allows you to select the language and stereo sound while broadcasting

**CHANNEL ADD/ERASE**  
The feature either memorizes the current channel or erases a channel that has previously memorized

**Power button**  
Pressing the Power button of the Monitor allows the Display to be standby. (Red light is shown in the Remote Control Sensor.) At this time, if you press the Power button of the Remote Control, the Display is turned ON (Green light in the Sensor).

**100**  
Use it when selecting a channel number of over 100

**Multimedia**  
Use this function to make video input selection. It changes in the following sequence DVI -> PC -> Component 1-> Component 2 -> DVI

**CH button / Adjusts the channel.**

**Volume button / Adjusts the volume.**

**Screen Size button**  
Adjusts the size of the screen (Normal, 16:9, etc.)

**Caption button**  
This feature allows you to choose the caption.

**VIDEO/DVD Function**

**Still button**  
Used to view a still picture during watching moving images.(Sound can be heard.)

**Sound Mode button**  
Every press of the button cycles through the five different modes: Normal -> Movie -> Music -> News -> User.

**Sleep Timer button**  
Each time you press this button, a different input mode appears. The sequence is as follows: 15Min. -> 30Min. -> 60Min. -> 90Min. -> 120Min. -> OFF After the time is selected, it automatically becomes standby state.


### When Using Remote Control:


- Be sure not to allow the Remote Control to drop or to become wet.
- Keep it away from hot or moist locations.



### Installing the Batteries in your Remote Control:

- Push to open the cover of the remote controller
- Set the batteries in the battery cell after checking the electrode, and then shut the cover.

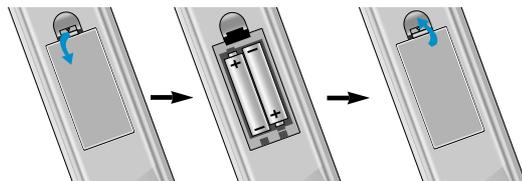

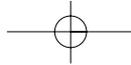

## To setup device change of remote control

### Method to setup device change of remote control

- The remote control is setup to be used for operating the HDTV provided together.  
You may also setup the remote control in order to operate cable TV receiver or video, etc with a remote control.

#### Notices:

##### ● Caution


- All the preset codes are erased when replacing the battery.  
In this case, you must reset the remote control again.

#### ● METHOD TO SETUP DEVICE CHANGE OF REMOTE CONTROL

- Ensure that power plugs of the outside device to be used are connected and that power turns off.
- Find the code number of the outside device to be used in the code list (See Setup Code of Remote Control).
- Continue to press the device change button related with the outside device to be used when the device change lamp (video / cable) flashes.
- With the remote control oriented downward, enter the remote control setup code number made of three numbers by using the number button of the remote control. If the code is correctly entered, power will turn on in the designated device (if no power turns on, repeat this process by using another code).
- Continue to press the device change button until the device change lamp flashes three times.

Remote Control Setup Code			
Cable TV receiver		Video	
Brand	Code	Brand	Code
Panasonic	046 049	Daewoo	001 007 009 012 060 061 086 088 090 094 095 096
Philips	009 015 016 023 064 078 083	JVC	013 030 032 040 044 046 051 056 103 119 121 128 166
Samsung	001 033 067	Mitsubishi	014 020 041 042 045 047 055 057 120 145
Toshiba	054	LG	013 014 020 079 084 092 099 127
		Panasonic	062 066 070 078 106 114 122 146 147 156 160 161
		Philips	030 032 033 050 063 067 079
		Samsung	031 038 080 082 083 085 087 090 091 093 097 098 101 153 163
		Sharp	030 050 118 143 150 164
		Sony	005 011 030 048 052 053 054 072 073 074 118 136 151



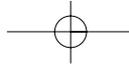


# Antenna Connection

## Indoor Antenna Connection

1. Connect the feeder cable of the antenna to the combining adapter.

### WHEN THE IMAGE IS NOT CLEAR


- Unclear screen image and bad reception may be a cause of wrong antenna connection. Be sure to check its direction and place when installing.

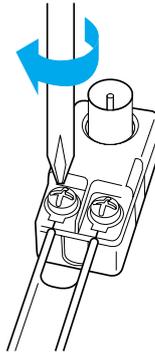


2. Connect the combining adapter to the antenna input at the back of the TV set.

### WHEN USING THE COMBINING ADAPTER

- You may obtain the combining adapter at your closest Service Center.

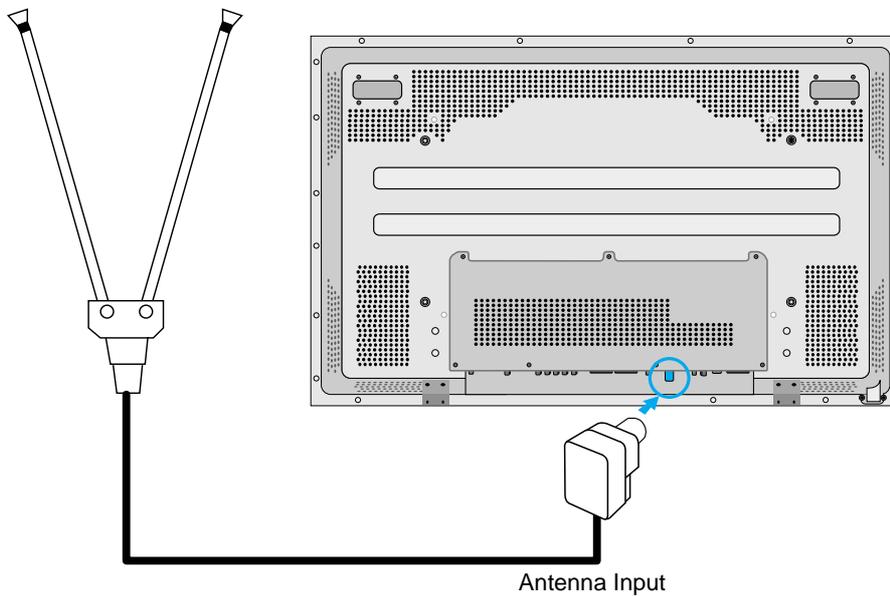

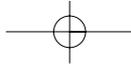


## CTV Antenna Connection


- Such community TV Antenna installation may be found in most of co-op apartments.
- If you use the provided coaxial cable, only plug the cable.(recommendation)

### When a coaxial cable is used

Plug the coaxial cable to the antenna socket, and fix it firmly by turning it to the right.

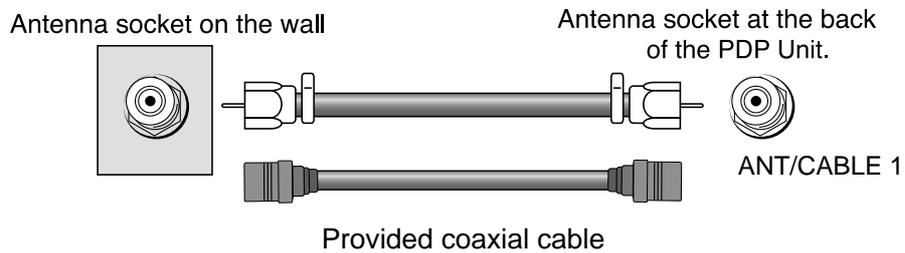


### When a feeder cable is used

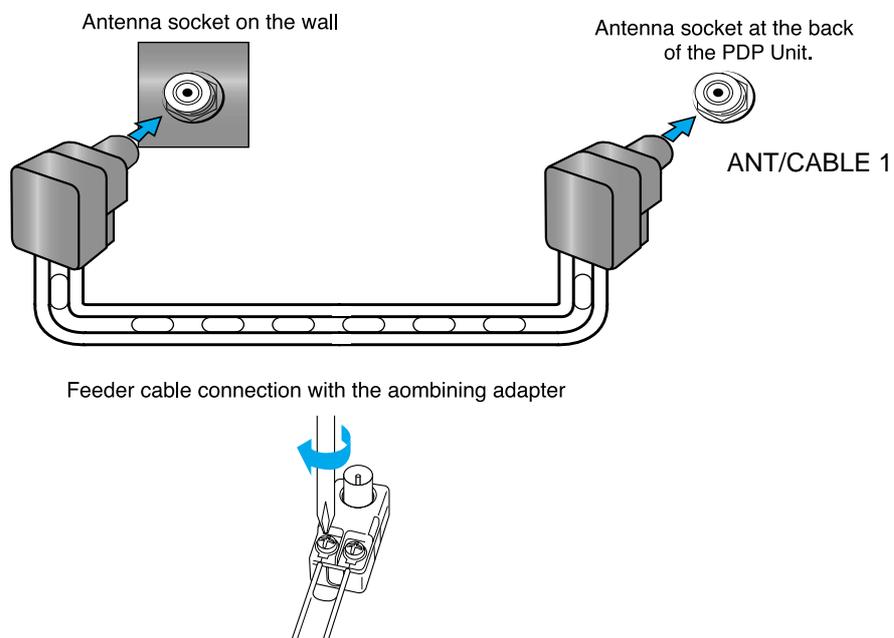


## Outdoor Antenna Connection


Outdoor Antenna connection-such as VHF or/and UHF-may be necessary for installation at private houses

### Single Antenna Connection.

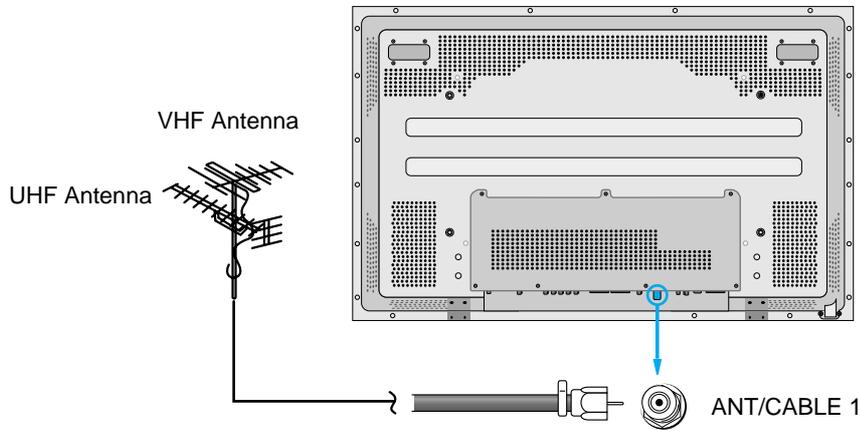

### Separate Antenna Connection.

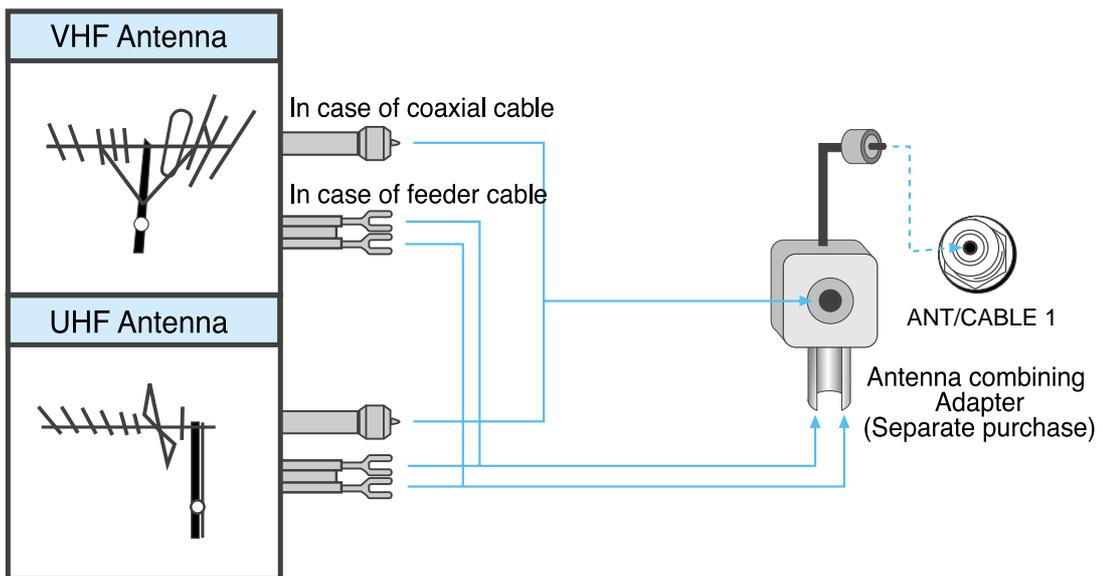

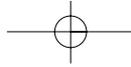

## To Watch TV

### To Watch TV

- Buttons with same name in the pdp set performs same function.

Press the "Main Power" button of the pdp set.

- The buttons of the remote control and the pdp set operate only when pressing the "Main Power" button of the pdp set. The remote control and the pdp set do not operate if turning the "Main Power" button of the pdp set off.

When pressing the Channel button

- Select two digits if using the number button for channel selection. For example, to watch the No.9 channel, Press the number button 0 and 9. If pressing only number 9, it takes long time for selecting channel.

To mute the sound

1. Press the "Mute" button.
2. No sound is heard if "Mute" is displayed on the screen.
3. Sound is heard again if pressing the "Mute" button once again. For example, please use this button when telephone rings or when guest comes while watching TV.

Check of TV operation status

- If pressing the "Display" button, status of channel or broadcasting being currently watched or entry status of video component is displayed on the screen.

