

Size:75X90mm

K WO240 · 4 Jul 2014 · AT

WINSONIC®

BLUETOOTH SPEAKER

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: WO240

GENERAL WARNINGS:

1. Read all instructions very carefully before use.
2. This unit is designed for adult use only. Always keep away from children.
3. This unit is designed for indoor use within temperature 5-40°C (41-104°F) only. If unit freezes, place it in room temperature until the liquid defrosts before powering on the unit.
4. If the unit is broken and/or liquid leaks, discard the unit immediately.

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

 
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void users authority to operate this device.

1

Battery Recharge

The unit has a built-in Li-Polymer rechargeable battery, recharge it before use as follow:

- Insert the small plug from the supplied USB Connection cable to the Mini USB Port on the rear of unit.
- Insert the other plug to the USB Port on the Personal Computer or any USB Charger having DC 5V output as the figure below. (During charging, the Red Indicator on the rear of unit will light. When finished, it will turned off).



To Mini USB Port

To PC or any USB Charger

Notes:

 
Your battery will last longer if you following these simple guidelines for caring for and storing it.

- A. For charging first time, charge it at least 10 hours.
- B. Recharge and store the unit within the temperature range of 5°C-35°C (40°F-95°F).
- C. Do not over charge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

2

Location of Controls:

1. Charging Indicator
2. AUX IN Jack
3. +5V Mini USB Port (For charging only)
4. POWER ON/OFF Switch



AUX IN:

To listening from the external Music player such like MP3 Player, Discman ...etc.

1. Insert one end of the supplied Audio Connection Cable to the AUX IN Jack on the unit. Connect the other end to the Line Out; AUX Out or Phones Jack of the external audio player.
2. Slide the POWER ON/OFF Switch to ON position to power on the unit. The Red Indicator on front will light.
3. Plays the music in the connected Audio Player as usual.
4. Adjust the sound level by adjust the volume control on the connected Audio Player.
5. When finished listening, slide the POWER ON/OFF Switch to OFF position to shut off the unit.

3

Specification

Power Source	Built-in Li-Polymer rechargeable battery. Recharge by DC 5V through Mini USB Port.
Audio Power	1.2W
Impedance of Speaker	3W ; 4 Ohm

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

4

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.