


非常感谢你选用D8随身听蓝牙音箱,请在使用前,详细阅读 本说明书,正确操作使用,更好的发挥产品优越性能。本产品 外观设计时尚绚丽,小巧便携,音质纯美,多功能一体化设计, 全系列拥有外观专利系统上采用行业领先电声技术,使你在 居家使用.户外旅行.商务工作中随时随地享受到卓越的音响 效果,为你的平板电脑、手机、数码音乐播放器等广泛视听产 品提供超值完美的音质,炫彩随身听炫彩精灵 惊艳之美!

## 蓝牙无线技术

通过蓝牙无线技术, 您无需使用线缆就可以将音箱连接至与 其相兼容的通信设备。蓝牙无线连接无需保持手机与音箱相 互正对,但两者之间的最大距离不应该超过10米(约30英尺), 蓝牙无线连接可能因墙壁等障碍物或其他电子设备而受到干

在某些地区,使用蓝牙无线技术可能受到一些限制,请向当地 主管部门或服务供应商咨询。

# 音箱概述

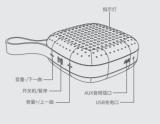

### 温馨提示

1、为有利干延长音箱使用寿命和你的身心健康,请不要在长 时间大音量的环境下听音,以免损害你的听力。

■ 蓝牙V4.1 ■ 多媒体兼容 ■低耗节能 ■强劲兼容


- 2、出现故障时,请立即关断电源开关,拔掉USB插头,防止扬 声器及其它元件损坏。
- 3、电量不足会影响蓝牙距离或蓝牙容易断开,请及时充电。

## 产品参数

型号:	D8	
功能用途:	音乐欣赏	
蓝牙版本:	V5.0	
发射功率:	Class2	
工作频段:	2.402~2.480GHz	
通讯距离:	10M(因环境因素及连接的蓝牙设备不同而不同)	
充电规格:		
电池规格:	300mAh(聚合物锂电池)	
播放时间:	1.5小时左右	
喇叭阻抗:	4Ω	
喇叭功率:	3W	
输出功率:	2.2W	
额定功率:	2W	
频率范围:	100Hz ~ 20KHz	
灵敏度:	80 dbm	
信噪比:	90dB	

### 充电

把音箱配线连接音箱跟电源, 音箱红灯点亮, 此时为音箱充 电,到外电量充满时红灯灭。

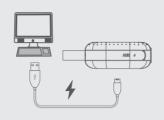

## 音箱蓝牙配对

- 1.长按电源开关键3秒开机,听到开机提示音后,蓝牙进入配对 模式,蓝灯快闪。
- 2.打开手机开启蓝牙,搜索蓝牙对码名:D8,点击对码名配对, 几秒钟后听到配对连接成功提示音, 手机上显示已连接。 3.打开手机系统自带音乐播放器就可以手机播放音乐。

## 输入音频切换说明

- 1.开机后连接以蓝牙优先,插入line in 线,自动转到AUX,拔出 line in 线,回到蓝牙状态。
- 2.输入模式切换灯显示为:蓝牙状态,灯闪烁为蓝牙准备对码 中,长亮为已对上码。音频输入状态,插入3.5mm音频插头。 自动切换为line in状态,灯长亭。

## 常见问题解决方法

请在常温环境中存放以及使用本产品;

请勿丢掷,避免因跌落造成产品损坏;

请勿自行拆解.修理和改造本产品;

请勿将本产品暴露在雨中或潮湿环境中:

产品内置锂电池, 请勿随意丢弃或置以火中, 以免引起危险!

注意事项

现象 问题	解决方法
多次连接配对不成功	1、检查音响是否处于搜索状态,或重新开机。 2、周边蓝牙设备太多,造成搜索困难,关闭其他蓝牙设备。
声音小或失真	1、检测蓝牙设备音量,调节其音量至合适位置。 2、电池电压低请充电。
音乐出现断音	1、是否超出音响有效连接距离,或音箱与蓝牙设备 有障碍物。
蓝牙状态指示等不亮	1、表示电池电量不足,请充满再试。 2、重新开机

## 保修条例

本产品有效保修期为自出售之日起一年内,在保修期限 内正常使用和维护的情况下, 机器本身机件材料及功能 出现问题,发生故障,经查属实,本公司将提供免费修 理及更换零件。

本产品的保修不适用干:

A. 音箱已超出保修期:

- B. 用户未按照说明指南要求,造成音箱折断,外壳破损; C. 未经本公司授权自行拆装, 修理, 改动结构;
- D. 无法提供保修卡及消费凭证;
- E. 因自然灾害等不可抗力(如地震、火灾)原因造成 的产品故障或损害; 注:保修服务不包含产品运输费用及在不提供上门维修服务

NOTE: This equipment has been tested and found to comply with

the limits for a Class B digital device, pursuant to part 15 of the

FCC Rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This

equipment generates uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct

the interference by one or more of the following measures:

保修反馈表(勾选)

A. 音箱无声音 B. 音质变差 C. 按键无法操作 D.无法配对设备 E.无法充电

F.其他

用户购买时间

购买的经销商

问题出现时间

用户联系方式

 
服务热线: 400-8090-830

Service Hotline: 400-8090-830

Remine Industrial (Asia) Co., Limited

Manufacturer: Shenzhen WK Technology Co., Ltd

Road, Longhua New District, Shenzhen City




Thank you for purchasing our D8 wireless speaker! In order to use it in a proper way and to ensure the product performance very well for you, please read this manual carefully before your using. Fashionable, mini, cute and portable, with pure sound quality are its characteristics. Besides, being multi-functionally integrated, the whole series has patent for its appearance. The whole series adopts the industry's leading electro-acoustic technology which makes it possible and very convenient for you to enjoy excellent sound effects anytime and anywhere, no matter when you are staying at home, traveling outdoor, business working or any other places, to provide you perfect sound quality for your Tablet PC, mobile phones, digital music players and other audio-visual products. Listen to the fantastic music anytime and anywhere, enjoy the colorful world.

# Wireless Wireless Technology

 
With the wireless wireless technology, you can connect the speaker to its compatible communication devices without using cables. The wireless connection allows you to use a cell phone without holding it with the speaker face to face, but the maximum distance between them cannot exceed 10 meters (about 30 feet). The wireless connection may be interfered by obstacles (such as walls) or other electronic devices.

Overview



and unplug the USB plug to prevent damage to the speaker and other components.

In some areas, use of the wireless technology may be restricted. Please consult your local authority or service provider for details.

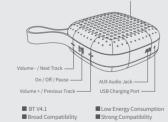

1. In order to help extend the life of the speaker and for your physical and mental health, please do not listen in a high-volume environment for a long time, which may cause damage to your hearing. 2. When a fault occurs, please turn off the power switch immediately,


3. Power shortage will affect the Bluetooth's effect working distance or result in the Bluetooth disconnection easily, please charge the product in time.

### **Product Specifications**

 Model:	D8			
Function:	Listening to music			
BT Version:	V5.0			
Transmitting Power:	Class2			
Working Frequency:	2.402~2.480GHz			
Communication Distance:	10M			
(Depending on environmental factors and connected BT devices)				
Charging:	arging:Micro USB/5V, 300mA			
Battery:	300mAh (Polymer lithium battery)			
Play Time:	About 1.5 hrs			
Speaker Impedance:	4Ω			
Speaker Power:	3W			
Output Power:	2.2W			
Rated Power:	2W			
Frequency Range:	100Hz ~ 20KHz			
Sensitivity:	80 dbm			
SNR:	90dB			

## Charging

The red indicator of the speaker lights up when charging. The red indicator goes off when fully charged.



### Pairing

1. Press and hold the power button for 3 seconds to turn the speaker on. After hearing the power-on prompt, the product enters the pairing mode and the blue indicator flashes quickly.

- 2. Turn on the wireless function of your phone, searching for pairing name D8. Click the pairing name to connect. You will hear prompt tone if the pairing is successful. Your phone will also show the connection.
- 3. Turn on media player of your phone, and now you can play songs and control media playback through your phone.

### Play Modes

按键使用说明

开机:长按Power键3秒。

播放:音乐连接状态,短按Power。

暂停:播放状态,短按Power为暂停。

挂断: 在通话状态, 短按Power为挂断。

回拨: 双击Power为回拨最后一次通话。

音量+/下一曲键:长按音量加 短按下一曲

音量-/上一曲键:长按音量减 短按上一曲

接听电话:在来电状态,短按Power为接听电话。

1. Once powered on, the speaker's priority is Wireless mode. Insert LINE IN cable, it automatically changes to AUX mode, Pull out LINE IN cable, it returns to Wireless mode. Indicator of input mode:

Wireless mode: Flashing indicator: waiting for pairing. Indicator is on: paired.

Audio input mode: Insert 3.5MM audio plug, it automatically switches to LINE IN mode, and the indicator is on.

## Buttons

Switch on: Press and hold Power Button for 3 seconds. Play: Click Power Button in music mode. Pause: Click Power Button when playing music.

Answer Calls: Click Power Button to answer incoming calls. Hang Up: Click Power Button to hang up the call.

Last Called Number Redial: Double-click Power Button. Volume +/Next Track Button: Press and hold to increase volume: click to go to next track.

Volume-/Previous Track Button: Press and hold to reduce volume; click to go to previous track.

### Precautions

Please store and use this product in an environment of normal temperature: Please do not expose this product to rain or moisture environment.

Please do not throw away, so as to avoid damage to the products caused by falling off;

vourself without authority: Due to there are built-in lithium battery inside, please do not discard

or put it in the fire arbitrarily, so as not to cause danger!

### Problem & solutions

Problem	Solving method
	check whether the Bluetooth headset is in search mode, or reboot. Bluetooth devices nearby is too much, result in searching very difficult, turn off other Bluetooth devices.
Voice is small or distorted	Detect the Bluetooth device volume, adjust its volume to the appropriate location. The battery voltage is low, please charge.
Music sound doesn't play fluently	Check whether the Bluetooth headset is outside the effective connection distance, or Bluetooth headset and Bluetooth devices have obstacles.
Bluetooth status indicator doesn't work.	Battery voltage is too low, please charge and then try again. Reboot

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

FCC ID: 2ALJXD8


# Warranty

This product is covered under warranty for a period of one year from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon further identification will be provided free repair and replacement parts.

### The warranty of this product is not applicable to the followings:

- A. Speaker is beyond the warranty period;
- B. Users do not follow the instructions therefore causing speaker broken or housing damaged.
- C. An unauthorized disassembly and assembly, repair or structures alteration.
- D. Can not provide warranty card and consumer certificate;
- E. Product failure or damage caused by natural disasters or force maieure factors ( such as earthquakes, fires, )

Note: The warranty does not include product transport costs and does not provide on-site maintenance services

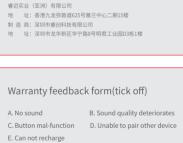

Office Address: 15/F, Two Grand Tower, 625 Nathan Road, Kowloon, Hong Kong

Add: 1st Floor of D3 Building, MingJun Industrial Park, No. 8 Hua Ning

WK DESIGN

Buying time

Dealers of sale

Time of problems

User's contact info