

Lingerie play



Go to we-vibe.com for the complete user manual.

Electrical Rating

Model: Moxie Model No.: 12000-01 3.7 V === 0.5 A: Built-in Lithium-Ion rechargeable battery. 5 V === 0.5 A: When charged using USB Charging device.

USB AC adaptor (not included) with power output corresponding to product rating. Do not use fastcharging adaptor. Use original provided cable only.

Environmental Protection As a distributor of electronic devices, we are legally obliged to trical and electronic devices free of charge. We expressly state that you as the user are legally obliged to return used batteries. Never throw away electronic dewaste. The symbol shown below

Manufactured and distributed by WOW Tech Canada Ltd. 1545 Carling Avenue, Suite 401, Ottawa ON, Canada K1Z 8P9 www.wowtech.com

(crossed-out wheeled bin) is inten-

ded to expressly remind you of this.

Customer Care

we-vibe.com

care@we-vibe.com

WOW Tech Canada Ltd. reserves and changes to the design that serve to improve the device.

For information regarding patents see we-vibe.com/patents.

Designed in Canada. Made in China.

Date of issue: 09/2021.





we\vibe

Fun on the go

Moxie is a wearable hands-free clitoral vibrator. Worn underneath your clothing, it's a sexy little secret that can be shared with a partner for discreet pleasure anytime, anywhere.

Contents

Page	01.	Power on
Page	03.	Cleaning
Page	04.	How to use
Page	06.	Charging
Page	07.	Pairing
Page	09.	We-Vibe remote
Page	10.	Safety and legal

Box contains: Wearable clitoral vibrator, We-Vibe remote, 2 magnetic clips, charging cable, quick start guide, safety instructions, pouch

 
Getting to know

1 Control button

Press the control button to switch your toy on. Press the button again to cycle through 10 different vibration patterns. To turn it off hold the control button.

Once Moxie is placed on your underwear, it stays in place as you move.

3 Magnetic charging pins











4 We-Vibe remote

Keep control in the palm of your hand with Moxie's compact remote,



4. Ultra



3. High 8. Ramp







Step 1: clean



■ Rinse Moxie with warm water

and a premium toy cleaner,
dry with a lint-free cloth.



Step 2: enjoy

Place the toy on your underwear and secure using the magnetic clip.



Shaped for maximum comfort. Moxie sits comfortably between the labia and pampers the clitoris with intense vibrations.





The toy always stays in place nothing slips even with faster movements.

Step 3: charge

Enjoy up to 2 hours of play with every charge. When it's time for a recharge, place charger on magnetic pins. After 90 minutes, your toy is ready to go!







Step 4: pair

Moxie comes paired to the remote out of the box.





Moxie can only connect to one remote or app-enabled device at the same time.

Same room play

To pair Moxie to We-Connect, follow the in-app pairing instructions

on your app-enabled device. Press and hold the We-Vibe button for 5 seconds. Moxie vibrates twice and the LED will start flashing. Moxie is in

pairing mode now. Once paired, Moxie will vibrate three

times and the LED will stop flashing.



Long distance play

To play long distance, both you and your partner need the We-Connect app on your smartphones. Moxie is then paired to the phone that remains within Bluetooth range.



After exiting the We-Connect app, press and hold the We-Vibe button on Moxie for 5 seconds. Moxie vibrates twice and the LED will start flashing. Hold the We-Vibe button on your We-Vibe remote for another 5 seconds.

Once paired, Moxie will vibrate 3 times and LED will stop flashing.



Step 5: **battery**

To change the battery in your remote, simply pull off the bottom cap and lift the battery out. Replace it with a nonrechargeable CR2032 button cell battery.



