



Photo 1 Cover Open(Model:PTZ-430)



Photo 2 Inside cover off (Model:PTZ-430)

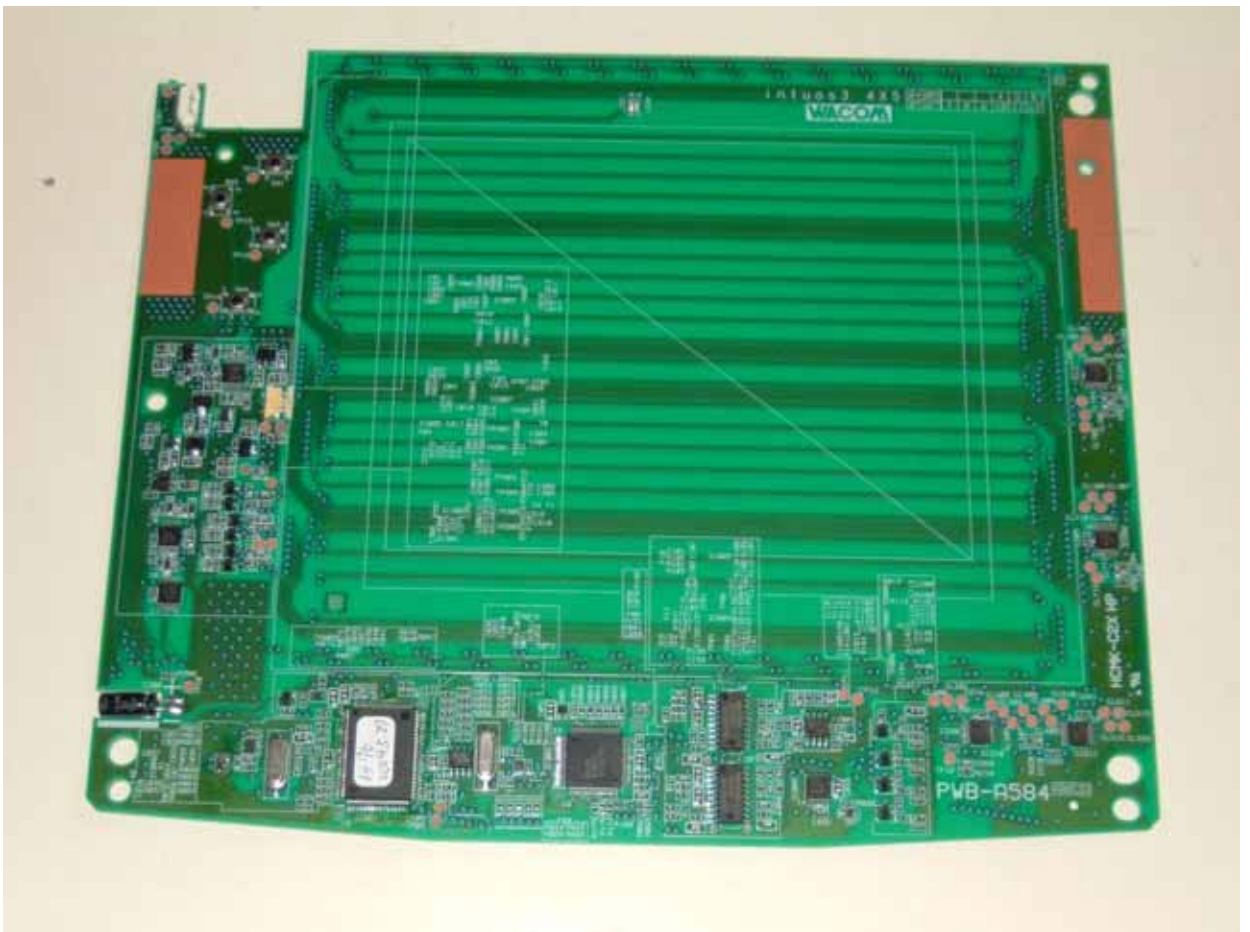


Photo 3 Front of PVB-A584 (Model:PTZ-430)



Photo 4 Rear of PWB-A584 (Model:PTZ-430)

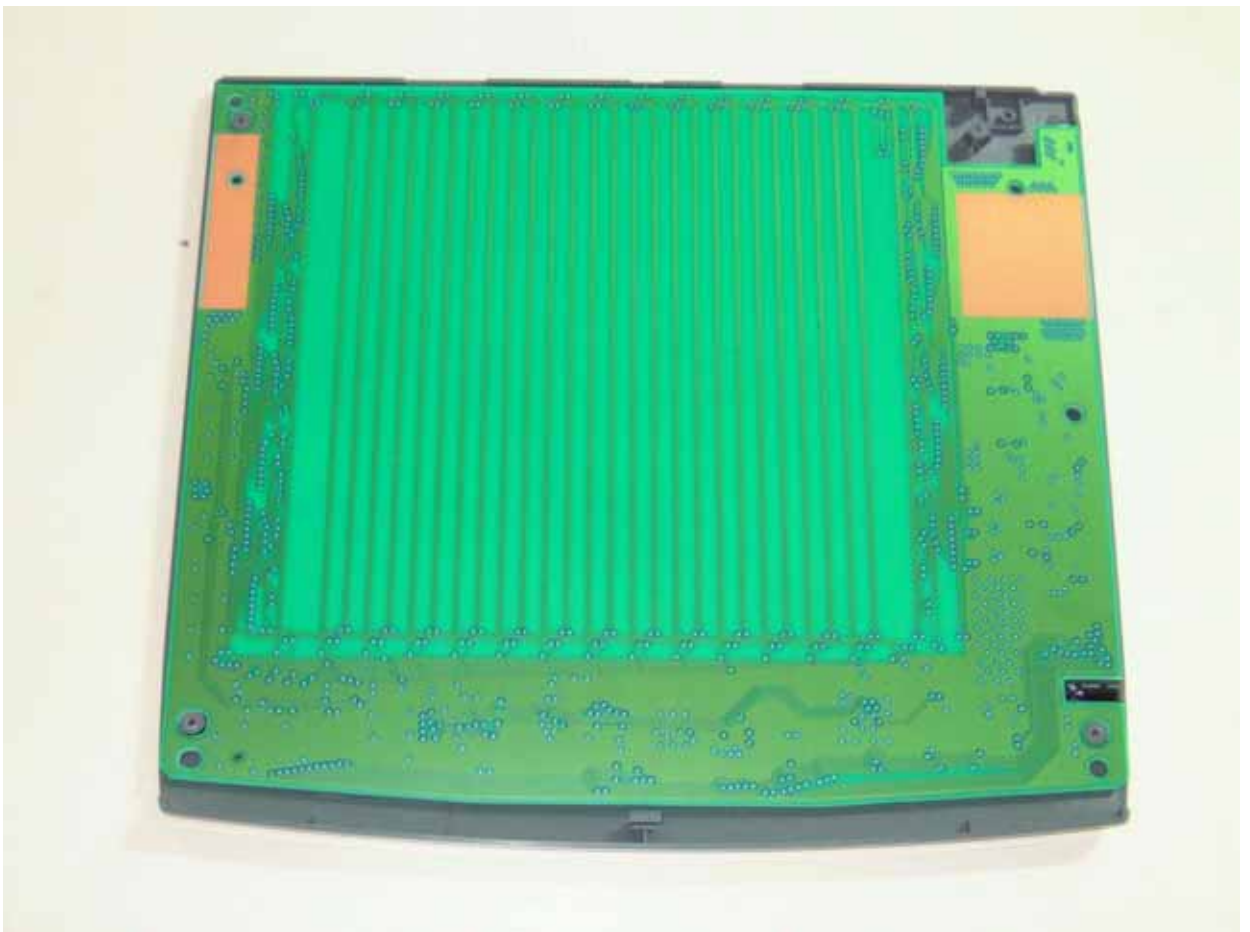


Photo 5 Rear of PWB-A584 / Cover off (Model:PTZ-430)



Photo 6 Cover open (Model:PTZ-630)

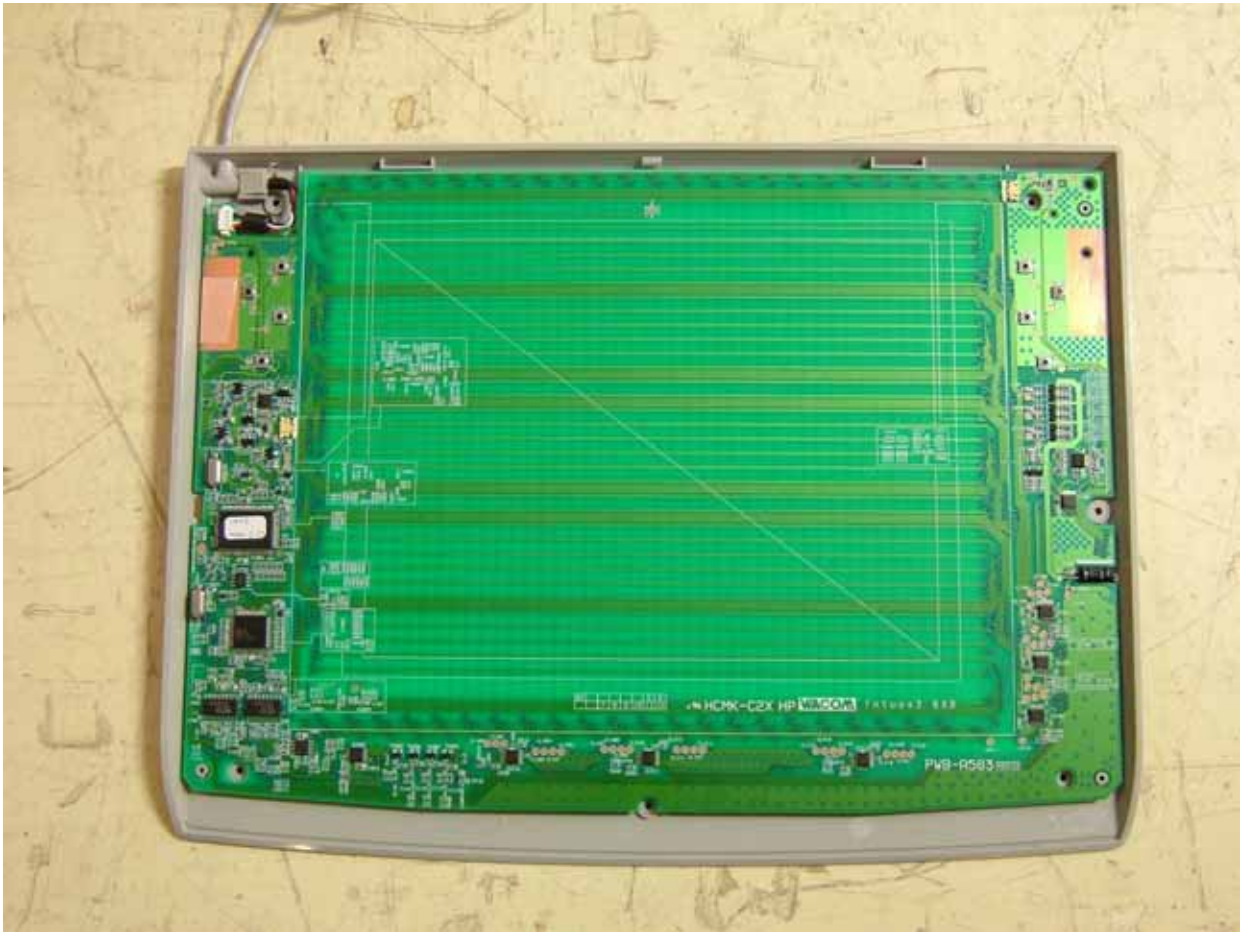


Photo 7 Inside Cover off (Model:PTZ-630)

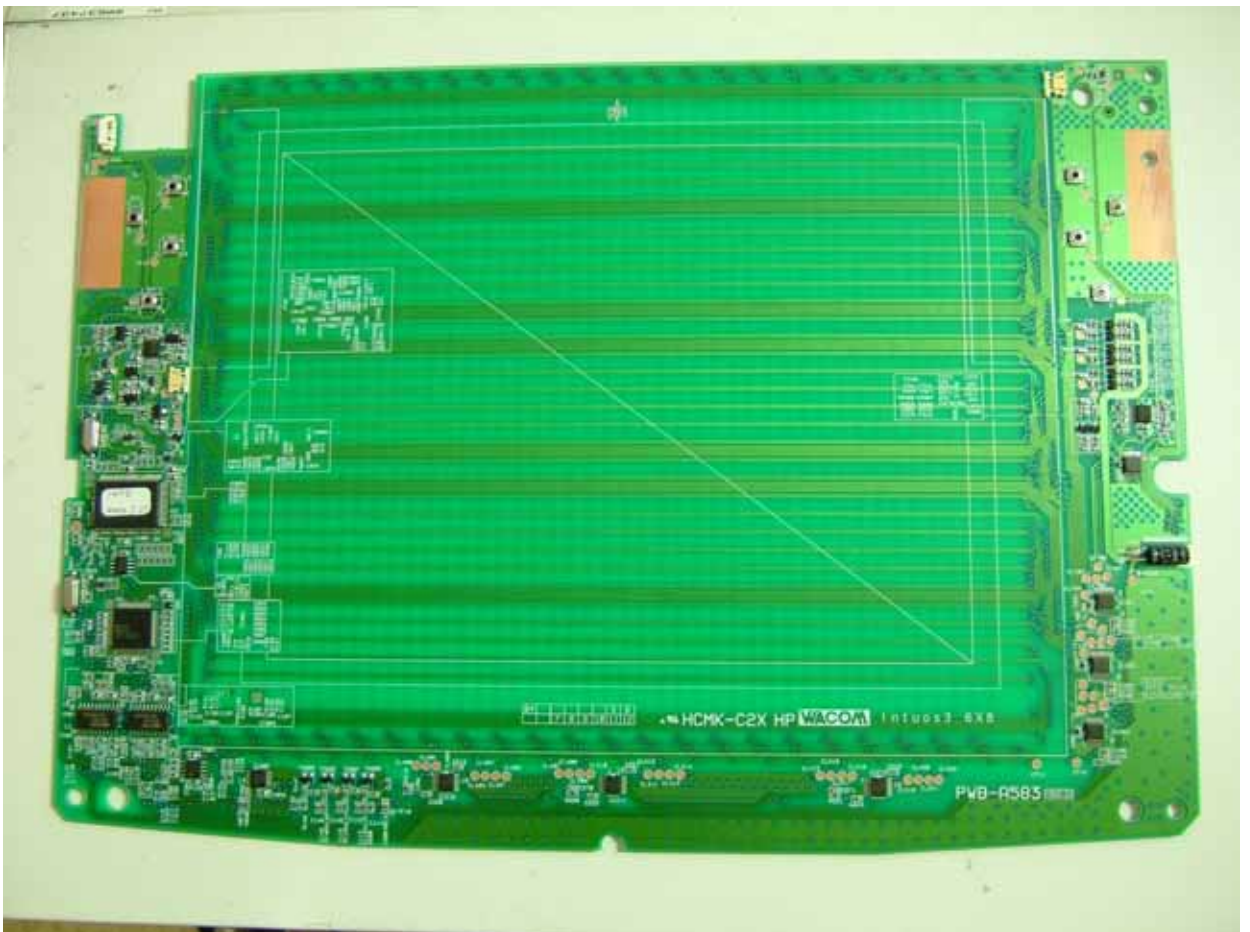


Photo 8 Front of PWB-A583 (Model:PTZ-630)



Photo 9 Rear of PWB-A583 (Model:PTZ-630)

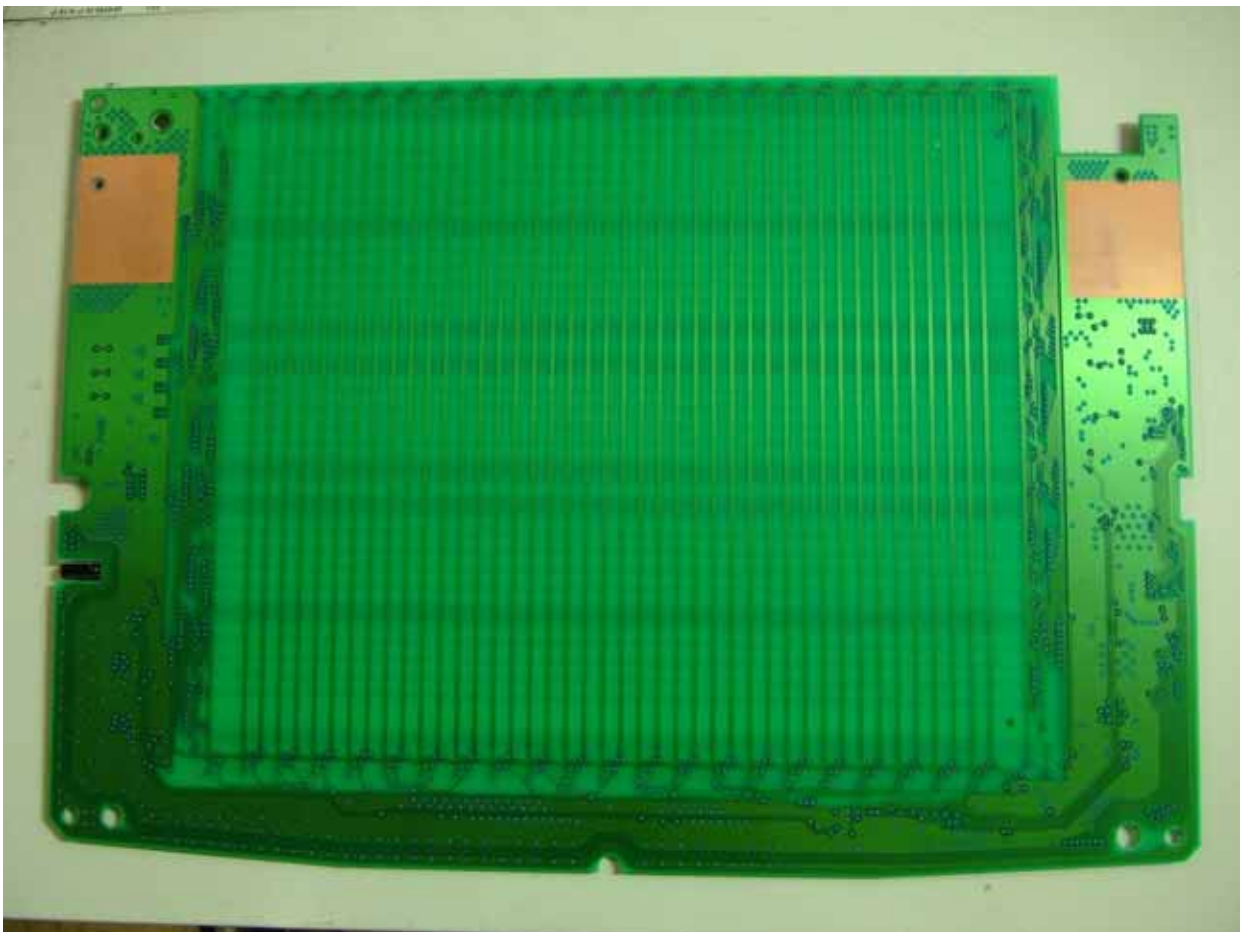


Photo 10 Rear of PWB-A583 / Cover off (Model:PTZ-630)



Photo 11 Cover Open (Model:PTZ-930)



Photo 12 Inside cover off (Model:PTZ-930)

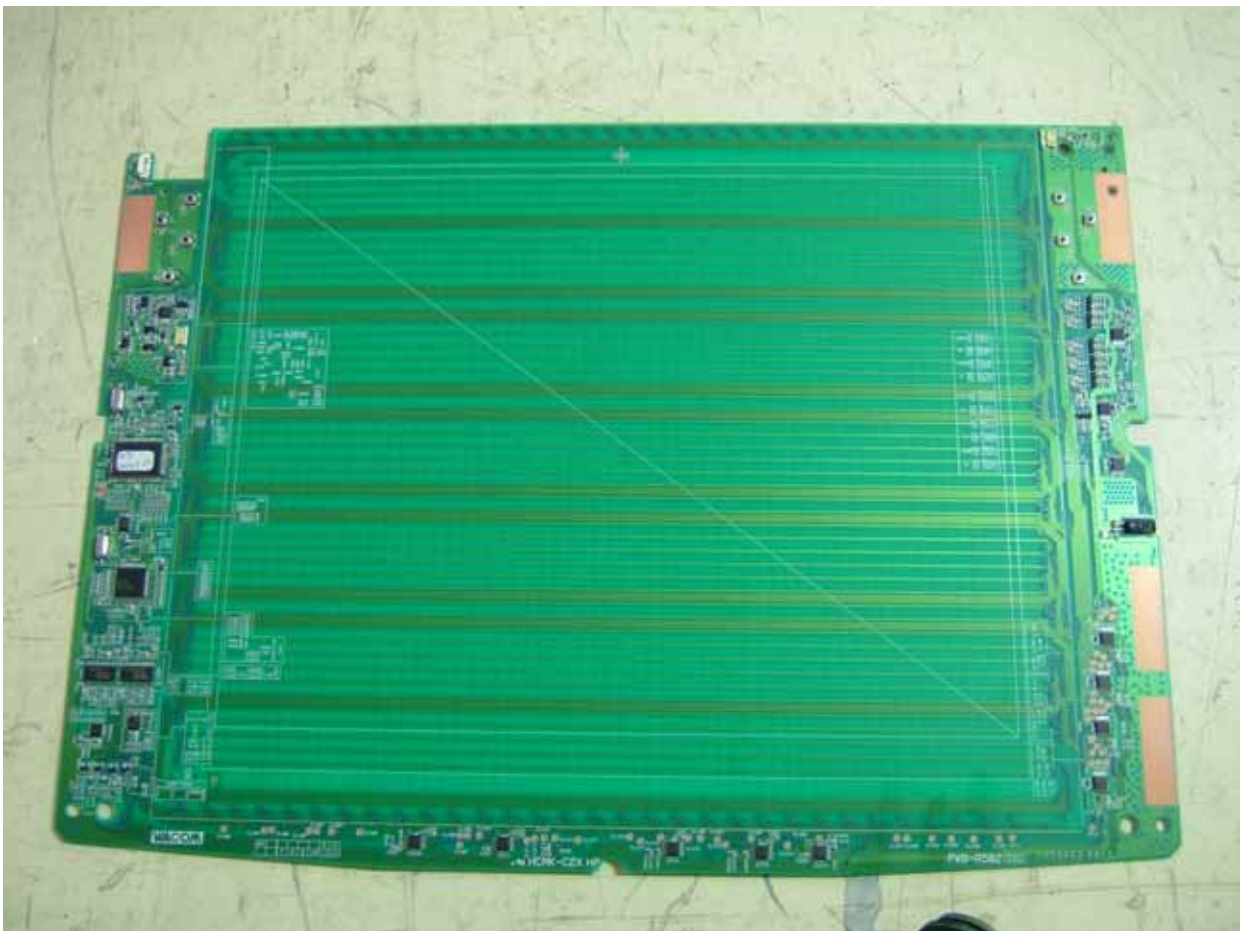


Photo 13 Front of PWB-A582 (Model:PTZ-930)



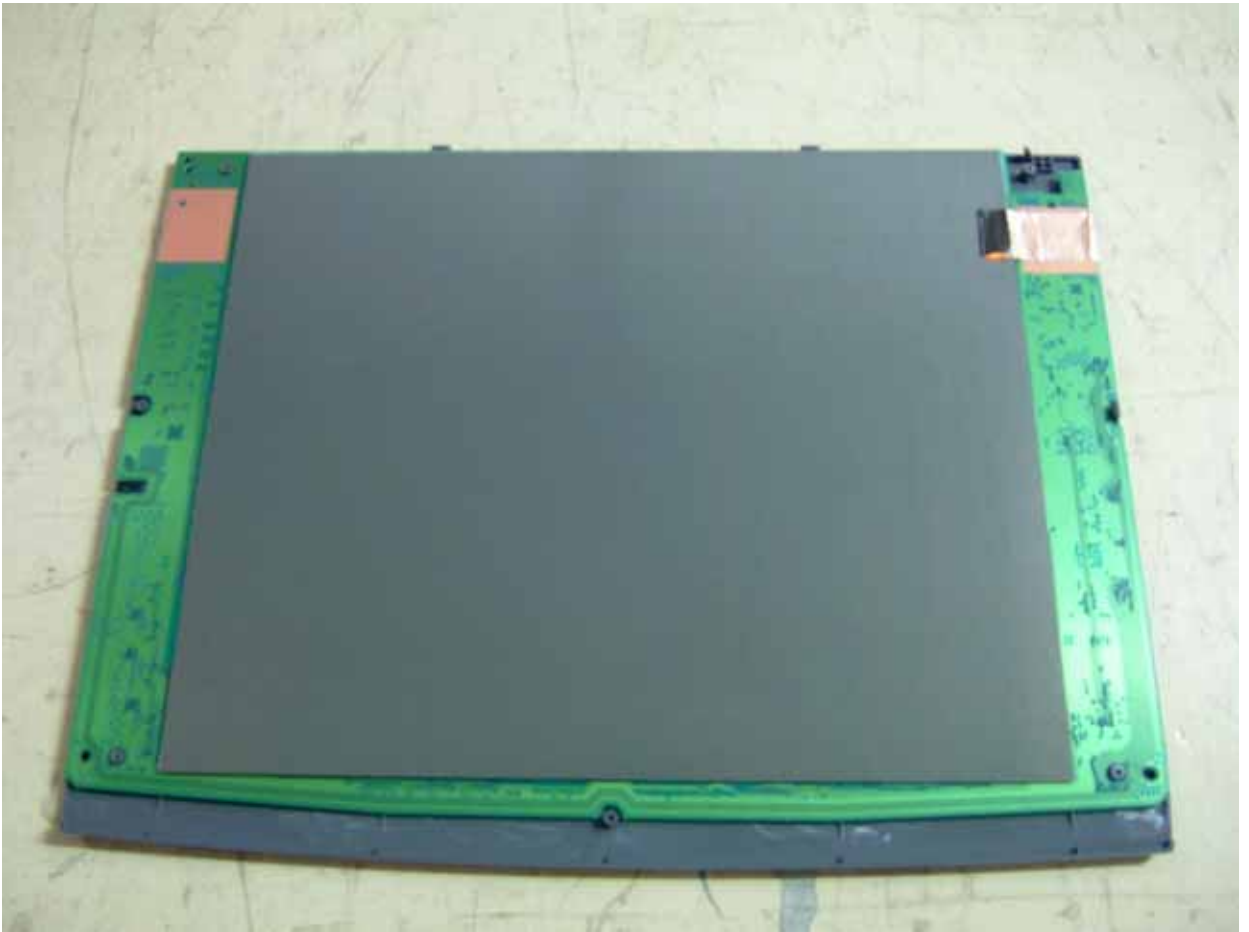


Photo 14 Rear of PWB-A582 (Model:PTZ-930)

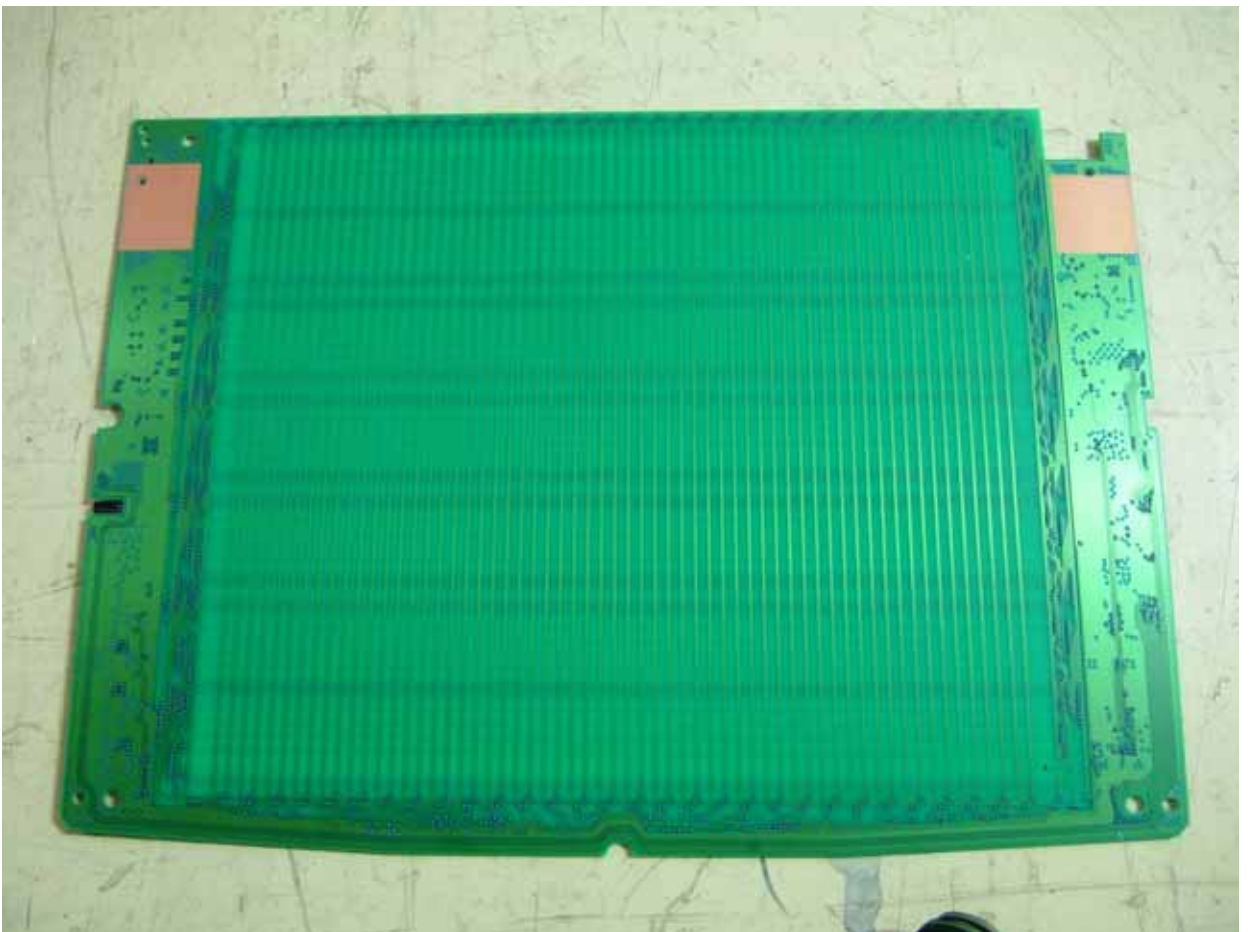


Photo 15 Rear of PWB-A582 / Cover off (Model:PTZ-930)

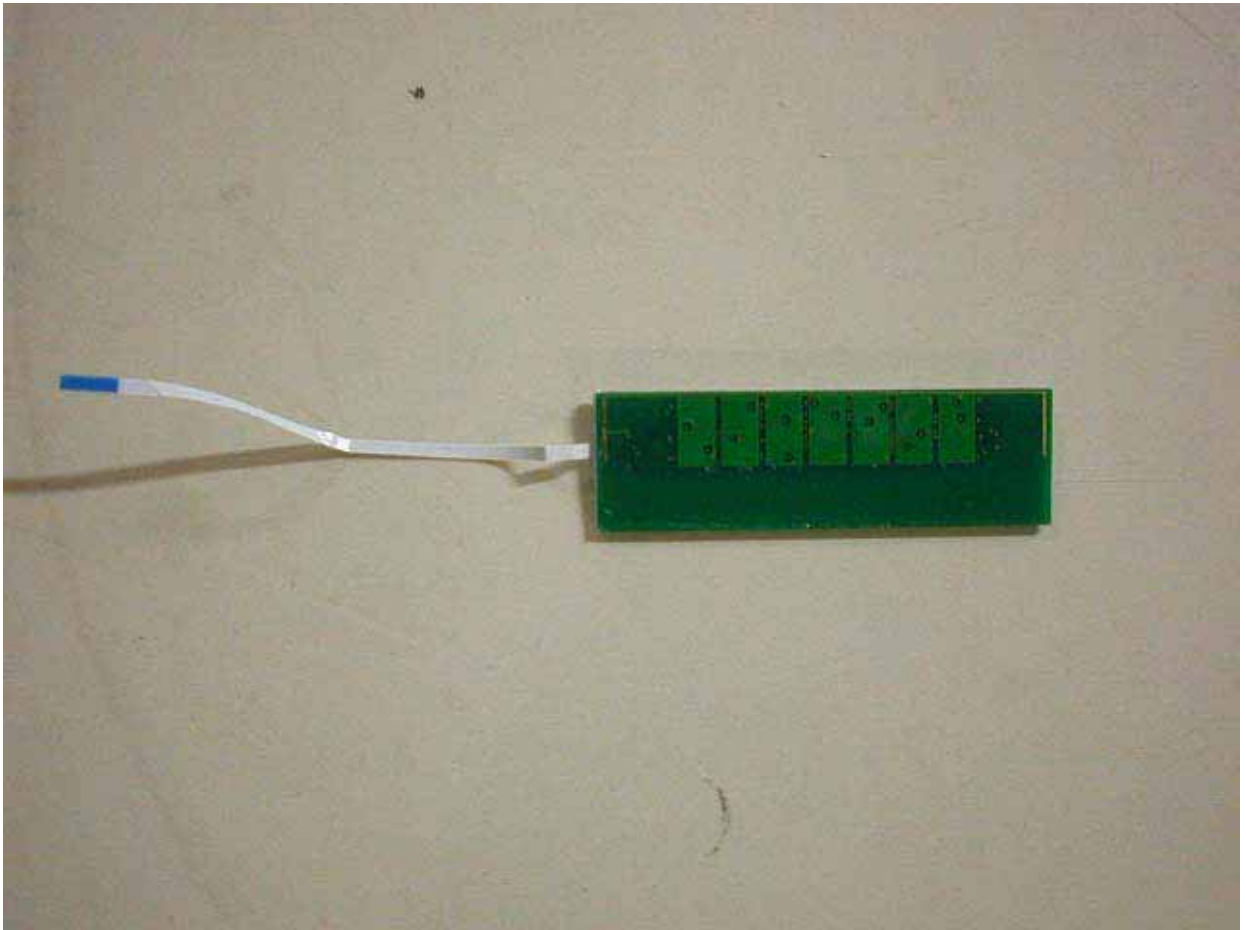


Photo 16 Rear of board for Touch pad (PZT-430, PTZ-630 and PTZ-930.)



Photo 17 Front of board for Touch pad (PZT-430, PTZ-630 and PTZ-930.)