

Running the Intuos2 Overview

For a quick overview of your Intuos2 Graphics Tablet System, double-click on the **INTUOS2 OVERVIEW** icon located on the Wacom CD.

Viewing the Online USER'S MANUAL

For more detailed information on using and customizing Intuos2, refer to the online User's Manual.

Windows - To view the manual, select **INTUOS2 USER'S MANUAL** from the **WACOM TABLET** group.

Macintosh - To view the manual, double-click on the **INTUOS2 USER'S MANUAL** icon located in the **WACOM TABLET** folder.

To read the User's Manual before installing Intuos2, run the install program and choose **CUSTOM** install. Deselect all components except **ENGLISH USER'S MANUAL** and **ACROBAT**. Click **INSTALL** or **NEXT**, and follow the prompts.

Using the Intuos2 Pen and 2D/4D Mouse



Pointing and selecting. Move the Intuos2 Pen above the tablet surface to position the screen cursor, then press the pen tip on the tablet to make a selection.

Clicking. Tap the tablet once with the pen tip.

Double-clicking. Press the upper side switch (Windows) or lower side switch (Macintosh), or quickly tap the tablet twice in the same place with the pen tip.



Dragging. Select an object, then slide the pen tip across the tablet surface to move the object.



Erasing. In supporting applications, the pen's eraser works like the eraser on a pencil. In text applications, use the eraser to select text, then lift the eraser from the tablet to delete the text.



Using the 2D/4D Mouse. Place the Mouse on the tablet. The screen cursor is positioned when you move the Mouse across the tablet surface. Refer to the online User's Manual for detailed information on button and thumbwheel defaults for the Mouse.

Refer to the online User's Manual for detailed information on using Intuos2.

Customizing Your Intuos2 Tools – The Basics

The Wacom control panel makes it easy to customize your Intuos2 tools.

To open the control panel:

Windows. Click on the Windows **START** button and choose **PROGRAMS**. From the **WACOM TABLET** group, choose the **WACOM TABLET** option.

Macintosh. From the Apple menu, choose **CONTROL PANELS** and then **WACOM TABLET**.

When you open the control panel with an Intuos2 tool, the tool is automatically selected in the Tool List and the appropriate tabs are displayed. To customize the selected tool, make your changes to the tab controls. On Windows systems, be sure to click **APPLY** or **OK** to save your changes.

Note: Application-specific settings are for advanced users. Refer to the online User's Manual for more information on creating and using application-specific settings.

The pull-down menus access a variety of control panel features.

Displays applications that have custom tool settings associated with them.

Displays tools that can be customized for the application selected above.

Tabs display settings for the selected application and tool.

Current selections are highlighted. Wedges emphasize the relationship between tab settings and the selected tool and application.

These buttons are for creating application-specific settings. Refer to the online User's Manual for details.

For Windows only. **OK** saves changes and closes the control panel. **CANCEL** closes the control panel without saving changes. Use **APPLY** to save changes without closing the control panel. **HELP** displays online Help for the control panel.

Resets the selected tab to its factory default values.

Returns a tab to its previously saved or last applied settings.

Copies settings from one tool or application to another.

Windows control panel shown.



© 2001 Wacom Company, Limited. All rights reserved. Wacom is a registered trademark, and Intuos is a trademark of Wacom Company, Ltd. Other product and company names are trademarks and/or registered trademarks of the respective owners.

Quick Start Guide PRELIMINARY

Intuos™2 USB for Windows® 98 and 2000, and Macintosh®

Getting started with Intuos2 is quick and easy. Just use this guide to install the hardware and software, and to learn the basics of the Intuos2 Graphics Tablet System.

- Recherchez le guide de mise en route correspondant à votre langue sur le CD Wacom.
- Busque la Guía de arranque rápido en su idioma en el CD de Wacom.
- Procure o Guia de Inicialização Rápida em seu idioma no CD Wacom.

Box Contents

Intuos2 Pen

2D Mouse

4D Mouse (9x12 and 12x18 tablets)

Wacom CD

Bundled Software CD

4x5

6x8, 9x12

Pen Stand

The Intuos2 tool(s) and tablet included in your box will vary depending upon the tablet model purchased. Images are not shown to scale.



PRN-A2xx 0X10752xx

Questions? Visit our Web site at <http://www.wacom.com/productsupport>

Intuos2 supports hot-plugging, which allows you to connect or disconnect Intuos2 while your computer is turned on.

- Plug Intuos2...
...directly into your computer's USB port
...or into a powered USB hub.
- If your computer is off, turn it on and allow the operating system to fully load.

Windows 98. The **NEW HARDWARE FOUND** dialog box will display, followed by the **ADD NEW HARDWARE Wizard**. If the dialog does not display, your computer may not be USB Ready.

Windows 2000. Intuos2 will automatically register as a USB device and the LED will light.

Macintosh. The Intuos2 LED will light, indicating that Intuos2 has been registered as a USB device.

IMPORTANT! Do not plug Intuos2 into a USB keyboard or non-powered USB hub. Intuos2 requires a powered USB port.



Windows

Intuos2 requires a Windows 98 or 2000 system with USB port. Follow the instructions for your version of Windows, then follow the steps under Windows 98 & 2000: Continue with the Software Installation.

Windows 98:

- At the **ADD NEW HARDWARE WIZARD**, click **NEXT**.
- Select the option **SEARCH FOR THE BEST DRIVER FOR YOUR DEVICE (RECOMMENDED)** and click **NEXT**.
- Insert the Wacom CD into the CD-ROM drive. Then check the **CD-ROM DRIVE** option and click **NEXT**.
- Select the **UPDATED DRIVER (RECOMMENDED)** option and click **NEXT**.
- The location of the driver will display (e.g., **D:\USBTAB.INF**), click **NEXT** to continue.

Note: Please have your Windows 98 CD available. If Windows 98 came bundled with your computer, the Windows 98 CAB files may be located on your hard disk or system recovery CD.

- You may be prompted to insert the Windows 98 CD. Click **OK**. Enter the location for the Windows CAB files (e.g., **D:\WIN98**). Click **OK**, and then **FINISH**. Reinsert the Wacom CD if necessary, then follow the instructions under Windows 98 & 2000: Continue with the Software Installation.

Windows 2000:

- Insert the Wacom CD into the CD-ROM drive.
- Double-click on the software **SETUP** icon located on the Wacom CD and follow the instructions below.

Windows 98 & 2000: Continue with the Software Installation

- Select a language from the **CHOOSE SETUP LANGUAGE** dialog box and follow the prompts to complete the installation of the Intuos2 driver software.
- You may register your tablet when prompted.
- Adobe Acrobat Reader V4.0 or greater is required to view the online User's Manual and Help. If Acrobat Reader is already installed on your system, you may cancel this installation.

You should now be able to use your Intuos2 Pen on the tablet to move the screen cursor. If the cursor does not move, you should run the Intuos2 **SETUP** program from the Wacom CD.

A **WACOM TABLET** group was created in the **START** menu under **PROGRAMS**. It contains shortcuts to the Wacom Tablet Control Panel, User's Manual, and a Readme file.



Macintosh

Intuos2 requires a Power Macintosh equipped with a USB port, or an iMac with Mac OS 8.5 or greater. If you have an iMac, refer to the iMac section below before installing your Intuos2 software.

Installing the Intuos2 Software

You must install the tablet software from the Wacom CD to get full tablet functionality.

- Disable any virus protection programs and close all open applications before installing the software.
- Insert the Wacom CD into your computer's CD-ROM drive. Double-click on the **INSTALL** icon. Choose your language option, click **OK**, and follow the prompts.
- Adobe Acrobat Reader V4.0 or greater is required to view the online User's Manual and Help. When the Wacom tablet Read Me file displays, select **CONTINUE...** to install Adobe Acrobat Reader, or **QUIT** to finish without installing Acrobat Reader.

After restarting your computer, you will be able to use your Intuos2 Pen on the tablet to move the screen cursor. You may register your tablet when prompted.



If you Have an iMac...

For the iMac, Intuos2 requires Mac OS 8.5 or greater and Mac OS ROM 1.2.1 or greater. Click the Apple icon and select **ABOUT THIS COMPUTER...** to verify your operating system and OS ROM versions.



If the Mac OS ROM version does not display, or an older Mac OS ROM version is displayed, you must install the firmware and OS ROM update. Follow the instructions below to update your iMac. To install the iMac Firmware Update and iMac Update 1.1:

- Locate the **APPLE iMAC UPDATES** folder on the Wacom CD.
- Double-click on the **iMAC FIRMWARE UPDATE** icon to decompress the file.
- Double-click on the **iMAC FIRMWARE UPDATE** icon that appears on the desktop and follow the prompts.
- Repeat the above steps using the **iMAC UPDATE 1.1** icon.

If in doubt, install these updates. After updating your iMac, continue with the Intuos2 software installation.