

# **ICON Tablet**

**Model: MP21QCFS**

# Directions

## Meanings of icons:



Forbidding: forbid improper operations to avoid damaging the tablet.



Caution: cautions for operators to avoid potential damages. Please note and remember.



Importance: important information, common notes, definitions, general knowledge and references, etc.

---

Other trademarks and trade name may be used in this manual to refer to either the entities claiming the marks and names or their products. The manufacture disclaims any proprietary interest in trademarks and trade names other than its own.

Information in this manual is subject to change without notice.

***Reproduction in any manner whatsoever without the written permission from the manufacture is strictly forbidden.***

**Product images in this manual are for your reference only.**

# Contents

<b>Directions .....</b>	<b>2</b>
<b>Safety Precautions .....</b>	<b>5</b>
<b>1 Know Your Tablet .....</b>	<b>6</b>
<b>2 Get to Know Your System .....</b>	<b>6</b>
<i>2-1 Add screen shortcuts .....</i>	<i>8</i>
<i>2-2 Delete screen shortcuts/widgets .....</i>	<i>9</i>
<i>2-3 On-screen Keyboard .....</i>	<i>9</i>
<b>3 System Settings .....</b>	<b>10</b>
<i>3-1 Wireless &amp; networks .....</i>	<i>10</i>
<i>3-2 Device .....</i>	<i>13</i>
<i>3-3 Personal .....</i>	<i>14</i>
<i>3-4 System .....</i>	<i>15</i>
<b>4 Communication .....</b>	<b>16</b>

<i>4-1 Browser</i> .....	<i>16</i>
<i>4-2 Email</i> .....	<i>16</i>
<b>5 Fun</b> .....	<b>18</b>
<i>5-1 Camera</i> .....	<i>18</i>
<i>5-2 Music</i> .....	<i>19</i>
<b>6 Specifications</b> .....	<b>20</b>
<b>7 CE Mark</b> .....	<b>21</b>

Hereby, NANJING WANLIDA TECHNOLOGY CO.LTD., declares that this Tablet (MID-G2101) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

# Safety Precautions

 
1. DO NOT expose the tablet to dirty or dusty environment. Keep the environment clean and dry.
2. DO NOT place or drop objects on the top of the tablet. DO NOT shove any foreign objects into the tablet. DO NOT cover the LCD Screen strongly.
3. DO NOT expose the tablet to strong magnetic or electrical fields; DO NOT place the floppy disk near or on the tablet, which may loss the data of the floppy disk.
4. DO NOT leave the tablet facing the sun as it can damage the LCD Screen, especially in the car.
5. DO NOT expose the tablet to or use near liquids, rain, or moisture.
6. DO NOT throw the tablet in municipal waste.

Check local regulations for disposal of electronic products.

8. DO NOT insert anything into the tablet that may result in short circuit or damage the circuit.
9. Power off the tablet, if you want install or remove some external devices which are not support hot-plug.
10. DO NOT disassemble the tablet, only a certified service technician should perform repairs on your computer. Otherwise, problem may result and the manufacturer should not hold responsibility for the damage.
11. If an equipment is provided with a replaceable battery, and if replacement by an incorrect type could result in an explosion (for example, with some lithium batteries).

**CAUTION**  
**RISK OF EXPLOSION IF BATTERY IS REPLACED**  
**BY AN INCORRECT TYPE.**  
**DISPOSE OF USED BATTERIES ACCORDING**  
**TO THE INSTRUCTIONS**

# 1 Know Your Tablet

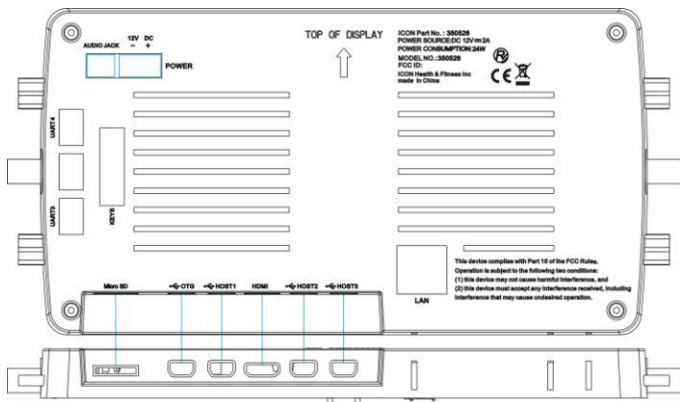


Picture 1-1

## 2 Get to Know Your System

Press the Power button for seconds to turn on the tablet and then it will display the home screen as below picture.



 Picture 2-1

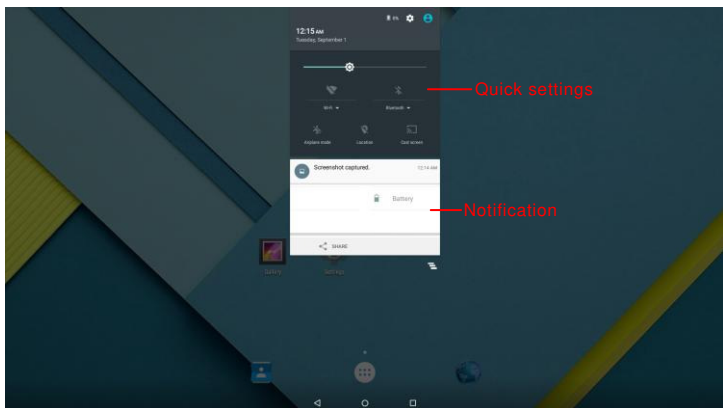

Picture 2-2

◀ : tap to return to the previous page.

○ : tap to enter Home screen.

□ : tap to open recent APPs list menu.


⋮ : tap to enter APPs Menu.

If it's your first time to use the tablet, the system will enter the guide menu. Please finish the initial setting following the instructions.

## 2-1 Add screen shortcuts

 On the home page, touch and hold the blank area to popup menu to change wallpaper;

Touch ⋮ to access APPS menu as shown in picture 2-3; touch and hold an APPS icon to add it to the home screen.

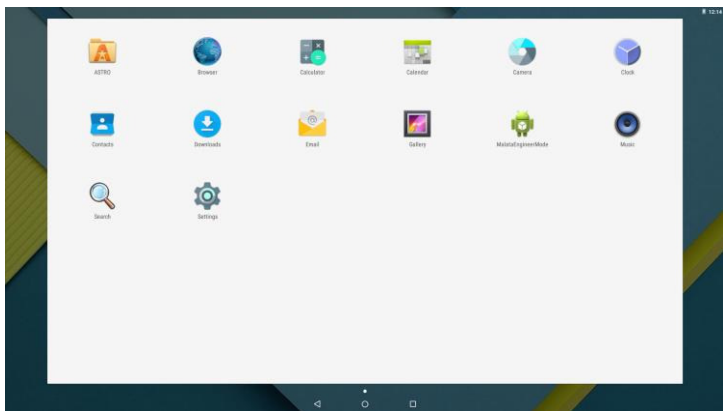


Picture 2-3



## 2-2 Delete screen shortcuts/widgets

 On the home screen, touch and hold the shortcut or widget to be deleted until the icon “x” appears at the top right corner of the home screen. Drag the shortcuts to the remove icon to delete.

## 2-3 On-screen Keyboard

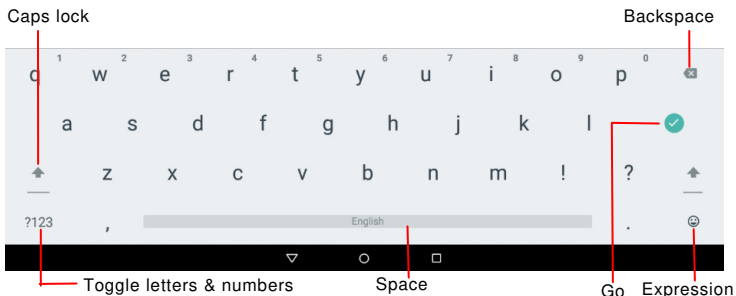


Picture 2-4

Just touch a text field to open the on-screen keyboard;

Touch ▾ on the tool bar to close it.

# 3 System Settings

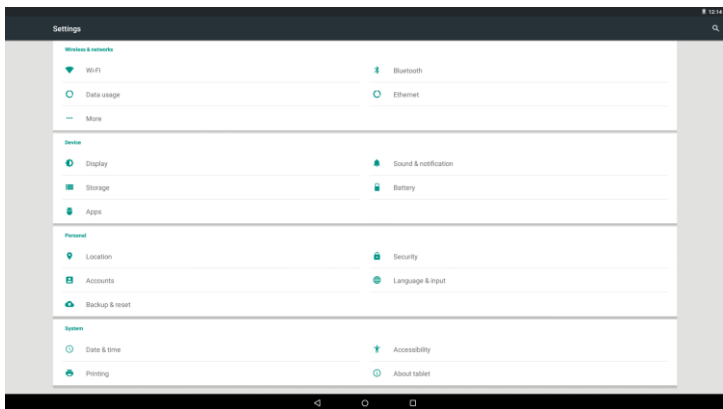 


Picture 3-1


## 3-1 Wireless & networks
 
### 3-1-1 Wi-Fi

Touch the Wi-Fi switch behind of the Wi-Fi item to turn on the Wi-Fi function and then the system will auto-scan the available networks to display as shown in picture 3-2.

Select one network and input its password if necessary to connect.

Touch  to perform advanced Wi-Fi settings.

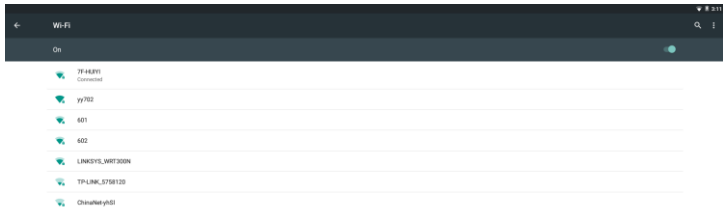

Picture 3-2

### 3-1-2 Bluetooth

The Bluetooth function enables you to exchange files between the tablet and other Bluetooth devices.



Before this step, please activate the Bluetooth function of other device (mobile phone, Bluetooth earphone etc.) and make sure the device is in range.


Touch the Bluetooth switch behind of the Bluetooth item to turn on the Bluetooth function and then the system will auto-scan the visible Bluetooth device nearby and display after finding as shown in picture 3-3:



Picture 3-3

Touch the desired Bluetooth device to start pairing. Then according to the indications on both side, users can complete the connection successfully in seconds.

After pairing, you can share files between the unit and the Bluetooth device.

 
Touch  to perform advanced Bluetooth settings.

### **3-1-3 Data usage**

Touch to see the data usage information.

### **3-1-4 Ethernet**

Touch to do the Static IP settings.

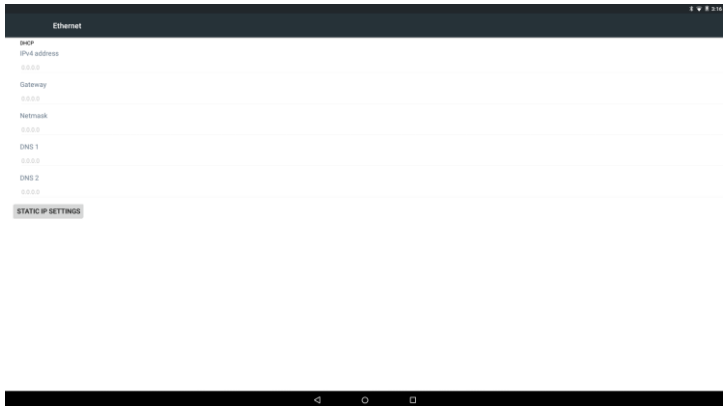

Picture 3-4

### 3-1-5 More

The system supplies users more networks settings, such as Airplane mode and VPN.

 
## 3-2 Device

### 3-2-1 Display

Touch to open display settings, including Brightness level, Wallpaper, Sleep, Daydream, Font size and Cast screen.

### 3-2-2 Sound & notification

Touch to open sound & notification to do the Sound general settings and other notification.

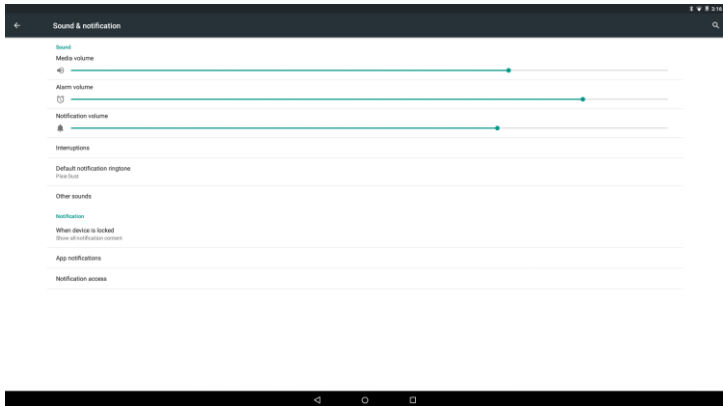

Picture 3-5

### 3-2-3 Storage

Touch to check the usage of internal storage and possible SD card.

### 3-2-4 Battery

Touch to check the battery information.

### 3-2-5 Apps

Touch to check the current Apps information.

## 3-3 Personal

### 3-3-1 Location

To open or close location services.

### 3-3-2 Security

Security information of system settings.

### **3-3-3 Accounts**

To add email accounts or google account.

### **3-3-4 Language & input**

To choose the system language and open/close the Spell checker.

You can also set the keyboard & input methods.

### **3-3-5 Backup & reset**

Reset the system to the factory states.

## **3-4 System**

### **3-4-1 Date & time**

Option is about the current system date & time setting. You can set the date and time, and their format of the tablet.

### **3-4-2 Accessibility**

Look at what other accessibility in the system or add some.

### **3-4-3 Printing**

Search connected printer to print some file.

### **3-4-4 About tablet**

The detailed information about the unit, including Status, Legal information, Model number, Android version, Kernel version and Build number.

## 4 Communication

### 4-1 Browser

Open:  > 

After the network connection completed, touch the browser icon to access the network browsing.

 


Designing web may slow the speed to browse the web.

### 4-2 Email

Open:  > 


1. Input an available email address and tap NEXT to proceed.

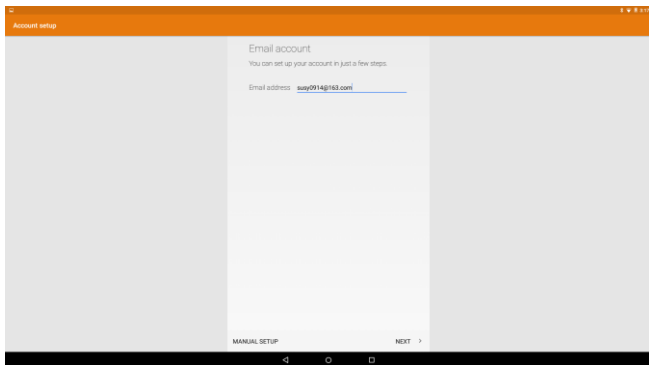

Picture 4-1

 
2. Choose the type of your email account.



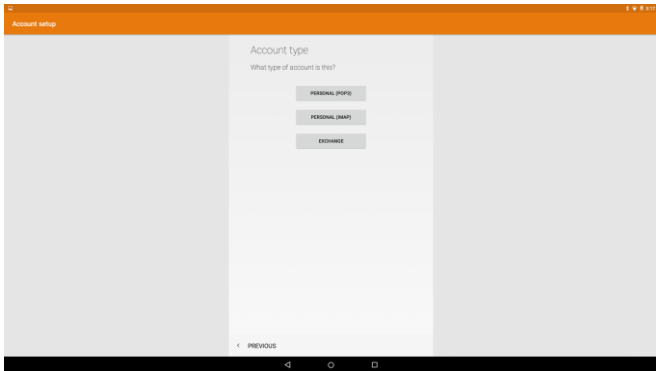


Picture 4-2

 3. Input the email password, and tab NEXT to proceed.

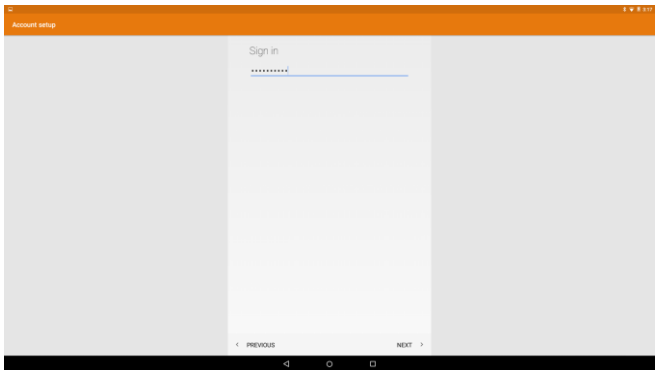

Picture 4-3

 4. Incoming server settings, tap NEXT to setup your email account.

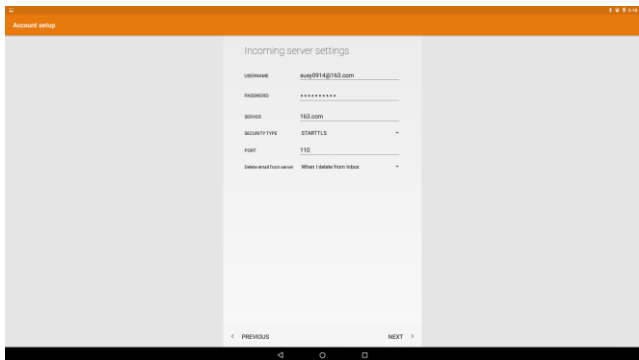

Picture 4-4


## 5 Fun

### 5-1 Camera

Open:   



Picture 5-1

- Take Pictures:**
1. Aim the object.
  2. Press  to take a picture.

**Notice:** All photos taken are stored in the photos and gallery.





## 5-2 Music

Open:   



Playback schedule

Picture 5-2

Choose any song you like to start playback. During music playback, touch  to pause and touch  to resume playback; touch  /  to play the previous/next track.

## 6 Specifications

Icon Part Number	382213
Icon Model	MP21QCFS(RW)
Description	21.5 inch display tablet, with touch, and core board
OS	Android 5.1.1
CPU Manufacturer	Samsung
CPU Model	S5P6818
CPU Frequency	1.4 GHz
DDR3	1G (2G optional with no hardware change)
Mass Memory	8GB iNAND
Micro SD Card	Optional (up to 16GB)
Resolution	1920 RGB(H) * 1080 (V)
Aspect Ratio	16:9
Contrast	1000:1
WiFi	802.11b/g/n
Bluetooth Version	4.1
Front Camera	2M pixels
Adapter	12V/2A (not included)
Interface	Mini HDMI, OTG 2.0, 3*HOST 2.0, Micro SD

## 7 CE Mark

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

### FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and

operated with a minimum distance of 20 centimeters between the radiator and your body.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This Class B digital apparatus complies with Canadian ICES-3 (B).

Cet appareil numérique de la classe A est conforme à la norme NMB-3(B) du Canada.

This device complies with Industry Canada license - exempt RSS standard(s). Operation is subject to the following two conditions (If the product within RF function):

- 1) This device may not cause interference and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.