



# User Manual

Mobile phone  
YUNTAB  
S505

Manufacture: Shenzhen Wave Multimedia Co., LTD

## **Read me first**

- ◆ Please read this manual before operating your phone, and keep it for future reference.

- ◆ The descriptions in this manual are based on the default settings.

- ◆ Images and screenshots used in this manual may differ from the actual product.

- ◆ Available features and additional services may vary by device, software or service provider.

- ◆ Our company is not liable for performance issues caused by third-party applications.

# CONTENTS

<b>Assembling</b>	- 1 -	<b>Play Store</b>	- 13 -
Unpack	- 1 -	<b>Talk</b>	- 13 -
Charge the battery	- 1 -	<b>Entertainment</b>	- 14 -
Install the SIM card	- 1 -	Gallery	- 14 -
Install the memory card	- 1 -	Music	- 15 -
<b>Getting started</b>	- 2 -	Camera	- 16 -
Turn your device on and off	- 2 -	<b>Tools</b>	- 17 -
Switch to flight mode	- 2 -	Calendar	- 17 -
Device layout	- 2 -	Alarm	- 17 -
Home screen	- 3 -	File Manager	- 18 -
Task bar	- 3 -	Sound Recorder	- 18 -
Notification panel	- 4 -	Calculator	- 18 -
Auto rotation	- 5 -	<b>Connectivity</b>	- 18 -
Lock & unlock the screen	- 5 -	USB Connection	- 18 -
Enter text	- 5 -	Wi - Fi	- 19 -
Customize your device	- 5 -	<b>Safety Precautions</b>	- 19 -
Manage applications	- 5 -	<b>Care &amp; Maintenance</b>	- 20 -
Security	- 5 -		
Reset phone	- 6 -		
<b>Communication</b>	- 7 -		
Phone	- 7 -		
Contacts	- 8 -		
Messaging	- 9 -		
Email	- 10 -		
Gmail	- 11 -		
<b>Web</b>	- 12 -		
Browser	- 12 -		

## Assembling

### Unpack

Check your product box for the following items.

- Phone
- User manual
- Adapter

You can purchase additional accessories from your local retailer.

### Charge the battery

Before using the device for the first time, you must charge the battery.

1. You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
2. Battery full icon is shown when finished if your device is off.

**Warning:** Use only original batteries and chargers. Unapproved

### Install the SIM card

You need to insert a SIM card to use the Phone function. To install the SIM card, follow the instructions below.

1. Make sure that the card's gold contacts face into the device.
2. Push the SIM card into the slot until it clicks.

### Install the memory card

To store additional multimedia files, you need insert a memory card.

1. Insert a memory card with the gold contacts facing downwards.
2. Push the memory card into the slot until it clicks.

**Notice:** Our company uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

## Getting started


 


### Turn your device on and off

To turn on your device, press and hold the power key.

To turn off your device, press and hold the power key, and then tap OK.

 
### Switch to flight mode

To use only your device's non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode: Tap Settings > WIRELESS & NETWORKS > More > Airplane mode from application list to create a checkmark.

Icon	Function	Remark
	Power	Press and hold for 2 seconds to turn on or turn off the device.
	Lock	Press to lock the device.
	Reset	Press and hold for 10 seconds to reset the device.
	Volume keys	Adjust the device volume.
	SIM Card	Inset the SIM Card
	TF Card	Inset the Micro SD Card

## Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

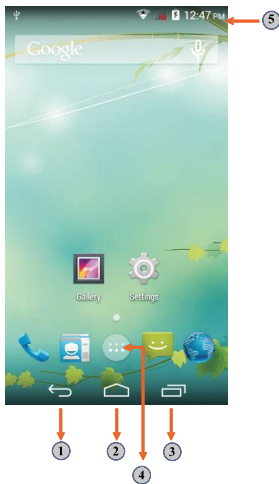

## Task bar

The task bar is shown at the bottom of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

1	Return to previous screen.
2	Return to home screen.
3	View the applications you have accessed recently.
4	Open application menu
5	Display notification icons. Tap the notifications area to open the notification panel.

 
## Indicator icons

Icon	Definition	Icon	Definition
	Open WiFi available		Flight mode activated
	WiFi connected		New email
	Signal strength		New text or multimedia message
	Roaming mode		Call in progress
	Uploading data		Missed call
	Downloading data		Call on hold
	Connected to PC		Call diverting activated
	Alarm activated		Battery power level
	BT connected		Music being played

## Notification panel

Tap the notifications area to open the notification panel shown below. You can access a list of notifications.

Tap icon to activate or deactivate wireless connection features and other settings.

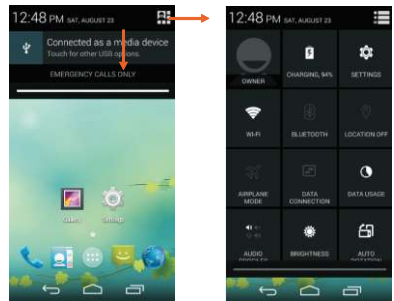

**Wi-Fi:** Activate or deactivate the Wi-Fi connection.

**Auto-rotate screen:** Activate or deactivate the auto rotation feature.

**Brightness:** Adjust the basic brightness level of the display to lighter or darker.

**Notifications:** Activate or deactivate the notification feature.

**Settings:** Access Settings application.



## Auto rotation

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto-rotate screen, then scroll it to Off.

## Lock & unlock the screen

To unlock the screen, tap and hold the lock icon, then drag it to the unlock area where the unlock icon is.  
To lock the screen manually, press Power key.


## Enter text

You can enter text by selecting characters on the virtual keyboard. Tap the text input field to display the virtual keyboard. To hide the keyboard, tap  at the task bar. To change the text input method, tap  at the task bar. From a text field, you can use the copy and paste feature for fast inputting.

## Customize your device

To customize your device according to your preferences, tap Settings from application list or notification panel.

## Manage applications

To manage the applications installed on your device, tap Settings  App.

1. To uninstall an application, select DOWNLOADED, then select an item and tap Uninstall, tap OK to confirm.
2. To stop or change the settings of an application, select RUNNING or ALL, then select an item and tap the option you need.

## Security

 
You can protect your device and data by setting screen lock or encrypting your phone.

### ◆ Set a screen lock

To set a screen lock, tap Settings?Security? Screen lock from application list.


- **None:** Deactivate the screen lock.
- **Slide:** Slide to unlock the screen.
- **PIN:** Enter a numeric PIN to unlock. When prompted, enter the PIN to unlock the screen.
- **Pattern:** Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.
- **Password:** Enter a passcode to unlock. When prompted, enter the passcode to unlock the screen.

### ◆ Screen time-out

Select Settings  Display & Sleep from application list, you can set the time before the screen times out and goes into lock mode. ( you have not entered any characters or made other selections).

## Reset Phone

You can reset system and desktop settings to their original values by the following steps:

1. Select Settings  Backup & reset from application list.
2. Tap Factory data reset.
3. If you want to erase all data on your phone, such as music, pictures, and other data, tap Erase SD card checkbox to create a checkmark.
4. Tap Reset phone.

The device resets to the factory default settings automatically.

Warning!: Factory data reset will erase all data from your device and SD card, including your google account, system and application data and settings, and downloaded applications.

## Communication

### Phone

To use calling functions, tap Phone from application list.

#### ◆ Make calls

To make calls, you can use any of the three ways:

- Enter numbers by using the virtual numeric keypad on the screen
- Make a call from call log.
- Make a call from contacts.

#### ◆ Answer a call

To answer a call, drag the circled button to the green button.

#### ◆ Decline or end a call

To decline a call, drag the circled button to the red button.

To end a call in progress, tap the red button.

#### ◆ Call settings

To change call settings, tap the option button at the upper right.

### 1. Ringtone & Vibrate

● You can set different ringtones for incoming calls. Select Phone ringtone to open a list of ringtones, select the desired ringtone, and then select OK to confirm.

● Tap Vibrate when ringing to create a checkmark and the phone vibrates to notify you of incoming calls.

### 2. Dial pad touch tones

Tap Dial pad touch tones to create a checkmark and your device will sound a tone once you tap the dial pad.

### 3. Voice mail

With the call divert network service, you can direct incoming calls to your voice mailbox.

- Tap Service to set your voice mail service provider.
- Tap Setup to set your voice mail number.
- Tap Sound to set the desired ringtone for your voice mail.
- Tick the box next to Vibrate and the phone vibrates to notify you of a voice mail.

### 4. Fixed Dialing Numbers

If FDN mode is activated, your device will restrict outgoing calls, except for the numbers stored in the FDN list.

### 5. Quick responses

Quick response is a feature to reject the call with the predefined messages.

Tap one of the pre-written messages to be displayed when you want the call to be rejected, then tap OK.

### 6. Call forwarding

Call diverting is a network feature to send incoming calls to another number that you specify.

### 7. Call waiting


If call waiting is activated, the network notifies you of a new incoming call while you have a call in progress or you can make a new call during a call.

### Contacts


Tap People from application list to access contacts.

- Groups: List all your contacts by group.
- All: List all your contacts saved in the device memory.
- Favorites: List the contacts that you have set as favorites or the contacts that you have sent message to or dialed.


#### ◆ Add new contact

1. Access People.
2. Tap 
3. Enter necessary fields.
4. Tap DONE.


#### ◆ Edit a contact

1. To edit a contact, scroll to the contact you want to change.
2. Tap the option button at the upper right , then select Edit.
3. Change necessary fields.
4. Tap DONE.

#### ◆ Create new group

1. Tap the first tab at the upper left.
2. Tap  at the upper right.
3. Enter a category name.
4. Tap DONE.

#### ◆ Rename group

1. To rename the group, scroll to the group you want to change.
2. Tap  at the upper right or tap the option button and then select Edit.
3. Enter a new category name.
4. Tap DONE.

#### ◆ Import/Export contacts

##### 1. Import from the SIM card

To copy the contacts from the SIM card, tap the option button at the upper right and then select Import/Export? Import from the SIM card, select contacts, and then select Import.

##### 2. Import from SD card

To import contact files (in vcf format) from a memory card to your device, tap the option button at the upper right and then select Import/Export? Import from SD card, select a memory location and contact files to import and select OK.

 
##### 3. Export to SD card

To export contacts from your device to a memory card, tap the option button at the upper right and then select Import/Export? Export to SD card, select OK to confirm.

##### 4. Share visible contacts

With this feature, you can send the visible contacts via Email.

#### ◆ Search for contacts

1. Tap  at the title bar from contact list screen, enter the desired information, then your device shows the result.
2. Tap the search icon at the upper left from home screen, enter the contact's name or number, your device shows the result immediately.

#### Messaging

Learn to create and send a text or multimedia message, and view or manage messages that you have sent or received.

#### ◆ View messages

1. Tap Messaging from application list.
2. Tap the message to view the detailed information.

#### ◆ Create and send SMS

1. Tap NEW MESSAGE.
2. In To field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.
3. In Type message, enter the text of the message.
4. Select Send to send the message.

#### ◆ Create and send MMS

Multimedia message can include pictures, sound and text.

##### 1. Tap NEW MESSAGE.

##### 2. Tap at the title bar.

##### 3. Select one of the items below.

- Pictures: Insert image.
- Capture picture: Capture new picture and insert the picture.
- Videos: Insert video clip.
- Capture video: Capture new video clip and insert the video clip.
- Audio: Insert sound clip.
- Record audio: Record sound clip and insert the sound clip.
- Slideshow: Add more than one slide.

##### 4. In To field, enter the recipient's mobile phone numbers or email addresses manually. If you enter more than one number or email, separate them with a comma.

##### 5. In Type message field, enter the text of the message.

##### 6. Select Send to send the message.

#### Email

To receive and send mail, you must have a remote mailbox service. This service may be offered by a service provider. Your device is compliant with applicable internet standards for POP3/IMAP/Exchange.

Before you can send or receive mail on your device, you need to set up an email account and define the email settings correctly. You can define more than 1 mailbox.

#### ◆ Set up your email

1. Tap Email from application list.
2. You can use mailbox guide to set up your mailbox, tap Next until it's done.