

 
Dual Mode
Communication Terminal
DM1000C/DMS1000C




User Guide

Draft CDMA v.001

Handset

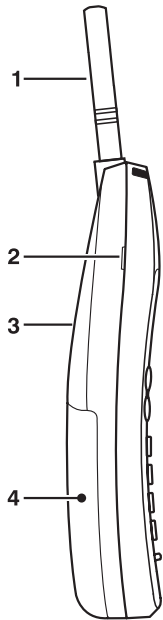

 
- 1 Antenna
- 2 Beltclip Attachment
- 3 Speaker for Ringer
- 4 Handset Battery Compartment

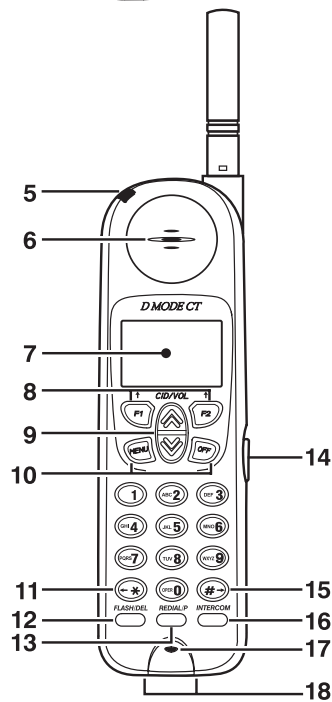


- 5 New Message LED
- 6 Handset Earpiece
- 7 LCD Display
- 8 Function Keys
- 9 Up/Down Keys
- 10 Menu and OFF Keys
- 11 * Scroll Left
- 12 Flash/Delete Key
- 13 Redial/Pause Key
- 14 Headset Jack
- 15 # Scroll Right
- 16 Intercom
- 17 Handset Microphone
- 18 Handset Charging Contacts

Base

 - 19 Base Speaker/Ringer
- 20 LCD Display
- 21 Function Keys
- 22 Up/Down Keys
- 23 Menu and Off Keys
- 24 Intercom Key
- 25 Speaker Phone Key
- 26 Speaker Phone ON LED
- 27 Redial/Pause Key
- 28 New Message LED
- 29 Flash Key

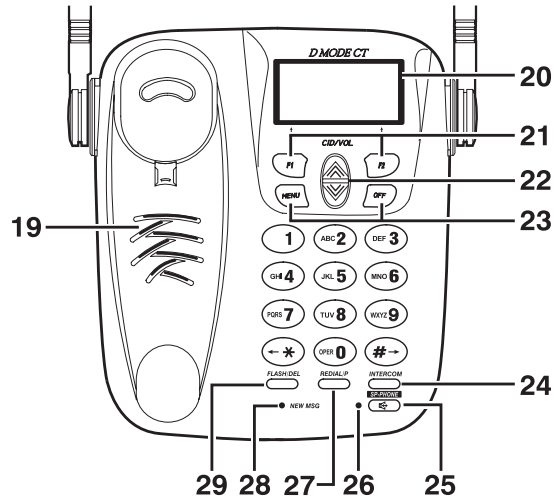

 - 30 DC IN 9V Jack
- 31 TEL LINE Jack
- 32 Corded Handset Jack
- 33 Battery Cover

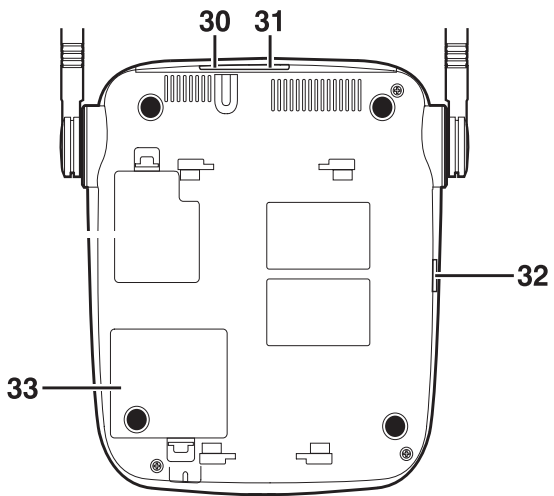





Introduction

The D Mode CT is a unique, all-in-one cellular **and** landline communications device. This new product addresses the fast-paced convergence of landline and cellular, as well as transition from landline usage to cellular service usage at home.

This innovative product combines landline (in the home) phone service with cellular (mobile) phone service. With this one device, you can now make and receive phone calls at home using your traditional home phone service or your mobile cellular service. The competitive landscape of the cellular industry has driven down the cost of cellular service. Now, you can have that affordable pricing in your home.

With its higher power, the new D Mode CT safely provides uninterrupted phone service in your home. No more dead spots. No more sporadic disconnects. You can roam freely around the house using a standard 2.4GHz cordless handset while using your cellular service.

  • FEATURES

- 
- 
- Compatible with CDMA (800/1900Mhz) network
 - 2.4GHz DSS Multiple Handset Cordless Telephone
 - Improved cellular signal sensitivity for better reception*²
 - Expandable up to 4 cordless handsets
 - 3-way conference with cellular and landline
 - Caller ID from both cellular and landline services*¹
 - 50 number phone book and 50 number Caller ID memory
 - Speakerphone on base with dual keypad
 - Voicemail access for both cellular and landline*¹
 - Send and receive SMS*¹
 - Power backup battery (optional)
 - Corded handset on base
 - Large orange backlit LCD
 - 5 number redial memory with up to 32 digits each

*¹ To use these features, you must subscribe to appropriate services with your service provider.

*² Cellular power depends on the wireless service provider and their network service configuration.






• WEB SITE

Web site: <http://www.waxess.com>






Contents

Handset	ii
Base	iii
Features	iv
Web site	iv
Get ready	1
Prepare1
Choose Location2
Get set	7
Dialing mode7
Time and date7
Set the ringer tone8
Key beep10
Area codes10
Language11
LCD contrast11
Name11
Handset registration11
GO!	13
Make a wireless call13
Make a landline call13
Calling options14
Answer a wireless call14
Answer a landline call15
In-Call operations15
Phone book18
Messages21
More features	26
Caller ID26
Page and Intercom28
Two-line calling29
Barge-in31
Cellular only33
Power back-up33
Precautions	35
Important safety instructions36
I.C. Notice42
General information	43
Index	44
Menu Shortcuts	47

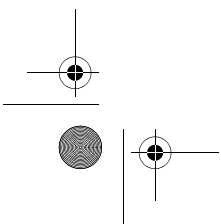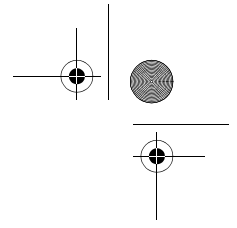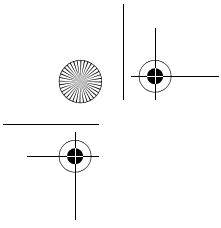     

D mode CT




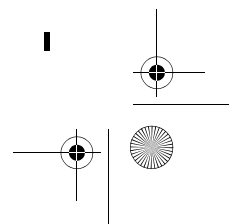 


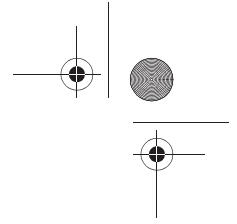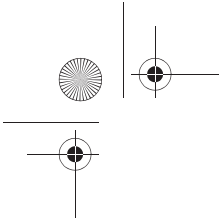  

1 Get Ready

Included items

    - Base
- Cordless handset
- AC adaptor for base
- AC adaptor for cordless handset
- Rechargeable battery for cordless handset
- Belt clip
- Wall mount bracket
- Telephone cord
- User guide

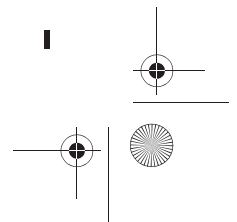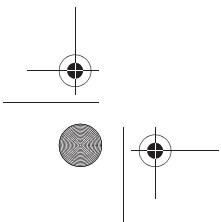


• Choose Location

Some important considerations:

- Charge the handset for 12–15 hours before using it.
- Locate the base near both a phone jack and a power outlet which is not controlled by a switch.
- Keep the base and handset away from sources of electrical noise, such as motors and fluorescent lighting.
- Leave enough room to raise both base antennas fully vertical.

 Desk or Table

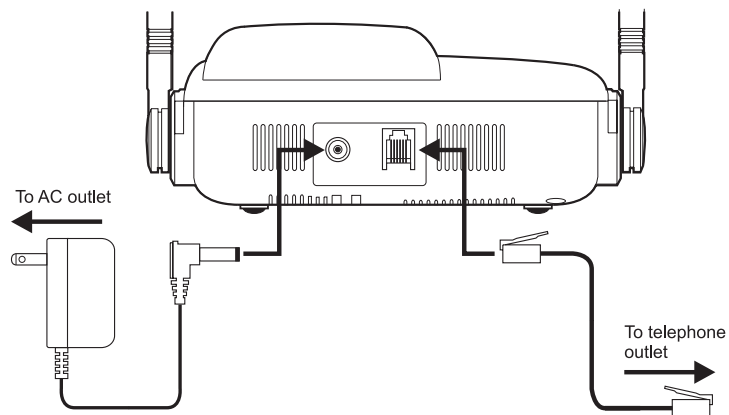


- 1** Connect the telephone line cord to the TEL LINE jack and to a telephone jack.
- 2** Set the base on a desk or table and place the handset on the base.
- 3** Connect the handset cord to the jacks on the handset and the base, then set the handset in the cradle.
- 4** Raise both antennas to a vertical position.
- 5** Find the base AC adaptor (the larger adaptor, Model number

48091000), and connect it to the DC IN 9V jack and to a standard 120V AC.

Wall mount

 - 1 Attach the wall mount adaptor to the base.

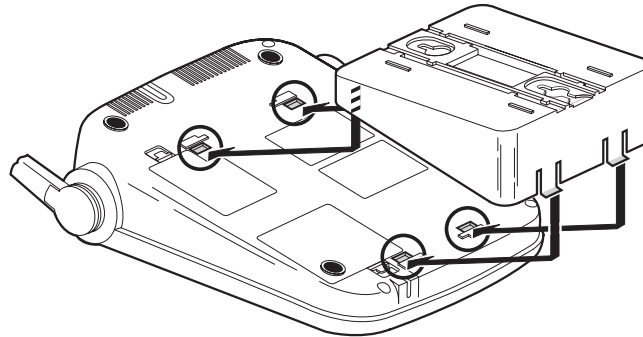


- 2 Find the base AC adaptor (the larger adaptor, Model number 48091000), plug the connector into the DC IN 9V jack, then plug the telephone line cord to the TEL LINE jack.
- 3 Wrap the AC adaptor inside the molded wiring channel, then wrap the cord around the strain relief notch.
- 4 Raise the antennas to a vertical position.
- 5 Align the mounting slots on the base with the mounting posts on the wall plate. Then push in and down until the phone is firmly seated.
- 6 Connect the handset cord to the jacks on the handset and base, then set the corded handset in the cradle.
- 7 On the base, remove the handset retainer, flip it over, then replace it.

Base power on

When powered on for the first time, the base goes through an initialization sequence.

 Note: Do not use the phone until the initialization sequence is complete.

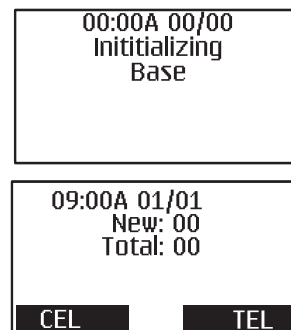


Install the batteries

(Optional)


The optional back-up batteries provide a reserve power supply so the base can operate for up to 30 minutes (depending on battery condition) in case of power outages or if power is cut off to the base for any reason. Backup power activates immediately when the normal power supply to the base is cut off.

 - 1 Verify power is disconnected from the base.
- 2 Open the battery cover on the bottom of the base.

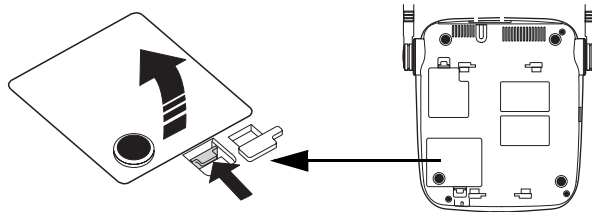

- 3 Insert five AA alkaline batteries with the polarity (+ and -) aligned as marked in the compartment.

 
- 4 Replace the cover.
 - Batteries are not included and must be purchased separately
 - Batteries are not required to operate the product

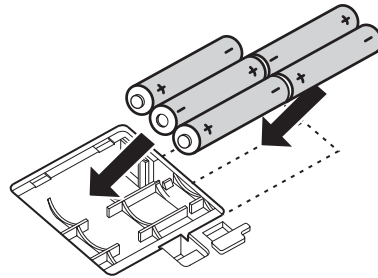

Note: There is no indication that shows when the base is operating with normal power or back-up power. If you choose to install back-up batteries, check the power level frequently (see "Power back-up" on page 33). Replace the batteries when the power level is less than half of maximum. After any power outage, check the battery power level and replace batteries as needed.

Standby Screen

 When the sequence is complete, the Standby Screen appears. This screen appears on both the base and the handset, and is always visible when the

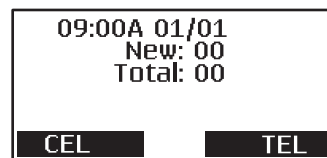

phone is idle. At the bottom of the screen, the text indicates which service lines are active. **CEL** is wireless service, and **TEL** is landline service.

If you have connectED with your cellular service provider, the date and time may be set automatically. If not, see the next section to set the date and time manually.

Signal level

The Signal Level feature helps you find your strongest cellular service signal.

- 1 Press **MENU**, then repeatedly press **▼** to highlight **Setup** and press **Select**.
- 2 Repeatedly press **▼** to highlight **Signal level**, and press **Select**.
- 3 Move the base around your location to find the strongest signal level.



 
Ready the cordless handset

INSTALL THE BATTERY


- 1 Open the cover.

- 2 Verify that the connector is properly aligned with the jack and connect the battery.

Note: The connector is designed to easily fit the jack in only one direction. Do not use excessive force.

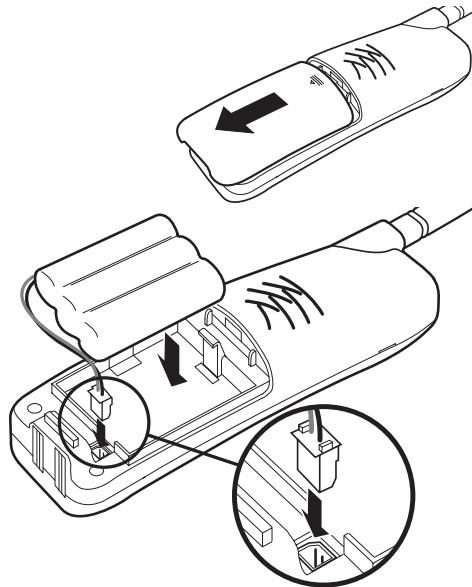


- 3 Close the cover.

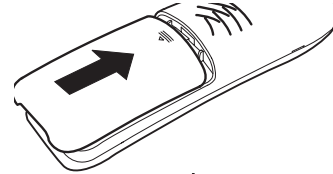 

CHARGE THE BATTERY

 - 1 Find the cordless handset AC Adaptor (the smaller adaptor, Model number RGD41090500). Connect the AC adaptor to the DC 9V IN jack on the charger and to a standard 120V AC wall outlet.
- 2 Set the charger on a desk or table, then set the handset in the charger with the keypad facing forward.
- 3 Allow the battery to charge for 12–15 hours.

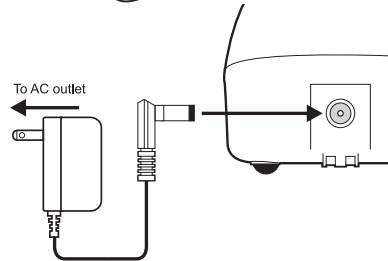

A power indicator in the upper right corner of the LCD shows how much battery life remains.



Full charge



Low charge



Note: Use only the rechargeable battery pack supplied with your cordless handset.

2 Get set

• Dialing mode

- 1 Press the **MENU** key on the base.
The Menu appears.



- 2 Press the **▼** key so the highlight bar moves to **Setup**.

 
This action is called "scrolling" throughout this guide.

- 3 Press **F1** to "select" this menu item.

This action is called "Press Select" throughout this guide.

Another menu list appears.

- 4 Press the **▼** key and scroll to **Tone/Pulse**.
- 5 Press **F1** to select this item and this screen appears.

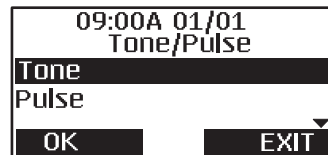

Highlight the correct setting for your phone system, then press **F1** to enter the setting in memory. A beep confirms the setting, and the Setup menu appears.

- 6 Press **EXIT** to return to the main menu screen.
OR
Press **EXIT** twice or **OFF** to return to Standby.

The following steps apply to both the base and the handset.

 
• Time and date

 
- 1 Press **MENU**.
- 2 Use the **▲/▼** keys and scroll to **Time and Date**.
- 3 Press **Select**.

A cursor blinks on the hour number.

- 4 Use the keypad to enter the correct hour.

The cursor moves to the right for the minute numbers.

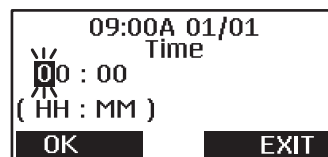






- 5** Enter the correct minutes, and press **OK**.
The AM/PM screen appears.
- 6** Use the **▲** or **▼** key to set AM or PM and press **OK**.
The time format setting appears.
- 7** Use the **▲** or **▼** key to set the time format and press **OK**.
The date screen appears with months showing.
- 8** Use the keypad to enter the correct month.
After entering the month, the cursor moves to the day.
- 9** Enter the correct day then press **OK**.
The cursor appears on the first digit of the current year setting.
- 10** Use the keypad to enter the four digits for the correct year and press **OK**.
The date format appears.
- 11** Press **▼** or **▲** to select a format and press **OK**.
You hear a confirmation tone and the Main menu appears.


When the time and date are set on the base or on one of the cordless handsets, the time and date for all other components (handset or base) automatically synchronize after a few minutes. If a new cordless handset is added and properly registered, the time and date for the new handset will automatically synchronize.

• Set the ringer tone

You can set different ring tones for CEL (wireless) calls and TEL (landline) calls.

    - 1** Press **MENU**.
 - 2** Scroll to **Ringer/Key Beep**, and press **Select**.
 - 3** Scroll to **Ringer Tone**, and press **Select**.
The ringer tone menu for CEL calls appears first. The current ringer tone is highlighted.
The base has three ring tones available. The handset has six rings available—three tones and three melodies.
- Note:** Melodies are only available on the cordless handset.
- 4** Scroll through the list of tones.
Pause on a tone name to hear a short sample of the tone. The sample plays two seconds for a ring tone and 10 seconds for a melody.
 - 5** Press **Select**.





The **TEL line ringer** setting appears.

OR

Press **Exit** to cancel without saving changes.

- 6 Follow steps 1–4 above to choose a tone, and press **Select**.
A confirmation tone plays.

Set the ringer volume

You can set the ringer volume while the phone is ringing or you can preset the ring volume through the menu.

WHILE THE PHONE IS RINGING

Press the **▲** or **▼** key to raise or lower the volume.

The choices are **Off-Low-Medium-High**.

 
 
 
PRESET THE RING VOLUME:

- 1 Press **MENU**, scroll to **Ringer/Key Beep**, and press **Select**.
- 2 Scroll to **Ring volume**, and press **Select**.
The current ring volume setting is highlighted.
- 3 Scroll to a volume setting. Each time you stop on a setting a sample plays briefly.
- 4 Scroll to the ring volume you want and press **Select**.
A confirmation tone plays and the Ringer/Key beep menu appears.
- 5 Press **Exit** or **OFF** to return to the Standby screen.

NIGHT VOLUME

You can set the volume for the ringer to a lower level for night time between 9 p.m. and 6 a.m. based on the phone's internal clock.

- 1 Press **MENU**, scroll to **Ringer/Key Beep**, and press **Select**.
- 2 Scroll to **Night Volume** and press **Select**.
- 3 Use the **▲** or **▼** key to change the volume setting.
A sample of the volume level plays when you move the cursor.
The sample plays two seconds for each ringer tone and 10 seconds for each melody.
- 4 Press **Select** to set the ringer.
A tone confirms the setting.



• Key beep

Set the phone so that you hear a beep each time you press a button, or turn off the beep feature.

- 1 Press **MENU**, scroll to **Ringer/Key Beep**, and press **Select**.
- 2 Scroll to **Key beep**, press **Select**, then choose **On** or **Off**.
- 3 Press **OK** to enter the setting.

A tone confirms the setting and the Ringer/Key beep menu appears.

• Area codes

Enter up to three area codes. With local area codes stored, the phone can distinguish between local and long distance calls.

09:00A 01/01	
Area Code	
Area Code1 :	000
Area Code2 :	000
Area Code3 :	000
OK	EXIT

- 1 Press **MENU**.
- 2 Scroll to **Setup**, then press **Select**.
- 3 Scroll to **Area Code**, and press **Select**.
- 4 Use the keypad to enter the area code number, then press **OK**.
If you make a mistake, press **FLASH/DEL** to erase the last digit entered.
- 5 Press **OK** to set the code.
A beep confirms the setting and the Setup menu appears.
- 6 Press **Exit** or **OFF** to return to the Standby screen.

Add/remove a 1

With area codes stored in memory, the ***** and **#** keys have a unique function in phone memory dialing.

 
If you need to add a 1 to a 10-digit phone number for proper dialing in your area, press *****. Press ***** again to remove the number 1.

Add/remove area code

If you need to add the area code to a 7-digit number, press **#** to display the area code list. Scroll to the correct area code, and press **OK**. At this point you can also press **#** to add the number 1, if needed. To remove the area code, press **#** again.

• Language

- 1 Press **MENU**, scroll to **Setup**, and press **Select**.
- 2 Scroll to **Language**, and press **Select**.

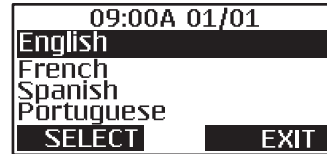

The highlight bar shows the current language setting.

- 3 Scroll to the language you want, and press **Select**.
A beep confirms the setting and the Setup menu appears. The menu appears in the language you selected.

• LCD contrast

- 1 Press **MENU**, scroll to **Setup**, and press **Select**.
- 2 Scroll to **LCD Contrast**, and press **Select**.
- 3 Press **▲** to darken the display or **▼** to lighten the display.
- 4 Press **OK** to set the contrast.

• Name

Your phone arrives with the name "Base" preassigned to the base. Each handset receives a number (1–4) in the order of registration. You can assign a unique name to the base and even change the number and name assigned to a handset.

- 1 Press **MENU**, scroll to **Setup**, and press **Select**.
- 2 Scroll to **Name the Unit** and press **Select**.
- 3 Enter the name and press **Select**. See "Enter names and characters" on page 18.

A tone confirms the setting.

• Handset registration

Register

You can register up to three more handsets with the base. Each new cordless handset must be electronically registered with the base. The cordless handset included in this package is preregistered at the factory with the base. If it somehow becomes deregistered, use this procedure to reregister the handset.

- 1 On the handset, press **MENU**, scroll to **Setup** and press **Select**.

 
 
 


- 2** Scroll to **Register** and press **Select**.
The display shows "Press and hold Intercom on base, then **OK**."
- 3** Press and hold **Intercom** (at least two seconds) on the base until you hear a beep.
- 4** Then, press **OK** on the handset.
Registration takes only a few seconds.
When registration completes, you hear a tone and this message appears on the LCD screen.

Registration
is
completed

Deregister

- 1** Press **MENU**, scroll to **Setup**, and press **Select**.
- 2** Scroll to **Deregister** and press **Select**.
A list of registered cordless handsets appears.
- 3** Scroll to the handset you want to deregister and press **Select**.
The confirmation message "Delete registration?" appears.
- 4** Press **Yes** to confirm, or press **No** to return to the previous screen.
When deregistration is complete, the confirmation message "Handset 1 is deregistered" appears.



3 GO!

• Make a wireless call

Cordless handset	Speakerphone on base	Corded handset on base
<ul style="list-style-type: none"> • Press CEL • Enter number • Press CEL OR • Enter number • Press CEL 	<ul style="list-style-type: none"> • Enter number • Press CEL 	<ul style="list-style-type: none"> • Lift handset off base • Enter number • Press CEL
<ul style="list-style-type: none"> • To end the call, Press OFF 	<ul style="list-style-type: none"> • To end the call, press SP-PHONE 	<ul style="list-style-type: none"> • To end the call, replace the handset

Note: When making a wireless call, no dial tone is generated until the phone connects to the cellular network.

• Make a landline call

Cordless handset	Speakerphone on base	Corded handset on base
<ul style="list-style-type: none"> • Press TEL • Enter number OR • Enter number • Press TEL 	<ul style="list-style-type: none"> • Enter number • Press TEL 	<ul style="list-style-type: none"> • Lift handset off base • Enter number • Press TEL
<ul style="list-style-type: none"> • To end the call, Press OFF 	<ul style="list-style-type: none"> • To end the call, press SP-PHONE 	<ul style="list-style-type: none"> • To end the call, replace the handset

 
Set earpiece volume

ON CORDED HANDSET

During a call, move the selector switch to *L*, *M*, or *H*.

ON BASE SPEAKER PHONE

During a call, press ▲ for louder or ▼ for softer.

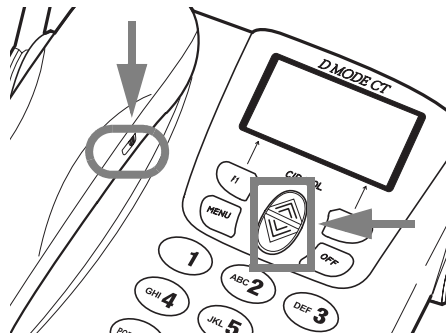

ON CORDLESS HANDSET DURING A CALL

Press ▲ for louder or ▼ for softer.

• Calling options

Speed dial

- 1 Set up keys 0-9 with numbers in the phone book for speed dial. See "Enter numbers directly" on page 19.
- 2 Press and hold the appropriate number key, then press **CEL** or **TEL**.



If you need to add or remove the number 1 or the area code for proper dialing in your area, see "Add/remove a 1" or "Add/remove area code" on page 10.

Redial

The phone memory holds the last five numbers dialed. Each number can have up to 32 digits.

- 1 Press **REDIAL/P** to search through the numbers.
In the upper left corner, the LCD shows a **C** if the call was on the cellular line or a **T** if the call was on the landline.
- 2 Press **CEL** or **TEL** to redial the number.

Pause

While entering a phone number, press **REDIAL/P** to add a two second pause. The pause is added as the digits are transmitted when dialing. Press **REDIAL/P** to make the pause longer. The letter **P** appears in the number each time you enter the pause.

• Answer a wireless call

When the phone receives a wireless call:

- The base and all registered cordless handsets ring.
- The **F1** key on the handset flashes green.

- The caller ID, if available, appears on the LCD screen

Cordless handset	Speakerphone on base	Corded handset on base
• Press CEL	• Press CEL OR • Press SP-PHONE	• Lift handset off base
• To end the call, press OFF twice	• To end the call, press SP-PHONE	• To end the call, replace the handset

• Answer a landline call

When the phone receives a landline call

- The base and all registered cordless handsets ring.
- The **F2** key on the handset flashes green.
- Caller ID, if available, appears on the LCD screen.

Cordless handset	Speakerphone on base	Corded handset on base
• Press TEL	• Press TEL OR • Press SP-PHONE	• Lift handset off base
• To end the call, press OFF twice	• To end the call, press SP-PHONE	• To end the call, replace the handset

• In-Call operations

Place a call on Hold

- Press **Hold** to place a call on hold.
- Press **Exit** to return to the call.

Mute a call

 
- Press **Mute** to temporarily cut off the microphone.
- Press **Unmute** to return to the call

Transfer a call

You can transfer calls between the base and the handsets, and from handset to handset. This function works for both cellular and landline calls.

BASE TO HANDSET TRANSFER

- 1 Press **Intercom**, scroll to the handset (or base) that you want and press **Page**.

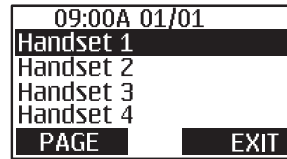


The base and the handset involved in the transfer operation begin beeping (a different tone than with the Intercom function), and a message appears on the LCD.



If there is no answer within 60 seconds, the page and the transfer are cancelled and you return to the call. You can press **Exit** to return to the call immediately.

 - 2 Press **Answer** to take the transfer, or press **Exit** to reject the transfer. The call returns to the the device that started the transfer - handset or base.

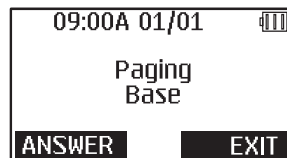


Note: When transferring between base and a handset, the caller is transferred immediately and is not put on hold.

- 3 Press **OFF** to end the call.
OR

Follow the steps above to transfer the call back to the base. You can also use the HOLD function to start a transfer. During a call, press **HOLD**, select **Transfer**, then follow the steps above.

HANDSET TO HANDSET TRANSFER

 - 1 During a call, press **Intercom**, scroll to the handset you want, and press **Page**.

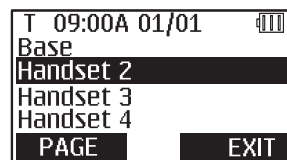


The handset involved in the transfer operation begins beeping (a different tone than with the Intercom function) and a message appears on the LCD.



If there is no answer within 60 seconds, the page and the transfer

are cancelled and you return to the call. You can press **Exit** to return to the call immediately.

 - 2 Press **Answer** on the handset receiving the page.
The call is now on hold, and the parties with the handsets can speak.

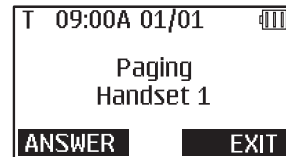

- 3 Press **Exit** on the handset that started the transfer.
The call is now transferred to the receiving handset.
On the receiving handset, you can press **OFF** or **Exit** to reject the transfer. Then, the call returns to the handset that started the transfer.
- 4 Press **OFF** to end the call.
You can also use the **HOLD** function to start a transfer. During a call, press **HOLD**, select **Transfer**, then follow the steps above.

Set up a conference call

Conference calling lets you make a call with two other participants. The phone places the third call with the service (cellular or landline) that is not being used. The Conference feature is available only with the cordless handset.

- 1 Make a normal call to the first participant.
- 2 Press **Hold**, scroll to **Initiate a call**, and press **Select**.
- 3 Enter the number of the next participant, and press **CEL** (or **TEL**).
When the other participant answers, you can speak privately without the other participant. Press **FLIP** to change between the participants. The LCD shows which line (**CEL** or **TEL**) is in use.
- 4 Press **CONF** to connect all participants.
- 5 To drop a participant from the conference call press **CEL DROP** or **TEL DROP**.
Press **OFF** to drop all participants and end the call.

• Phone book

Use the phone book to store up to 50 names and numbers.

Enter names and characters

Use the keypad to choose the characters you want. Each time you press a key, the letters on that key appear first as capital letters, then as lower case letters, then the number corresponding to that key.

keys	Number of times key pressed								
	1	2	3	4	5	6	7	8	9
1	1	Space							
ABC 2	A	B	C	a	b	c	2		
DEF 3	D	E	F	d	e	f	3		
GHI 4	G	H	I	g	h	i	4		
JKL 5	J	K	L	j	k	l	5		
MNO 6	M	N	O	m	n	o	6		
PNRS 7	P	Q	R	S	p	q	r	s	7
TUV 8	T	U	V	t	u	v	8		
WXYZ 9	W	X	Y	Z	w	x	y	z	9
SPACE 0	0	!	"	*	#	\$	%	&	'
	()	<	>	+	,	-	.	/
	:	;	?	@	\	=	^	_	'
	~								

- Use **<-** and **#>** to scroll left or right.
- Press **Clear** or **FLASH/DEL** to erase a character.

Enter numbers directly

- 1 Press **MENU**, scroll to **Memory**, and press **Select**.
- 2 Scroll to **Phone book**, and press **Select**.
- 3 Scroll to **Add new entry**, and press **Select**.
"Name?" appears in the display.
- 4 Use the letters on the keypad to enter the name (up to 16 characters) and press **OK**.
Press **OK** to leave **Name** blank.
"Number?" appears in the display.
- 5 Use the keypad to enter the number with area code and press **OK**.
The **Distinctive ring** setting appears.
This feature lets you add a special ring tone to phone numbers that you store in memory. During an incoming call, the phone compares the number to the distinctive ring list, and when it finds a match, the distinctive ring plays. Then, you can recognize a caller just from the type of ring tone you hear.
- 6 Scroll to **Ringer 1, 2, or 3, Melody 1, 2, or 3, or No setting** and press **OK**.
Melody tones are only available on the handset.
The **Speed Dial** screen appears.
- 7 Choose an empty Speed Dial key number and press **OK**.
A beep confirms the entry and the Standby screen appears.
Press **Skip** to complete the entry without registering it in Speed Dial.

Edit names or numbers

- 1 While in the phone book, scroll to **Find name** and press **Select**.
- 2 Scroll to the name you want to edit and press **Select**.
Call/Dial, Edit, Delete, and Delete all appear.
- 3 Use the **▲** or **▼** key to highlight **Edit** and press **Select**.
- 4 Edit the name.
OR
Press **OK** to skip to the number.
- 5 Edit the number if needed and press **OK**.
You hear a tone, **Complete** appears in the LCD and the list of names appears.

Enter numbers from Caller ID

- 1 While in the Caller ID log, scroll to the name/number you want to enter in the phone book and press **Select**.
Call/Dial, **Edit**, and **Delete** appear.
- 2 Scroll to **Save** and press **Select**.
"Name?" appears.
- 3 If the Caller ID shows a name, press **OK** to continue, or use the keypad to enter the name, then press **OK** to continue.
- 4 If the Caller ID shows a number, press **OK**.
You can also use the keypad to enter a number, then press **OK**.
The **Distinctive ring** settings appear.
- 5 Scroll to the ringer tone or melody you want, and press **OK**.
The **Speed dial** setting appears.
- 6 Choose an empty Speed Dial key number, and press **OK**.
A beep confirms the entry and the Standby screen appears.
OR
- 7 Press **Skip** to complete the entry without registering it in Speed Dial.
A tone confirms the entry and **Complete** appears in the LCD.
After a brief pause, the name and number you just entered appears.
- 8 Press **CEL** or **TEL** to make the call.
Press **OFF** to return to Standby.
Use the ***** and **#** keys to enter a 1 or area codes if needed for proper dialing in your area. See "Add/remove a 1" and "Add/remove area code" on page 10.

Call from phone book

- 1 Press **MENU**, scroll to **Memory**, and press **Select**.
- 2 Scroll to **Phone book**, and press **Select**.
- 3 Scroll to **Find name**, and press **Select**.
- 4 Scroll to the name/number you want to dial and press **Select**.
The name and number appear in the LCD.
- 5 Press **CEL** or **TEL** to make the call.

Speed dial

For quick, one-button dialing, you can store up to 10 numbers in Speed Dial memory. See "Speed dial" on page 14.

• Messages

Note: You must have a subscription to use these message services. Check with your service provider for details.

Voice messages

 
The D Mode CT works with both cellular and landline voicemail.

SET UP VOICEMAIL

- 1 Press **MENU**, scroll to **Setup**, and press **Select**.
- 2 Scroll to **Messages**, and press **Select**.
- 3 Scroll to **Voicemail** setup, and press **Select**.
The message **VM Number (CEL)?** appears.
- 4 Use the keypad to enter the voicemail number for your cellular service provider, then press **OK**.
The message **VM number (TEL)?** appears.
- 5 Use the keypad to enter the voicemail number for your landline service, then press **OK**.
A beep confirms your entry.

CHECK VOICEMAIL MESSAGES

When new messages are waiting, the message LEDs on the base and the handset blink. The LED blinks faster for a landline voicemail, slower for a cellular voicemail, and equally if there are

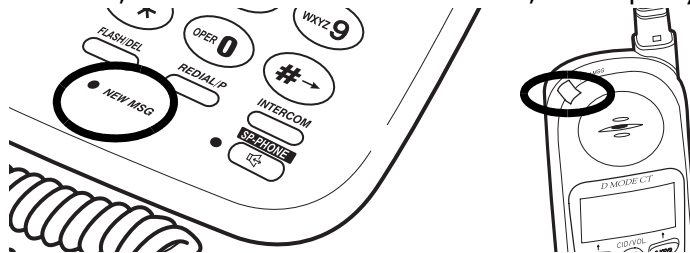

messages for both landline and cellular.

- 1 Press **MENU**, scroll to **Messages**, and press **Select**.
- 2 Scroll to **Voicemail** and press **Select**.
- 3 Scroll to the voicemail—**CEL Voicemail** or **TEL Voicemail**—with the message waiting and press **Select**.

To manage messages (such as saving, deleting, or forwarding), follow the commands for your specific voicemail system.