


Android tv box

Model: RL



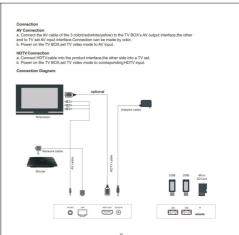

Startup: After turn on the power supply, the blue light is lit up , about 30 seconds to enter the main interfere.

Screen settings:

Open "Settings" - "Display" - "Screen position", you can adjust the screen zoom, so that the screen shows the best statu

Resolution settings:
Open "Settings" - "Display" - "Screen resolution", the machine defaults to automatic, you can manually adjust to the best display statu

WIFI settings:

Open "Settings" - "Network", click on the WIFI source you want to connect to.

After the connection is successful, you can access to the Internet.

Ethernet settings: Connect the Ethernet cable to the product and the machine will automatically connect

Language settings:
Open "Settings" - "Language", there are 24 languages, select the language you need.

Date it time settings:

Open 'settings' - date itime', set your GMT time, and time display format.

Note: This time the product needs to be connected to the network to display the time cornectly. If the time is displayed incorrectly, please confirm whether the network is connected or not.

Uninstall APPS: Open *settings*. "APPS", select the APK you want to uninstall, press OK, click Uninstall.

Update:

Run the "UPDATE" app.

Select OTA Update: Device will update to the latest version of firmware if it's available in the OTA server.
Insert Tr. card or USB disk with update firmware to device (Make sure the updated files on the TF. card
Insert Tr. card or USB disk with update firmware to device (Make sure the updated files on the TF. card
Confirm. The system will automatically must be update firmyare to device.
Confirm. The system will automatically must be update firmshed. (Note:
During updating process, DO NOT power off the device. In addition, android is an open platform,
research and development may different in different manufactures, DO NOT update other device that is
not from us by this updating way to avoid system damage.)

circumstances should you try to repair the TV BOX by yourself, as this will invalidate the warranty. pen it as there is a risk of electric shock. If any fault occurs,please firstly check with below listing fore taking to device to repair. If you are unable to remedy a problem by following list, contact your

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and the TV BOXPress the power on the remote controller to turn on the power.
No picture	-Re-connect with HDTV cable or or AV cableCheck if the TV is switched on.
No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.
No audio or digital output	-Check the digital connectionsCheck if your amplifier is set correctly.
The player does not respond to the Remote Control Player does not respond to some operating commands during playedack	Aim the remote control directly at the sensor on the front of the TV BOX. Reduce the distance to the TV BOX. Replace the baltaries in the remote control. Operations may not be permitted Refer to the user manual. Possibility of system shafts, re-insert with cover adaptor to
No sound during movies playback	restart. The audio codec may not be supported by the TV BOX,You can change to the supported audio on playing menu. Check the volume.
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the boxIf one of the USB can not be read, please turn off the TV BOX for 30 seconds and restart the TV BOX.
Slow operation of the USB flash drive	 Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDTV connection	-Check the connection between the TV and the HDTV jack of boxCheck your TV system setupCheck the volume.
The TV screen is blank and the player LED is blinking	-Turn off your TV BOX wait 30 seconds, turn it on againIf under HDTV status, check if HDTV connection is correct or change another HDTV cable, set the output resolution of this TV BOX is 200e.

If you have any more question, please run the "user manual" apk pre-installed in the TV BOX and refer to use instructions and videos it has.

FCC Caution:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does use harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does use harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.