








Quick Installation Guide

ADSL Wireless Router For AWR-2410/AWR-2440


Package Contents:

- ◆  AWR-2410/2440
- ◆  CD-ROM containing Manual
- ◆  Ethernet Cable (CAT5 UTP Straight-Through)
- ◆  ADSL Cable (Standard telephone cable)
- ◆  Power Adapter
- ◆  Quick Installation Guide hardcopy
- ◆  Splitter (Optional)


Step 1

Connect Hardware

AWR-2410

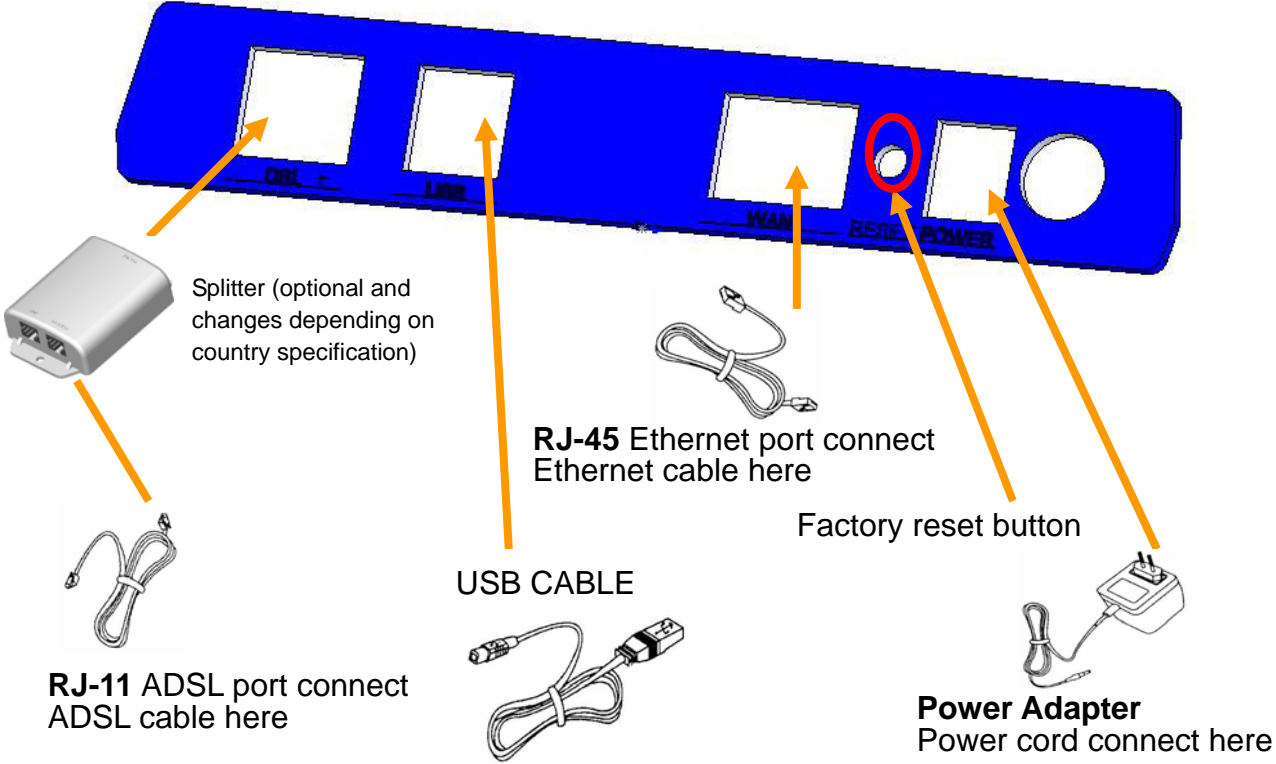


AWR-2440

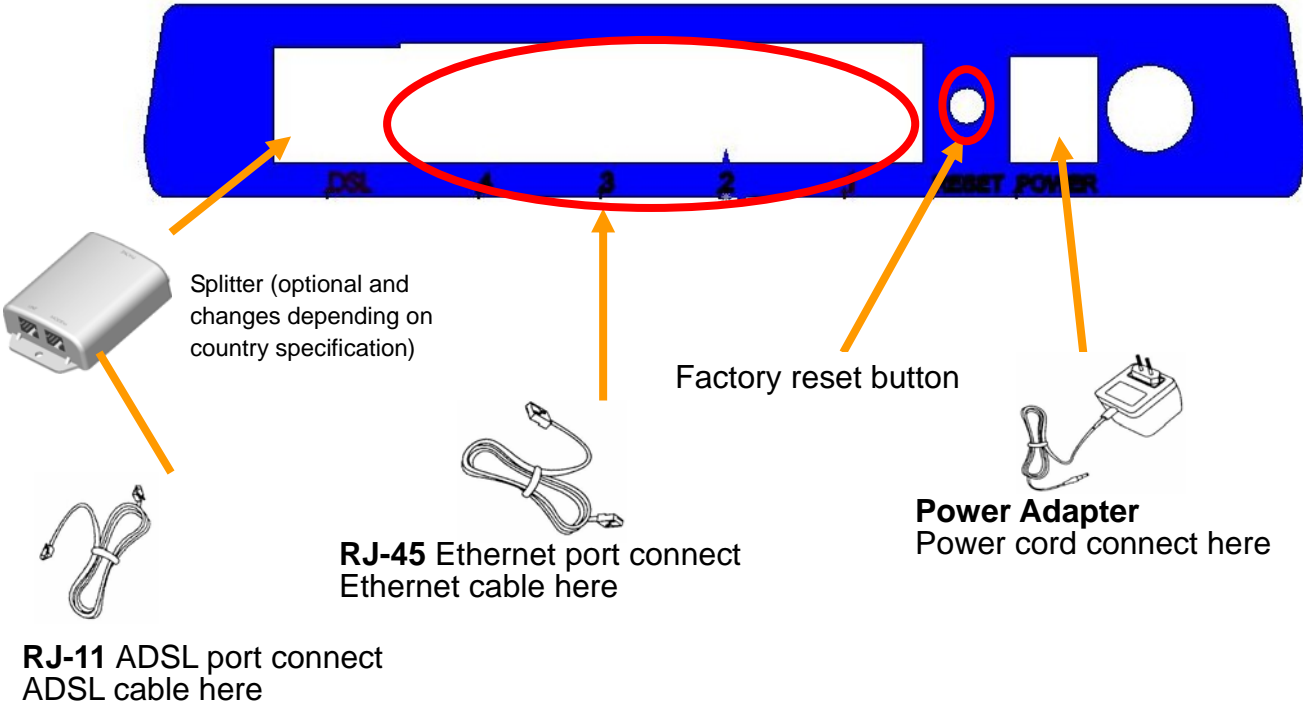


Step 2

- 1. Select **Obtain an IP Address automatically**: by clicking once in the circle. Click **OK** button to confirm and save your changes, and the close the Control Panel.

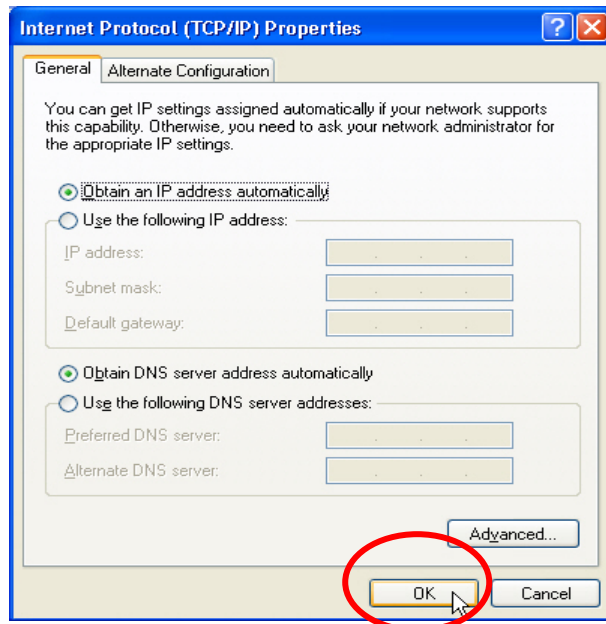


- 2. Release IP
- 3. Renew IP
- 4. Check Default Gateway:
192.168.1.1.

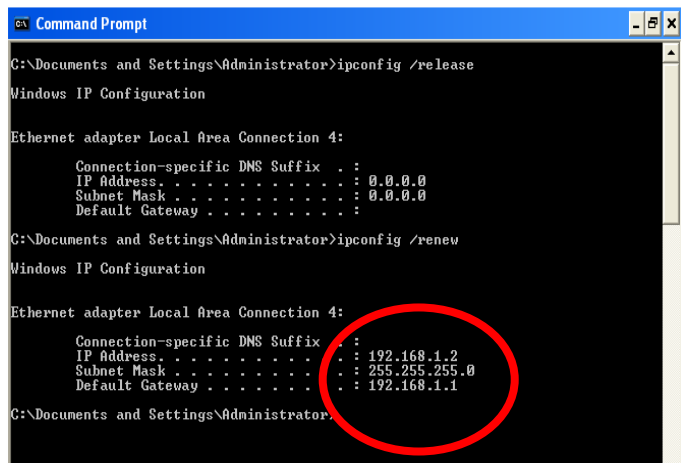


Step 3

Device Configuration


1. Launch your PC web browser and enter the URL: **http://192.168.1.1**.

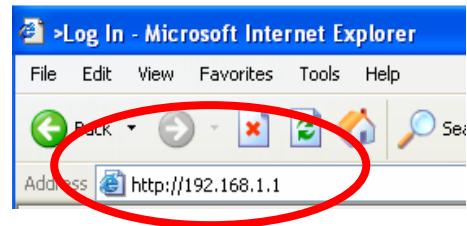

2. In the Username prompt type **Admin** and in the Password prompt type **Admin** then click **OK** button coming setup page.

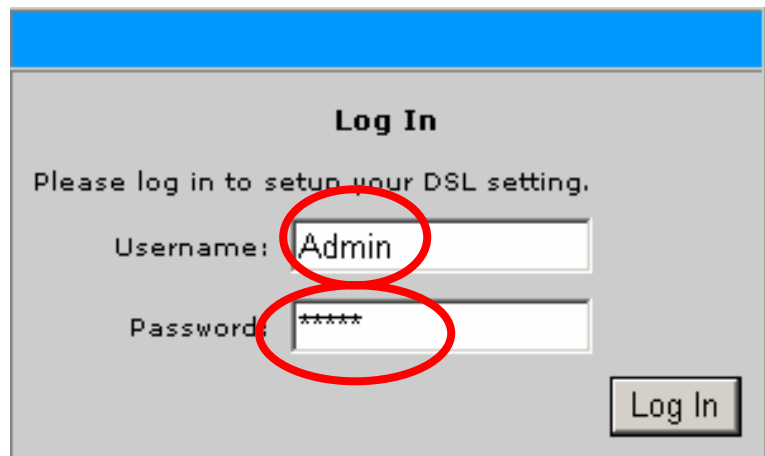A screenshot of a web-based login interface. The title is "Log In". Below the title, it says "Please log in to setup your DSL setting." There are two input fields: "Username:" containing the text "Admin" and "Password:" containing "*****". Both input fields are circled in red. A "Log In" button is located at the bottom right of the form.

3. When you see this web page. You have finished login.

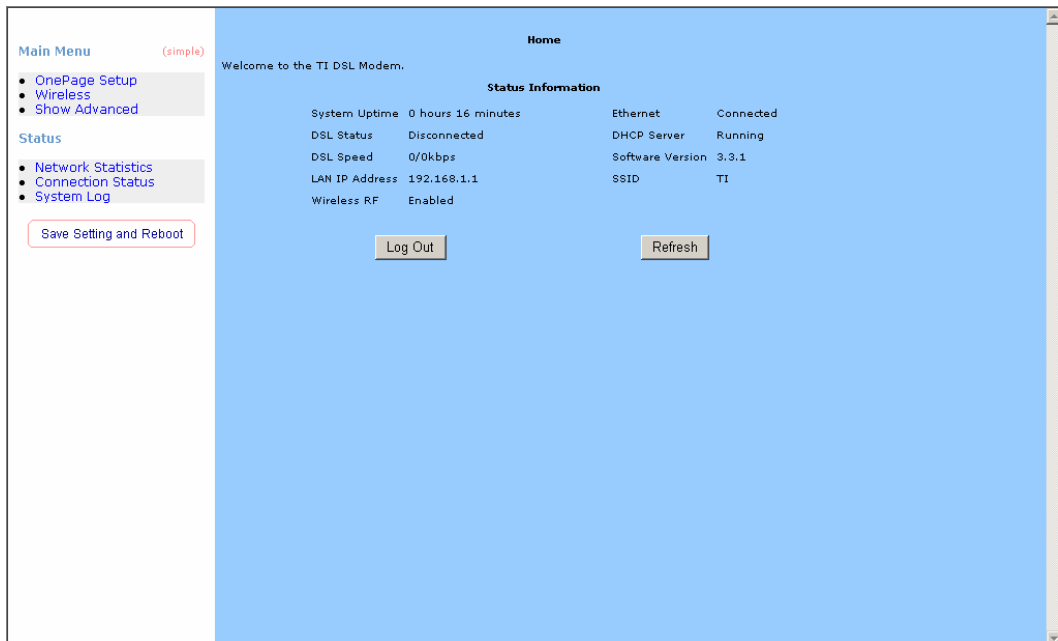A screenshot of the TI DSL Modem's home page. The page has a blue background and a white sidebar on the left. The sidebar contains a "Main Menu" section with links for "OnePage Setup", "Wireless", and "Show Advanced", and a "Status" section with links for "Network Statistics", "Connection Status", and "System Log". A "Save Setting and Reboot" button is highlighted in the sidebar. The main content area is titled "Home" and contains a "Welcome to the TI DSL Modem." message. Below this is a "Status Information" table:

System Uptime	0 hours 16 minutes	Ethernet	Connected
DSL Status	Disconnected	DHCP Server	Running
DSL Speed	0/0kbps	Software Version	3.3.1
LAN IP Address	192.168.1.1	SSID	TI
Wireless RF	Enabled		

At the bottom of the main content area, there are "Log Out" and "Refresh" buttons.

Note: for more complete information on the device, please see the full manual which is included on the CD.

Hereby, **Well Communication Corp.**, declares that this device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

This device will be sold in the following EEA countries: Austria, Italy, Belgium, Liechtenstein, Denmark, Luxembourg, Finland, Netherlands, France, Norway, Germany, Portugal, Greece, Spain, Iceland, Sweden, Ireland, United Kingdom.

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.