



Safety Instructions

Your MP3 player is equipped with a variety of features. To help you maximize your listening pleasure, SanDisk would like to advise you that it is important to use the headphones with your MP3 player at a safe hearing level. For more safety information, please go to www.sandisk.com/support/clipsportplus/Safety

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

SanDisk One-Year Warranty

The SanDisk Clip Sport Plus MP3 player is covered by this warranty for one (1) year, subject to the applicable warranty terms and conditions, as defined at www.sandisk.com/wug.

Disposal Instructions

Do not dispose of this device with unsorted waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area.

Online User Manual and End-User License Agreement

Please go to www.sandisk.com/support/clipsportplus to retrieve your online User Manual and End User License Agreement.

FCC Compliance

This device complies with part 15 of the FCC Rules. www.sandisk.com/support/clipsport/FCC

For more info, go to:
sandisk.com/support/clipsportplus

SanDisk is a trademark of Western Digital Corporation or affiliates, registered in the United States and other countries. Clip Sport is a trademark of Western Digital Corporation or affiliates. The microSDHC mark and logo are trademarks of SD-3C, LLC.

© 2016 Western Digital Corporation. All rights reserved. Made in China.

80-01-10318

SanDisk
a Western Digital brand

QUICK START GUIDE

For more info, go to:
sandisk.com/support/clipsportplus




1 Connect your player to your computer's USB port and charge



For more info, go to:
www.sandisk.com/support/clipsportplus

2 Transfer music files to your Clip Sport Plus music player

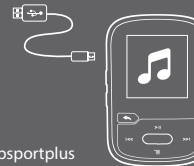

For more info, go to:
www.sandisk.com/support/clipsportplus

Charge your player for approximately 3 hours prior to first use. (Device should be off to maximize charging)

You can charge your player through the USB port of your computer, a car adapter (NOT included) USB port, or AC adapter (NOT included) USB port.

NOTE: Upon first time use, it is recommended to condition the battery to maximize the useful life. The player SHOULD be fully charged and then fully discharged before recharging. Repeat this cycle for the first 3-5 times you charge the player.

To connect the player to a computer, follow these steps:

1. Connect the large end of the USB cable into an available USB port on the computer.
2. Connect the smaller end of the USB cable into the player's dock connector.
3. The player will appear in My Computer as "CLIP SPORT PLUS."
4. You can transfer music from your computer to the player using the drag-and-drop method.

3 OPTIONAL: Connect your player to Bluetooth wireless headphones



For more info, go to:
www.sandisk.com/support/clipsportplus

To connect the player to a computer, follow these steps:

1. Bring your player and your wireless Bluetooth headphones in range of each other.
2. Turn on both your player and headphones.
3. Put the player in pairing mode via settings.
4. Search for your headphones in the list under "Devices."
5. Pair your player s by tapping on your headphones.

Clip Sport™ Plus MP3 Player At-A-Glance



IPX-5 Rated: stands up against splashes, concentrated jets of water, and excessive air moisture.

USB port
(charging
& data transfer)

Volume control

Back / Lock-Unlock
(Hold 3 sec.)

Play / Pause / Scroll up

Left / Previous / Rewind

Options / Scroll down

Earphone
jack

Display
screen

Right /
Next /
Forward

Power / Select

SanDisk
a Western Digital brand

