

 


by WHALEN

LOT NUMBER: _____

DATE PURCHASED: __/__/__

Striped Gaming Rocker Chair Model #WC-492EXBTGR

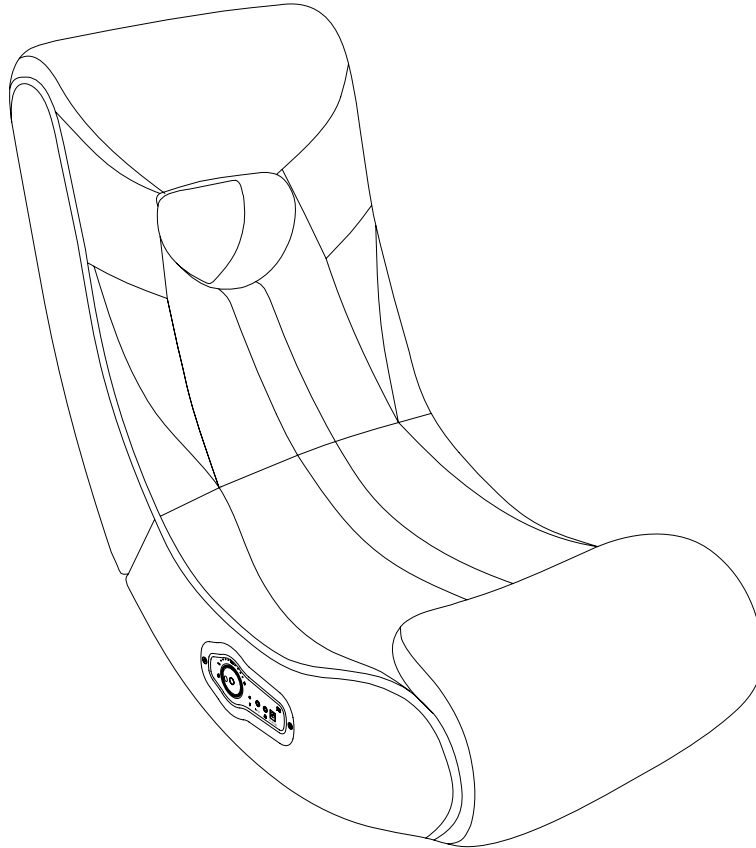

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, **DO NOT** return this item to the store where it was purchased. Please call our toll-free customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

866-632-6632

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our website www.levelupgear.com

Or e-mail your request to: support@levelupgear.com

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


Please call for replacement parts or assistance: 866-632-6632

Whalen Furniture Mfg., Inc.

Page 2

Factory # 98-15326

 Speaker Locations

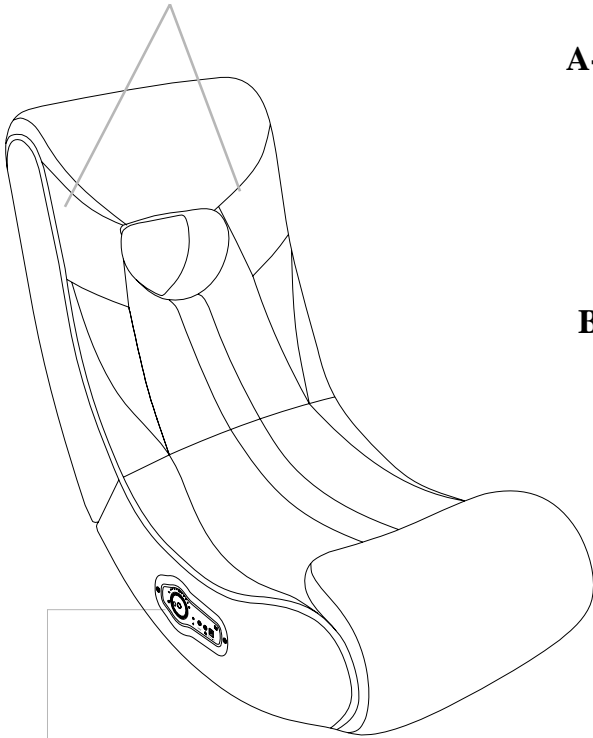



FEATURES

A- Control Panel

- A1- Volume Adjustment/Power On/Off
- A2- Power Indicator Light
- A3- Bluetooth Indicator
- A4- Audio Input Jack
- A5- Headphone Plug in Jack
- A6- DC Power Input Jack


B- Accessories Supplied

  - B1- AC Power Adapter (1 pc)
- B2- 3 m RCA Stereo Male to 3.5 mm Stereo Male Cable (1 pc)
- B3- RCA Female-to-Female Barrel Adapter (2 pcs)
- B4- 0.2 m RCA Stereo Female to 3.5 mm Stereo Male Cable (1 pc)

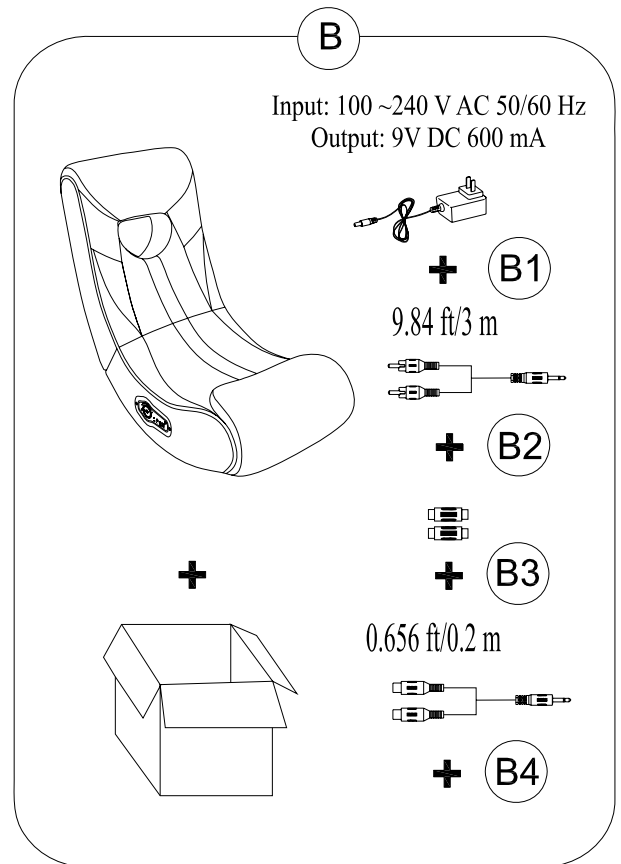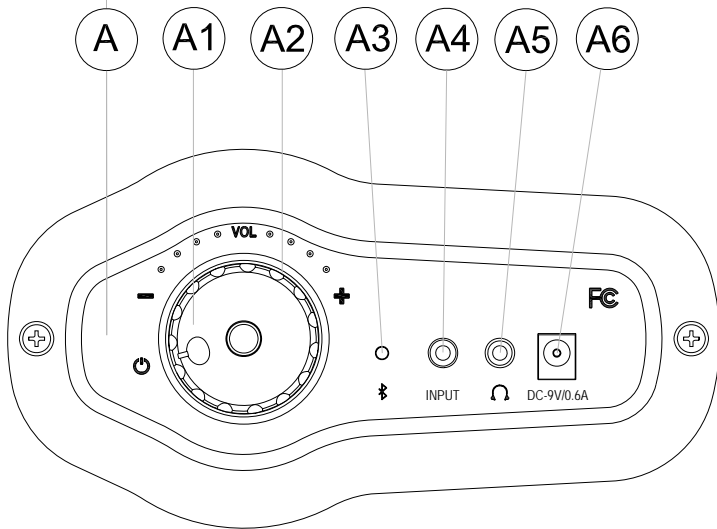




Set up and Adjustments

 1. Unpack the unit and remove any packing from the carton. Lift the gaming rocker chair out of the carton and set the accessories pack aside for later use.
2. Keep the chair in the folded position and place it on the floor with the back storage pocket facing up.
3. Flip the back side of the chair up and attach to the bottom of the seat using the Velcro strips.
NOTE: Keep hands and fingers away from the joint to prevent from crush hazard.
4. Unpack the AC Power Adapter (B1) and connect it to the Power Input Jack (A6) on the Side Control Panel. Insert the two-prong plug into an outlet to supply power for the gaming rocker chair.
5. Turn the Power Dial (A1) and confirm that the Power Indicator Light (A2) is on.

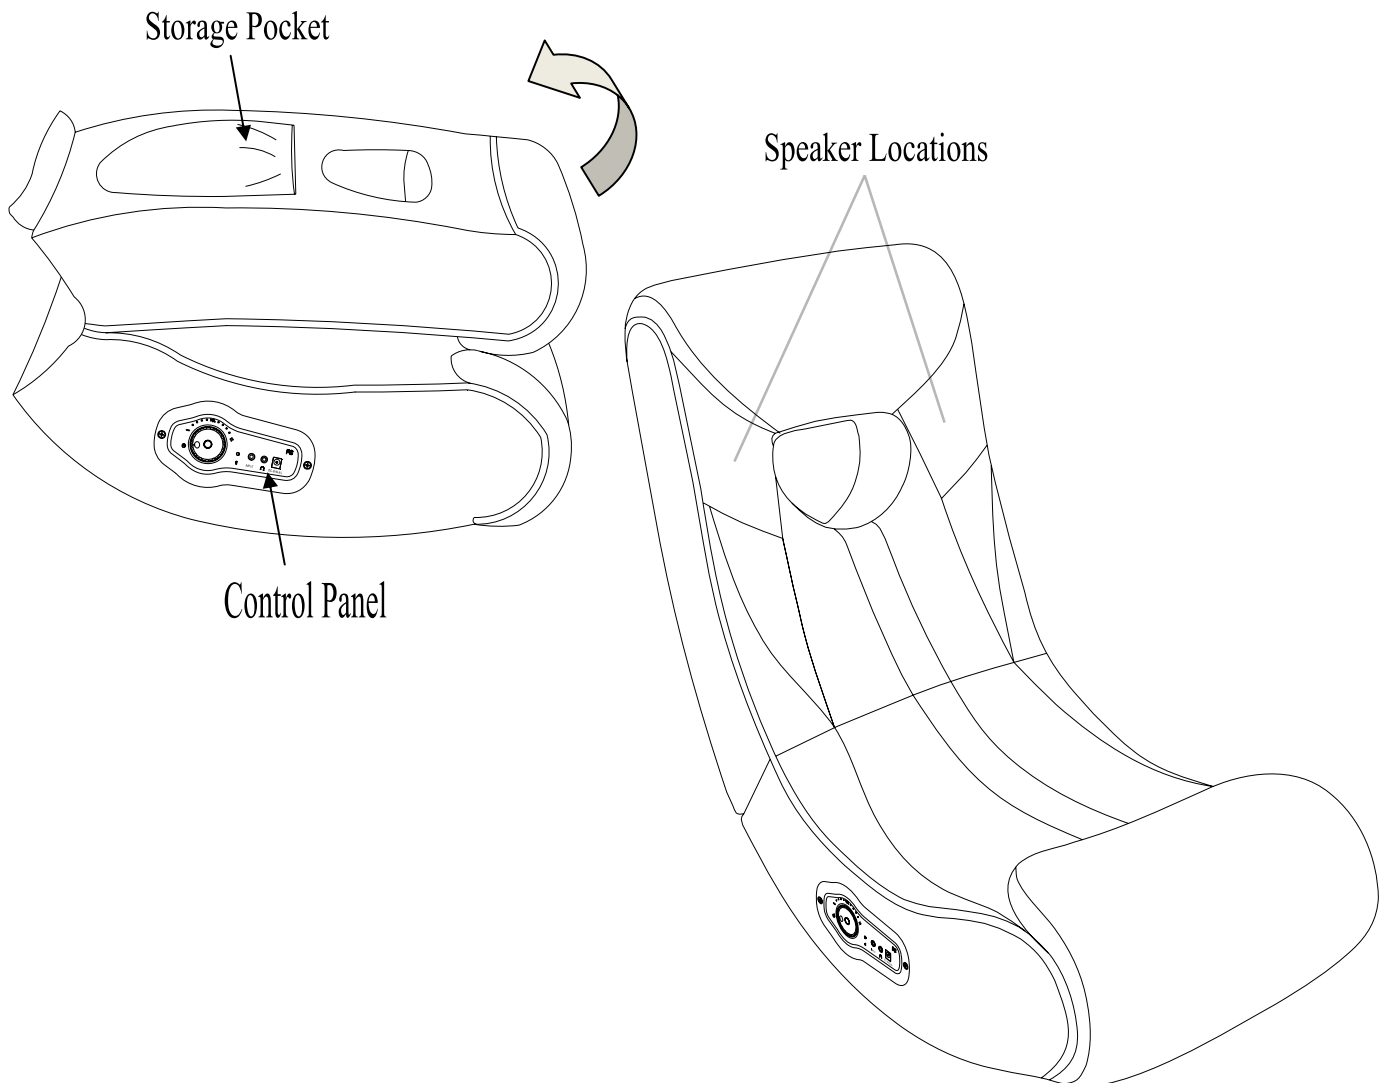

Set up and Adjustments

   6. Follow the connection diagrams below to connect the gaming rocker chair to the audio equipment of your choice.
7. Adjust the bass and volume levels to your preference. Now you can enjoy the gaming rocker chair.

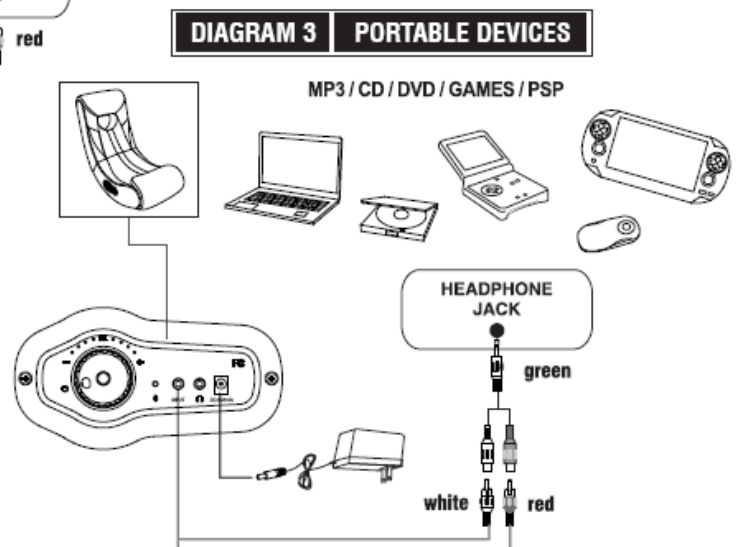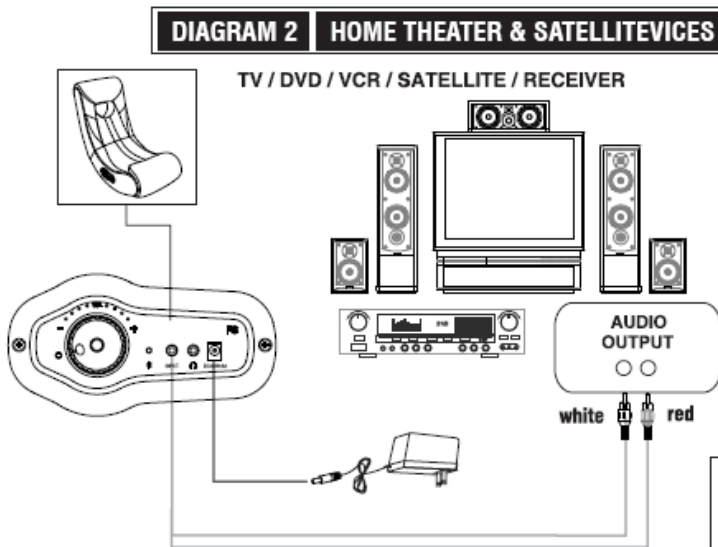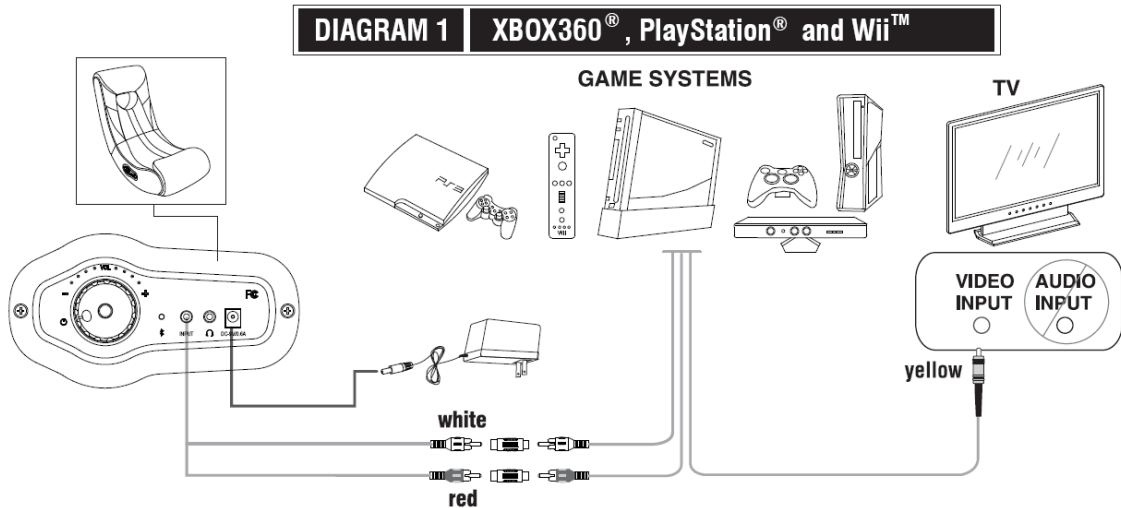

Please call for replacement parts or assistance: 866-632-6632
Whalen Furniture Mfg., Inc.

Assembly Instructions

8. The gaming chair features a built in Bluetooth® receiver. You can connect your Bluetooth® audio player with this speaker without wires or cords over a short distance of approximately 10 meters (approx. 33feet). To communicate the speaker with your Bluetooth® devices, you will need to follow the steps below:
 - 1) Turn on audio unit (red light on), make sure nothing is connected to the input jack (A4). If the unit has been on for a while you may need to turn the power off then back on to place the Bluetooth into pairing/discovery mode.
 - 2) The Bluetooth indicator will be quick flashing, indicating it is in pairing mode. If the Bluetooth indicator light is on solid it indicates that it is paired and connected to Bluetooth device.
 - 3) Pair phone / device featuring Bluetooth® technology to LevelUp in Bluetooth settings:
 - a. Activate Bluetooth® on your device. Please check your mobile phone /audio device owner's manual for further details.
 - b. Search for new Bluetooth® device on the mobile phone /audio device. You should LevelUp Game Chair under available devices.
 - c. Select LevelUp Game Chair to pair, no pass code is needed.
 - d. The Bluetooth indicator will turn solid when paired.
 - 4) If you want to switch back to a wired source simply plug into the 3.5mm input jack. Bluetooth will turn off and switch to the wired input.

Care, Cleaning and Maintenance

- Always make sure that the Velcro strip is attached before moving or sitting in the chair.
- To ensure your product maintains its finish clean only with a soft dry cloth.
- Do not use chemical based products or solvents or place in direct sunlight.

CAUTION

- Use of audio speaker devices for extended periods at high volumes could pose a risk of hearing loss.
- Use of headphones and earphones for extended periods at high volumes could pose a risk of hearing loss.

Thank you for choosing Whalen Furniture!
We hope you have many years of enjoyment.

Unable to hear any sound from the Striped Gaming Rocker Chair

1. Make sure that the power adapter is connected properly. If connected properly, the power indicator light on the control panel should light up. If the power indicator light does not light up, try a different power outlet.
2. Ensure the power unit is turned on and power indicator light on the control panel is lit. If not, turn the power switch on the control panel.
3. After completing steps 1. and 2. Please review the diagram illustrations in the instruction guide. Double check all audio connections. Check that the hand remote volume level is turned to an audible level as well as on both the TV and the chair.
4. After completing steps 1 – 3 and still do not hear sound, connect another audio source (CD player, television or game console) and repeat the steps once again. If it's still not working, please call our customer service department at 866-632-6632 or 866-942-5362. Office hours are 8:30 a.m. - 4:30 p.m. pacific standard time.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RSS-210 STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

⚠ WARNING Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

SAVE THESE INSTRUCTIONS

QUALITY GUARANTEE

We are confident that you will be delighted with your LEVELUP purchase.

Should this product be defective in workmanship or materials, or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every LEVELUP product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

Customer Service: 866-632-6632
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.levelupgear.com

Please call for replacement parts or assistance: 866-632-6632

Whalen Furniture Mfg., Inc.

Page 8

Factory # 98-15326