




# COOKTOP PARTS

For Models: RF114PXSQ3, RF114PXS B3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)

30" ELECTRIC FREESTANDING  
STANDARD CLEAN RANGE

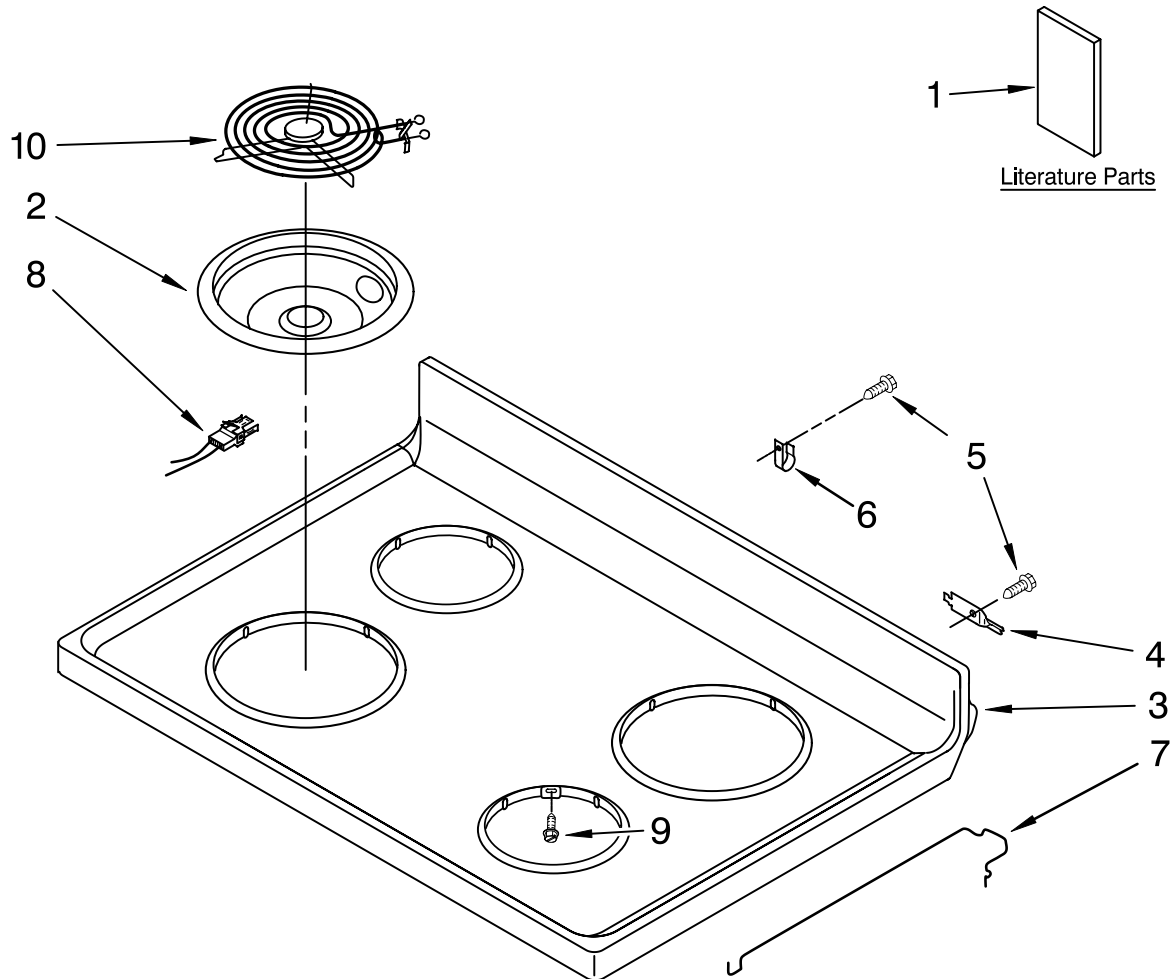

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10162204	Owners Manual
	W10115597	Tech Sheet
	W10141166	Instructions, Installation
		Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2		Bowl, Drip
	W10196406	6" Chrome (2)
	W10196405	8" Chrome (2)
3		Cooktop
	3186231	White
	8272527	Biscuit
	3186233	Black
4	3195060	Hinge, Cooktop (2)

Illus. No.	Part No.	DESCRIPTION
5	3196178	Screw
6	308605	Strain Relief
7	3195812	Rod, Support (2)
8	814399	Receptacle, Elmnt
9	3196154	Screw
10		Element, Surface
	9761347	6" (2)
	9761345	8"(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF114PXSQ3, RF114PXS3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)

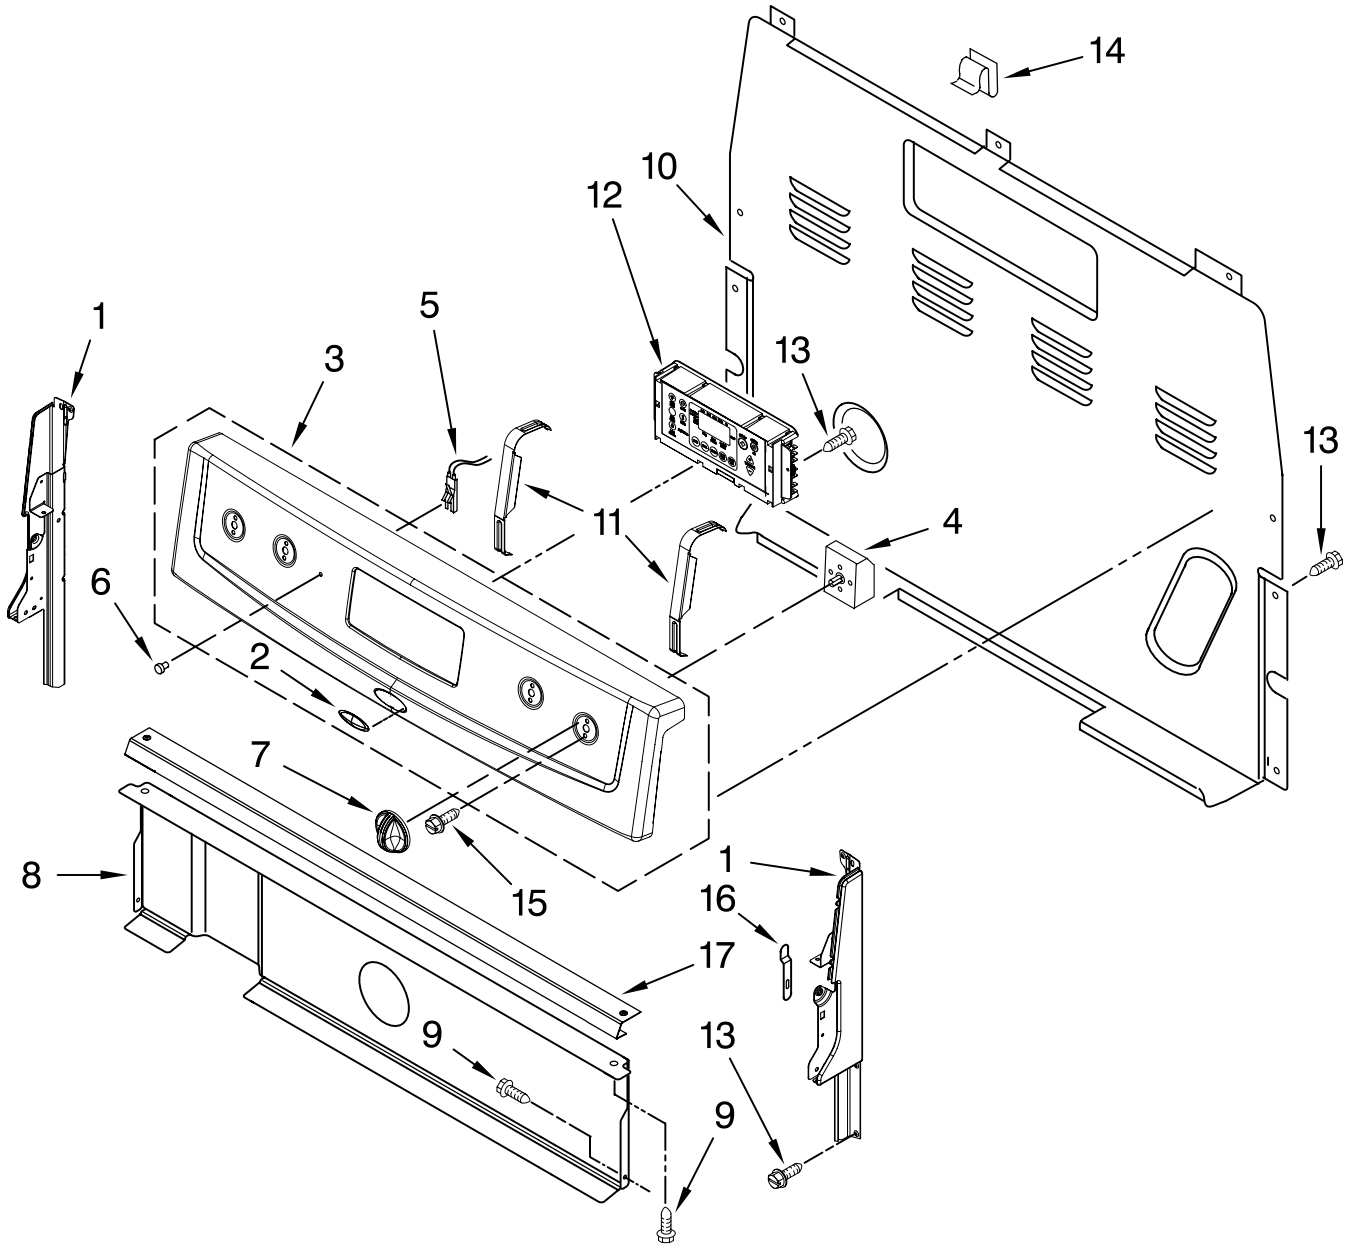

Illus. No.	Part No.	DESCRIPTION
1	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
	2	9757609
3		Panel, Console
	W10170678	Black
	W10170677	White
	W10170663	Biscuit


Illus. No.	Part No.	DESCRIPTION	
4	3148954	Switch, Infinite	
	3148952	Left Front	
	3148954	Right Rear	
	3148952	Right Front	
	3400882	Screw (8)	
	5	8523265	Light, Indicator
	6	3196068	Lens, Light
7		Knob, Infinite (4)	
	9761964	Black	
	9761962	White	
	9761963	Biscuit	

Illus. No.	Part No.	DESCRIPTION
8	8053912	Shield, Heat
9	3196166	Screw
10	8272473	Cover, Upper
11	9762078	Brkt-Mntg, EOC
12		Control, Range
	W10108290	Black
	W10108280	White
	W10108300	Biscuit
13	3196178	Screw
14	8273564	Clip
15	3400882	Screw
16	3196200	Clip, Spring (2)
17	W10182322	Brkt-Mntg, Console

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF114PXSQ3, RF114PXS3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)

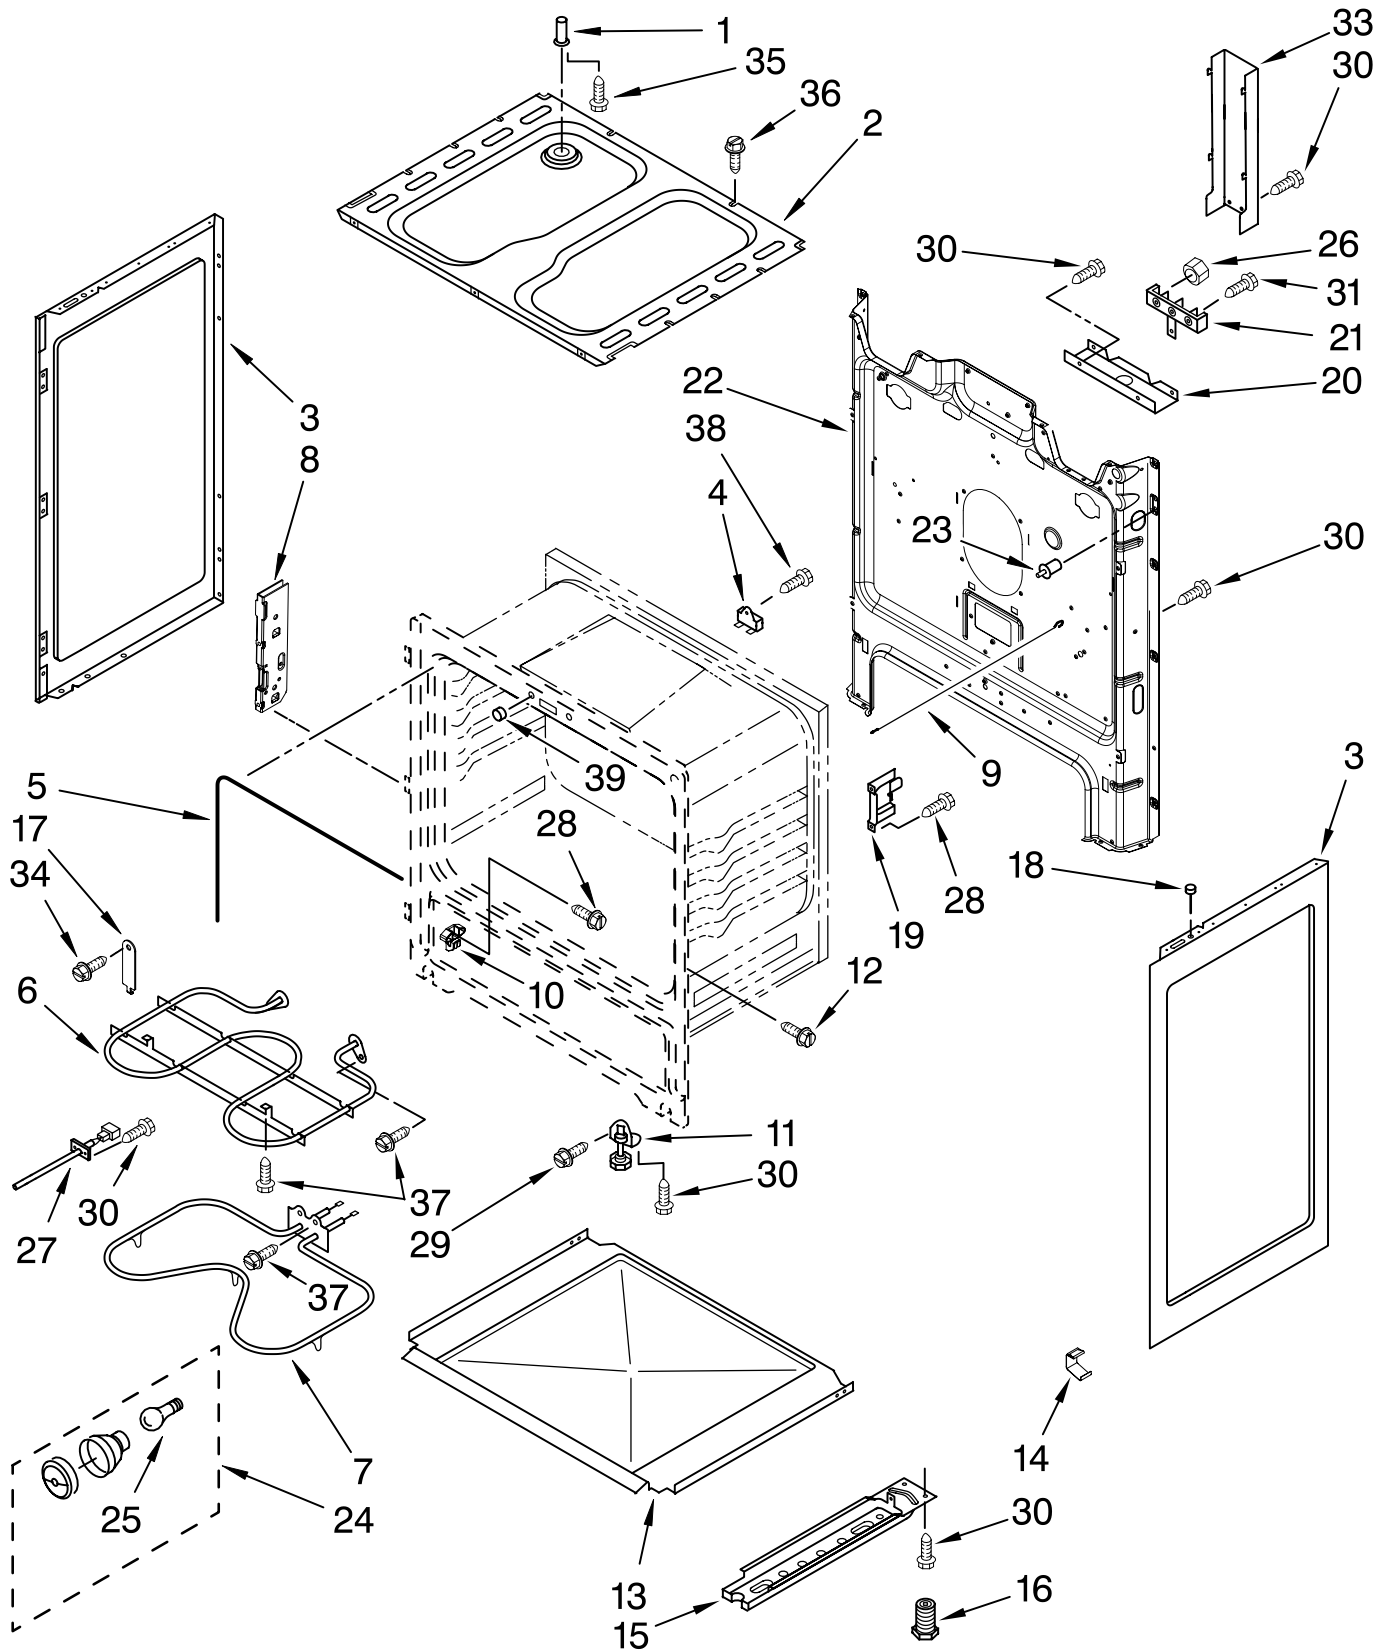

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF114PXSQ3, RF114PXSB3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)


<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
	8272519	Biscuit-Textured
	8053832	Black-Textured
4	3196548	Fuse, Thermal
5	W10129032	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9760407	Brkt-Mounting
9	9757239	Rod, Door Switch
10	W10114344	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12	W10067840	Screw
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	9761517	Clip,Dr Mntg(2)
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	112432	Nut (3)
27	W10181986	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
33	9758283	Cover, Box
34	W10031780	Screw
35	3196567	Screw
36	3196168	Screw
37	3196174	Screw
38	3196172	Screw
39	9758701	Spacer, Door

## INSULATION

8273263 Insulation, Wrap  
8272611 Insulation, Back

# DRAWER & BROILER PARTS

For Models: RF114PXSQ3, RF114PXS3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)

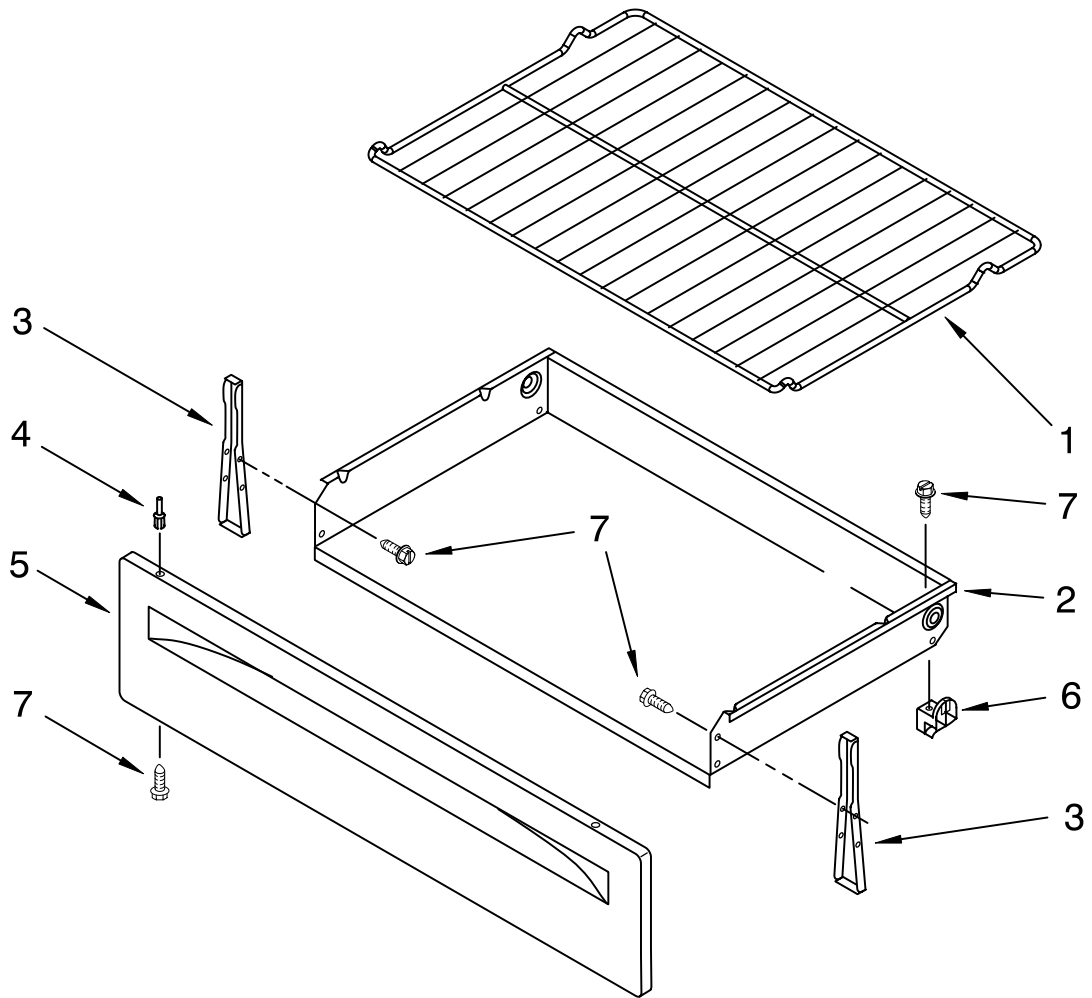


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	W10174396	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
5		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: RF114PXSQ3, RF114PXS B3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)

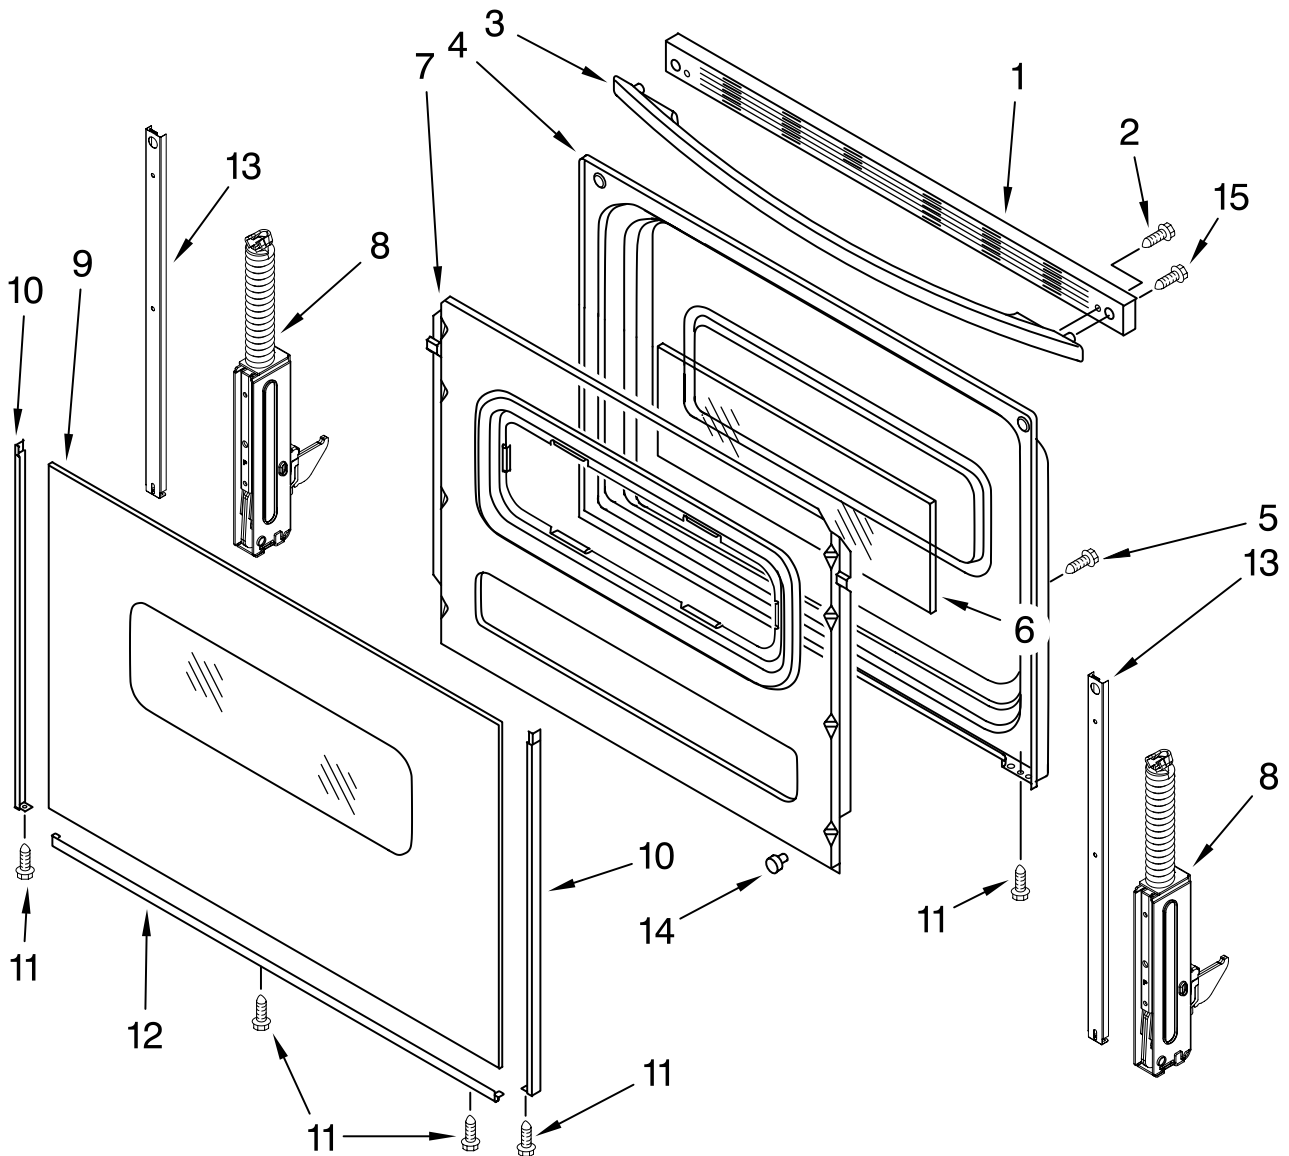

Illus. No.	Part No.	DESCRIPTION
1	W10144870	Trim, Top Black
	W10144869	White
	W10181675	Biscuit
2	W10168559	Screw
3	W10118385	Handle, Door Black
	W10118384	White
	W10118386	Biscuit
4	9761340	Liner, Door
5	W10031790	Screw
6	9758163	Window, Inner
7	9761500	Retainer, Insul.

Illus. No.	Part No.	DESCRIPTION
8	9761494	Hinge, Door (2)
9	9762477	Glass, Outer Black
	9762476	White
	9762478	Biscuit
10	8523171	Trim, Side Black Left Hand
	8523165	Black Right Hand
	8523172	White Left Hand
	8523166	White Right Hand
	8523173	Biscuit Left Hand
	8523167	Biscuit Right Hand

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12	8523177	Trim, Lower Black
	8523175	White
	8523178	Biscuit
13	W10113759	Strap, Door
14	3195809	Bumper, Door (2)
15	W10178180	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: RF114PXSQ3, RF114PXSB3, RF114PXST3  
(Designer White) (Black) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)		

## SPLICING WIRES--25FT.

### LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

Illus. No.	Part No.	DESCRIPTION
<b><u>REFINISHING MATERIAL</u></b>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean(1/2 Pt)
	261582	Grease

### **INSULATION**

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

### **PAINT, TOUCH-UP (1/2oz.)**

72017	White
72107	Almond
4392899	Biscuit
511873	White Porcelain (2 Oz.)

### **PAINT, PRESSURIZED SPRAY (12 oz.)**

350930	White
350956	Almond
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, BULK (1 qt.)</u></b>		
	799344	White (Uncut)
	978883	Almond (Uncut)
	4392900	Biscuit (Uncut)

### **ACCESSORY PARTS**

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

### **ANTI-TIP KIT**

W10017440	Anti-Tip Kit
-----------	--------------

### **WIRING HARNESS PARTS**

9761476	Harness, Wire (Cooktop)
W10083480	Harness, Wire (Main)
311227	Wire, Ground
3196154	Screw
W10083650	Harness, Wire (Sensor/Dr Switch)
3196174	Screw (Grnd / Main Back)
313660	Clip, Wire Ground
3196173	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST