

DEX™

A WIRELESS WORLD


USER INSTRUCTIONS

FM+DEX


WIDEX®
HIGH DEFINITION HEARING

PACKAGE CONTENTS

FM+ DEX

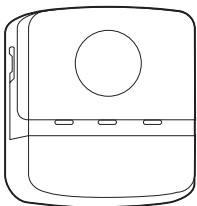

Neck loops (three lengths)

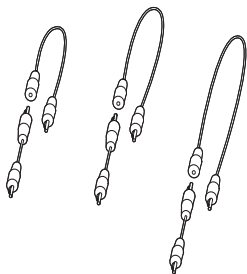


Charger




Jack-to-jack cable



Clip

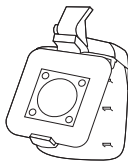

User instructions

 

CONTENTS

SYMBOLS	4
YOUR NEW FM+ DEX	5
Intended use	6
Description of device	6
FM+ DEX OVERVIEW	7
LEDS	8
OPERATING RANGES	9
GETTING STARTED	10
Charging the battery	10
Preparing for FM or audio	12
Antenna	17
TURNING ON THE FM+ DEX	23
ACOUSTIC INDICATORS	24
SELECTING INPUT SOURCE	25
VOLUME ADJUSTMENT	26
ROOM OFF	27
TURNING OFF THE FM+ DEX	28
TAMPER SWITCH	29
IN CASE OF MALFUNCTION....	30
CARING FOR YOUR FM+ DEX	32
WARNINGS	33
SAFETY WARNING	34

SYMBOLS

The following symbols will be used throughout the manual:



Messages with this heading indicate adverse reactions, potential safety hazards or inadequate device performance.



Messages with this heading indicate/include information regarding any special care to be exercised.



 Not for general waste.

YOUR NEW FM+ DEX

Your FM+ DEX is part of the DEX™ family of assistive listening devices. These user instructions explain how the FM+ DEX should be operated.



WARNING

This booklet contains important information and instructions. Please read this booklet carefully before you start using the device.

Intended use

The FM+ DEX is a battery-powered device intended to stream signals to Widex hearing aids using the wireless WidexLink, i.e. signals are received, altered and streamed to the hearing aid.

Description of device


The FM+ DEX is offered in order to support Widex hearing aids without DAI or a telecoil. When the FM module is attached, the user is able to receive FM signals.

In the same way, the device can substitute for a telecoil in hearing aids not fitted with a telecoil. The third input possibility is the line in, which can be used to stream music, etc., by connecting a computer or portable unit to the device.

The FM+ DEX is worn on a neck loop or attached directly to the clothing or belt using the included clip.

FM+ DEX OVERVIEW


1. On/Off
2. Input toggle key/Room off
3. Volume up/down
4. FM input LED
5. Audio input LED
6. T (telecoil) input LED
7. Battery level indicator
8. Tamper switch
9. FM switch
10. FM connector (Europlug)
11. FM connector (SCOLA FLEX receiver)
12. Charge (mini USB socket)
13. Audio
14. Cover

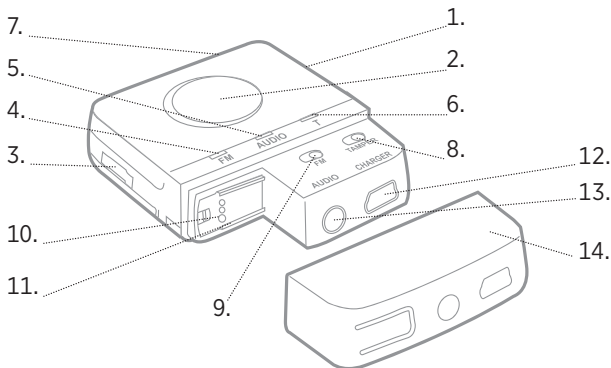

LEDS

Input indicators

Green light in any of the three input LEDs indicates that this input source has been chosen.

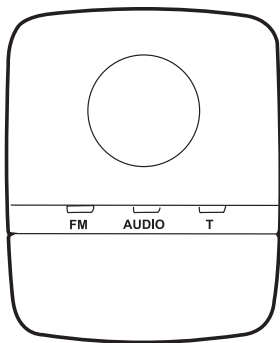

Battery indicator

Battery low	red
Battery charging	yellow
Battery fully charged, charging unit still connected	green
Battery fully charged, charging unit disconnected	off


OPERATING RANGES

From FM+ DEX to hearing aids	Up to 40 cm
From FM transmitter to FM+ DEX	Up to 30 metres

GETTING STARTED

Charging the battery

The FM+ DEX uses a rechargeable battery that is charged through the mini USB connector. When fully charged, the battery has a capacity of approx. 10 hours of continuous use. The charger is available in four country versions. The version you have may therefore not look exactly as illustrated in this booklet.

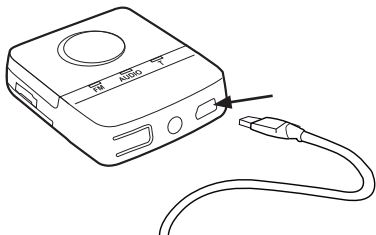

1. Connect the charger to the mini USB connector at the bottom of the FM+ DEX.
2. Plug the charger into a wall socket.

It takes approximately 6 hours to charge the battery the first time. Recharging takes approx. 2 hours. The device cannot stream while recharging.




WARNING

Do not attempt to change the battery yourself. Contact your hearing care professional if the battery needs replacement.

Preparing for FM or audio



The toggle key allows you to choose between three input sources, depending on whether you wish to receive FM, audio or telecoil signals. However, to prepare for FM or audio reception, you need to do the following:

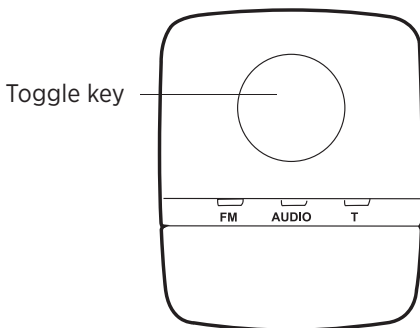



FM

If you wish to listen to an FM source, you will first need to connect the appropriate FM module.



1. Remove the cover at the bottom of the device.

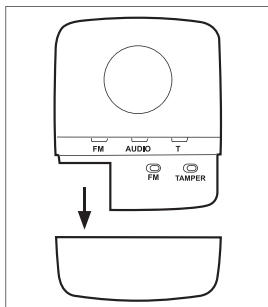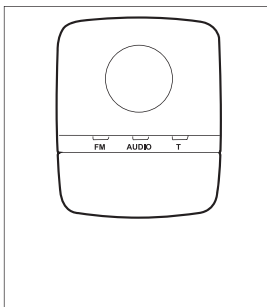


2a. If you have a SCOLA FLEX receiver, slide it into place as shown.

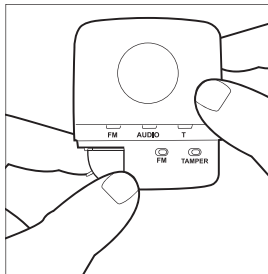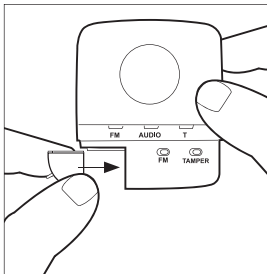



- 2b. For other modules, use a Europlug to connect it to the device. Please be sure to turn and position the Europlug correctly, i.e. according to the thickness of the pins.

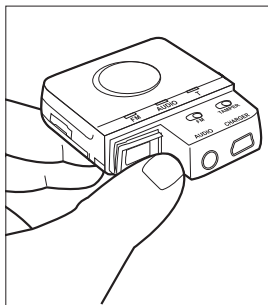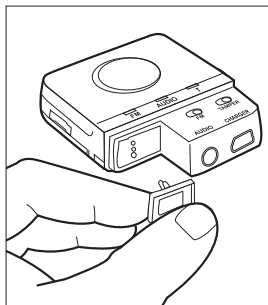

3. Turn the receiver module on.
4. Slide the FM switch to the right if you are using a SCOLA FLEX interface or to the left if you are using a Europlug.

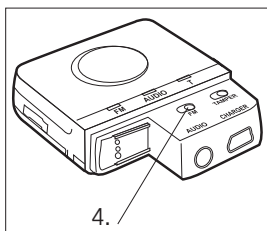


5. Attach the cover again.

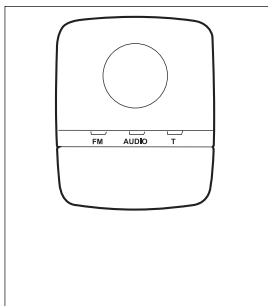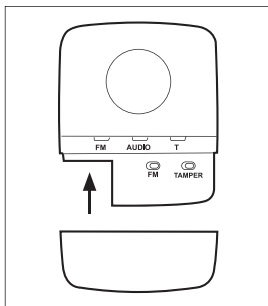

Audio

If you wish to listen to an audio source, plug the jack-to-jack cable provided into the audio (line-in) socket. Connect the other end to the audio source. The device automatically detects the audio signal.


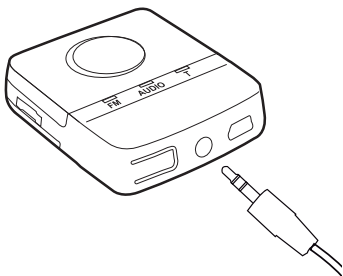


Antenna



The FM+ DEX can be used with or without an external neck loop antenna.

Attaching the neck loop antenna



Assemble the two neck loop wires (if not already assembled) by connecting the male jack on the short wire to the female jack on the long wire. Then assemble the two neck loop wires (if not already assembled) by connecting the male jack on the short wire to the female jack on the long wire. Then connect the jack connectors at the end of the neck loop wires to the holes in the click-on module.

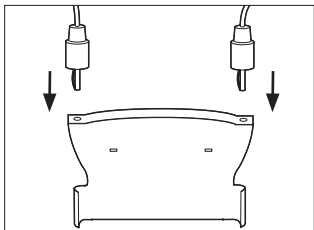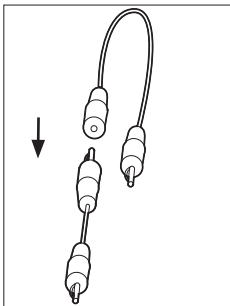





Then attach the assembled module to the device as illustrated.

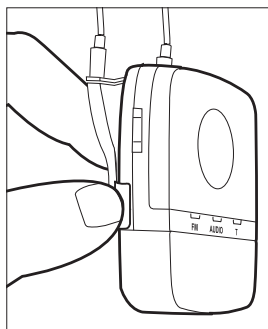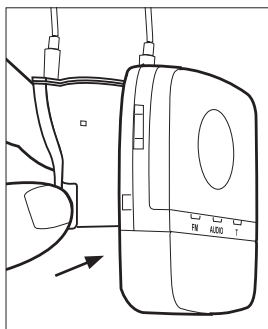





An alternative way of using the device is by attaching it to your clothes using the detachable clip. These first two illustrations show how to attach the clip to the device.

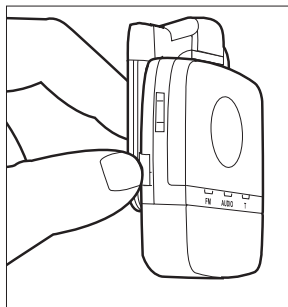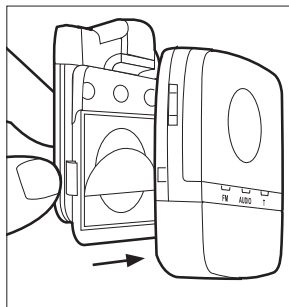

Pushing the clip upwards with two fingers allows you to turn the clip as required. Push it backwards to fix it in the desired position.

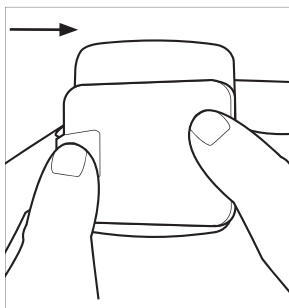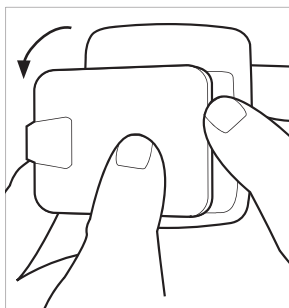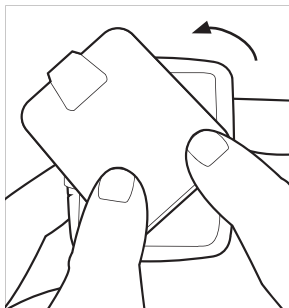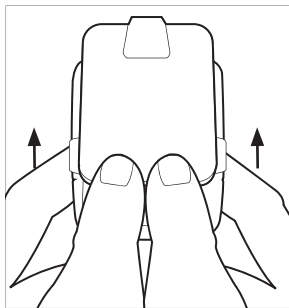

To open the clip, click the lock open, place it on your clothes and click it closed.

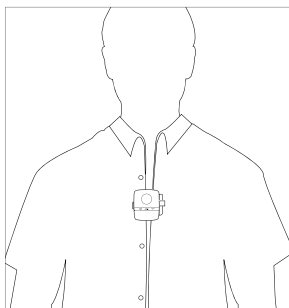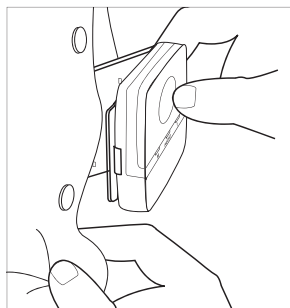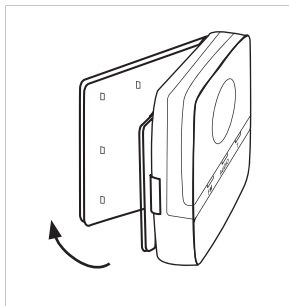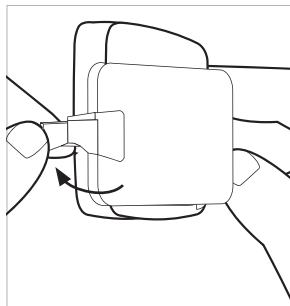




CAUTION: FOR PACEMAKER USERS

(Risks) The use of wireless Widex hearing aids/DEX should not interfere with other devices such as a pacemaker. However, to be extra cautious, Widex follows the guidelines recommended by the manufacturers of implantable defibrillators and pacemakers for their patients when using mobile phones. Specifically, hearing aid wearers who also use a pacemaker should

- Keep the hearing aids at a distance of at least 15 cm/½ foot away from the pacemaker and
- Do not carry the hearing aids (and/or any of the DEX accessories) in a shirt pocket or close to the chest.
- If any interference is observed, do not use the hearing aids (and/or DEX) and contact your pacemaker manufacturer and hearing healthcare professional immediately.

TURNING ON THE FM+ DEX

Push the slide button on the right side upwards.

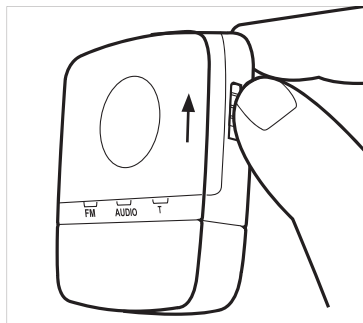


ACOUSTIC INDICATORS

When using any button/switch, a corresponding acoustic indicator will be presented in the hearing aids.

Turning the device on/off	message
Change of input source	message
Room off/on (HA microphones)	message
Volume adjustment	tones

SELECTING INPUT SOURCE


The device usually starts up in the FM input setting. The current input source is indicated by a green light in the corresponding LED. Using the toggle key you can change between the three input options: FM, audio or T (telecoil).

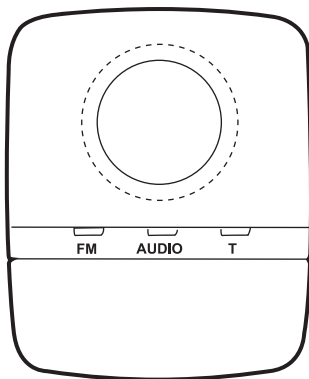

VOLUME ADJUSTMENT

The device starts up at the default volume level.

Use the volume control on the left side to adjust the volume up or down.

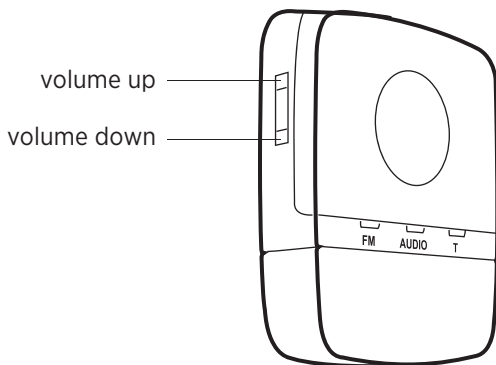


ROOM OFF

If you wish to listen to the input signal only, push the toggle key and hold it in for more than half a second. This will disable the hearing aid microphones. To deactivate this function again, push the toggle key and hold it in again for more than half a second.

TURNING OFF THE FM+ DEX

To turn the FM+ DEX off, push the slide button on the right side of the FM+ DEX downward.

When you turn the device off, it stops streaming and the hearing aids return to the Master program.

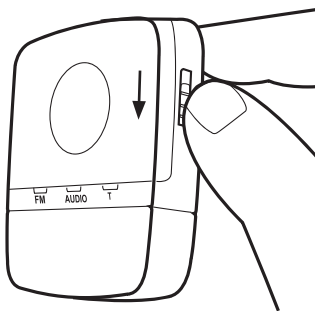

TAMPER SWITCH

The input toggle/room off switch and volume control can be locked using the tamper switch. Slide the switch to the left to lock the functions, and to the right to unlock them.

IN CASE OF MALFUNCTION....

Problem	Possible cause	Solution
Your FM+ DEX does not work	The device is out of range	Move the device within range
No sound when listening to audio	FM+ DEX is not within range of the hearing aids	Move the FM+ DEX within range
Temporary suspension of communication between hearing aids. Message: "Partner check"	Interference from devices emitting a strong electromagnetic field	Keep at least 15 cm/ ½ foot away from potential sources of interference
Interference with another FM+ DEX	Devices may be too close together	Move one of the devices out of range of the other.
The input toggle button does not work.	The battery is flat.	Charge the battery using the included charger.
	The battery does not work.	Contact your hearing care professional to have the battery replaced.
The charger is connected is connected but does not charge (LEDs are not green).	The power supply to the FM+ DEX has been interrupted.	Check that the charger is properly connected to the FM+ DEX mini USB socket and a wall socket, and that the wall socket is switched on.

Problem	Possible cause	Solution
No streamed audio sound even though the audio input LED is green.	The cable between the sound source and the FM+ DEX has been disconnected.	Connect the sound source to the FM+ DEX.
No streamed magnetic signals even though the telecoil (T) input LED is green.	No magnetic field nearby	Place the FM+ DEX in a magnetic field.
No streamed FM signals even though the FM input LED is green.	The FM module or the FM transmitter is switched off.	Check that the FM module and the FM transmitter are switched on and are set to the same channel.
Battery level indicator is red	The battery is flat.	Charge the battery.
Streaming is interrupted	The FM+ DEX is out of range.	Move the FM+ DEX within range.
The streamed sound is too loud or too low		Use the volume up/down buttons on the FM+ DEX to adjust volume level.
The input toggle button does not work.	The FM+ DEX is not turned on.	Turn the FM+ DEX on.
	The charger is connected to the FM+ DEX.	Disconnect the charger when the FM+ DEX has been charged.

CARING FOR YOUR FM+ DEX

The device is a valuable object and should be treated with care. Here are some things you can do to prolong the life of your FM+ DEX:



WARNING

- Do not expose the device to extreme temperatures or high humidity.
- Do not immerse in water or other liquids.
- Do not carry your FM+ DEX with you during X-rays, MRIs or other scans or radiation treatments and never place it in a microwave oven. These are some of the types of radiation that can damage the device. Radiation from, for example, room surveillance equipment, burglar alarms and mobile phones is weaker and will not damage the device aid, but may create audible interference.



CAUTION

- Never try to open or repair the device yourself. (This should only be done by authorized personnel.)
- Clean the device with a dry, soft cloth. Never wash it with water, cleaning solutions or other liquids.
- Avoid dropping the FM+ DEX.
- When the device is not in use, keep it in its case in a cool, dry location out of reach of children and pets.

WARNINGS



WARNING

- Keep the FM+ DEX and its parts and accessories out of reach of children and anyone else who might swallow parts of the device, or otherwise cause injury to themselves with these items. In case of ingestion, contact a physician immediately.
- Do not use the device on aircraft or in hospitals without permission.
- Do not use the device in mines or other areas with explosive gases.



CAUTION

- Although the device has been designed to comply with the most stringent international electromagnetic compatibility standards, the possibility cannot be excluded that it may cause interference with other equipment, such as medical devices.

SAFETY WARNING

This device is charged by an external power charger.

- Only connect a charger that is compatible with the FM+ DEX.
- The charger must have an output rating of 5VDC, 500mA, and a mini USB connector.
- The charger input rating voltage and wall plug must be compatible with the AC wall outlet in your region.
- The charger must have the certification marks showing certification by a safety agency acceptable in your region.

Widex strongly recommends that you always use a charger unit that is supplied by your Widex Distributor to ensure safe and efficient use of your FM+ DEX.

REGULATORY INFORMATION

FCC ID: TTY-FMD

IC: 5676B-FMD

Federal Communications Commission Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications to the equipment not expressly approved by Widex could void the user's authority to operate the equipment.

**Industry Canada Statement /
Déclaration d'industrie Canada**

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada.

Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CE 0459


Hereby, Widex A/S declares that this FM+DEX is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the Declaration of Conformity can be found at: <http://www.widex.com>

 **N26346**



 Hearing aids, accessories and batteries should not be disposed of with normal household waste. Please consult your national Widex distributor for advice on how to dispose of these items.



CE 0459

Manufacturer
WIDEX A/S • Nymoellevej 6, DK-3540 Lyngø
Denmark • www.widex.com



Printed by HTO / 2011-12
9 514 0198 001 #01