

WRIST TALKIES

WALKIE TALKIE SET

Keep these instructions. DO NOT DISCARD. - Requires 2 x 9Y (6LRM) DC batteries. Dob whits should install and replace betteries. - Adjuline basseries are recommended for longer life

. Do not use rechargeable basseries. - Non-rechargeable bazzeries are not to be recharged . Enhanced bettery should be removed from toy Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc) or rechargeable

. Betteries must be inserted with the correct polarity. . The supply terreinels are not to be short-circuited.

 Only betteries of the same or equivalent type as recommended are to be used. Hew to Use

1. Sig-elastic hand strap over fingers and attach adjustable wrist evap conformably 2. Fig. up antenns and dick power-volume dail to ON. Turn dial to adjust volume

3. Press salicitizan button to talic light glows red. Speak into mile

4. Release tallolisten button to lister; light plows green. 5. Click power-volume dial to OFF and flip ancenne down over milks

Each Write Talkie uses one 9 valt DC battery, not included To install:

L. Ramove screw and bettery cover with a Phillips screwfriver

2. Remove the used bettery from the connector jack. 1. Plur a Souls alkaline bazzery prop the connector jack and fit is

4. Replace the bettery cover and the scrow

Write Talking 70013-4000-4L 2/99



DECREES HATERD: Small Parts Not for Children Under 3 Trs









NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV

INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.

SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.