



Ages 4 and Up
47001

Walkie-Talkies

Communicate with Fellow
Power Rangers!

Requires 2 9V
(6LR61) batteries,
not included.

**Important: Please save this instruction sheet.
It contains valuable product information.**

ADULTS: INSTALLING BATTERIES

1. Locate **BATTERY DOOR** on bottom rear of each Walkie-Talkie. Use a small Phillips head screwdriver to loosen screw. Remove battery door.
2. Snap a fresh, new battery onto each battery clip. (Fig. 1)
IMPORTANT: Observe battery polarity (+ and -)
3. Place each battery into battery compartment, making sure wires and clip are tucked neatly inside.
4. Replace battery doors and tighten screws.

WALKIE-TALKIE OPERATION

1. Turn **POWER SWITCH** on each Walkie-Talkie to the ON position.
 - For best results, hold front of Walkie-Talkie 6 to 12 inches from your face and speak slowly and clearly toward the speaker/microphone holes on the front of the unit.
 - For best results, point **ANTENNA** straight up. Do not touch antenna while using.
2. Press and hold the **TALK BUTTON** to talk.
Tip: When you are finished talking, say "OVER" so the other Ranger knows it is his or her turn to talk.
3. Release the talk button and listen for the reply.
NOTE: Only one person can talk at a time.
Tip: When you are finished with your conversation, say "OVER AND OUT" so the other Ranger knows you are ending the conversation.
4. Always turn both power switches off when not in use to preserve battery power.

USING THE CALL BUTTON

While holding down the talk button, press the **CALL BUTTON** to send a message alert so the other Ranger knows you want to talk to him or her.

BATTERY SAFETY

1. Only adults should install and replace batteries.
2. Do not recharge non-rechargeable batteries.
3. Remove dead or exhausted batteries.
4. Insert batteries correctly. Match positive and negative signs.
5. The supply terminals are not to be short circuited.
6. Do not use rechargeable batteries.
7. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
8. Do not mix old and new batteries.
9. Only the batteries of the same or equivalent type recommended to be used.
10. Do not dispose of batteries in a fire; they may explode.
11. Dispose of batteries safely.


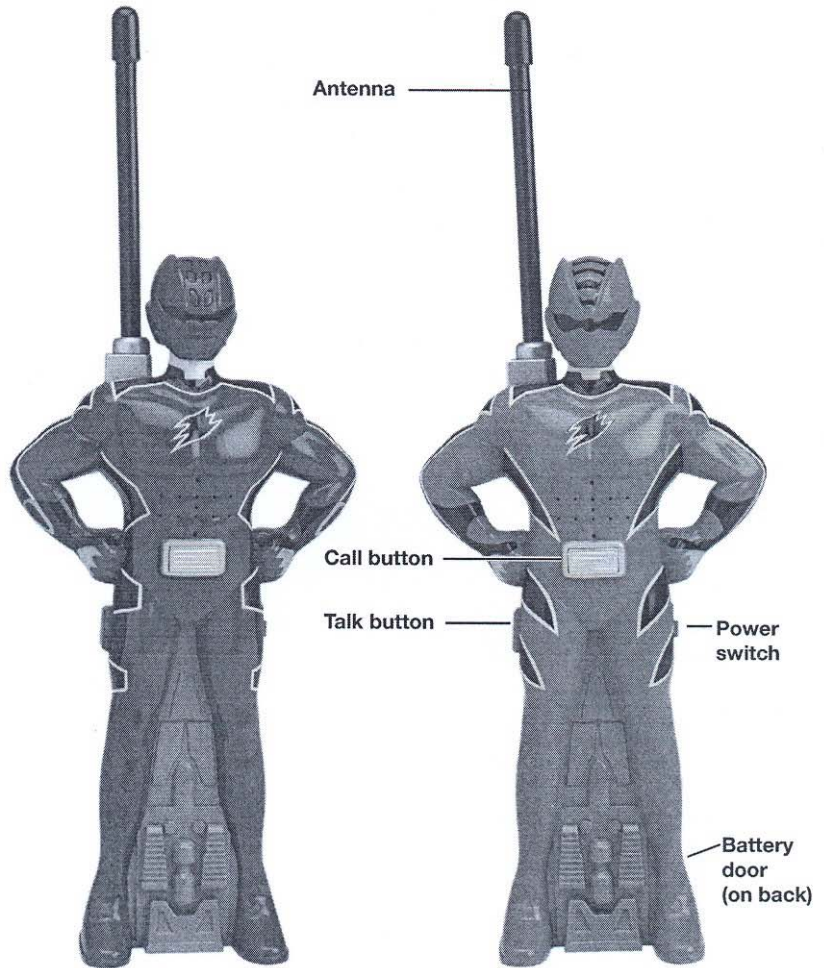


Fig. 1

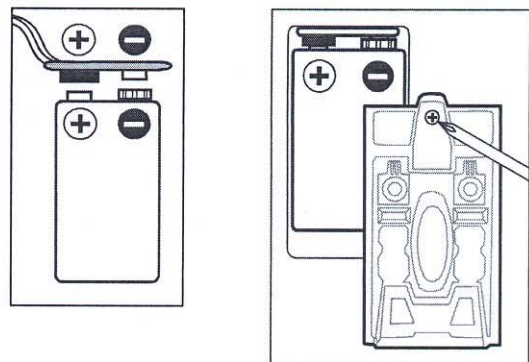

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: N3EPWRNG247001

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



POWER RANGERS JF W-T 47001-4000-V1 PR 9/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087

Power Rangers: TM & [©] BVS Entertainment, Inc. and BVS International N.V. ABC logo: TM and [©] ABC. All rights reserved.
© 2006 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved. **PRINTED IN CHINA.**
Product specifications subject to change.



TM & © Disney