



# Radio DJ

Ages 6 & up

## Real DJ Broadcast Studio

**IMPORTANT:** Keep these instructions. **DO NOT DISCARD**

- Requires 4 x 1.5 "AA" (LR6) batteries.
- Only adults should install and replace batteries.
- Alkaline batteries are recommended for longer life.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries should be removed from the toy.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries.
- Batteries should be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Only the batteries of the same or equivalent type as recommended are to be used.

### Features (Figure 1):

- Transmits through any radio up to 30 feet away (AM 1610 frequency)
- Includes four sound effects (siren, clapping, XX, XXX)
- Fade-in microphone and volume controls
- Tape deck to play your tapes on the air
- Plug in jack for your CD player to play your CD's on the air
- Light-up "On Air" sign
- Antenna

### Battery Installation and Replacement

The Radio DJ requires 4 x 1.5 Volt "AA" (LR6) batteries (not included).

To install the batteries:

1. With a small Phillips screwdriver, loosen screw from the battery door. **(Figure 2)**
2. Remove the battery door.
3. Discard the old batteries.
4. Insert 4 x 1.5 Volt "AA" batteries per the polarity markings into the battery compartment. **(Figure 3)**
5. Replace the battery door and tighten the screw.

### Set Up Your Radio DJ

To set up the Radio DJ:

1. Turn on power On/Off button by rotating counter-clockwise until you hear a click.
  2. Tune in radio to AM 1610.
- Note:** Radio not included. You must use your own radio to broadcast.
3. Hang the antenna wire out in the open for maximum brightness of the red LED Output Indicator and best reception on the radio. **(Figure 4)** Do not bunch-up the antenna **(Figure 5)** or lay it over metal objects. Suspending the antenna in the air with a piece of string can be helpful. If the antenna is not properly arranged, the red LED will glow dimly or may not glow at all. Move antenna around until best reception and brightness is obtained. If desired, clip the ground wire to a metal object such as a table or chair.

**(Figure 4)**

**Warning:** Never connect the antenna or ground wire to an electrical appliance or anything connected to the house wiring.

4. You are now ready to broadcast live.

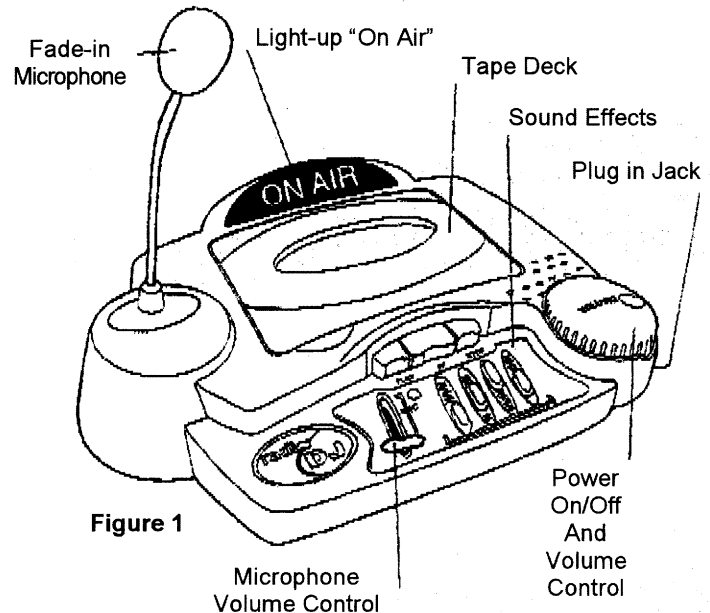 


Figure 1

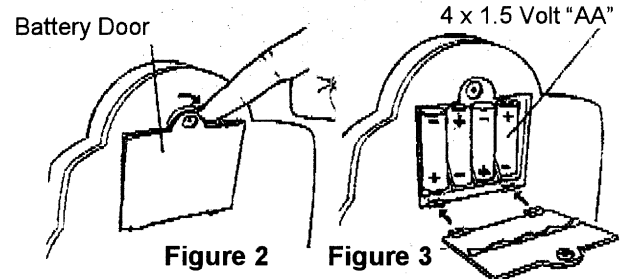 


Figure 2

Figure 3

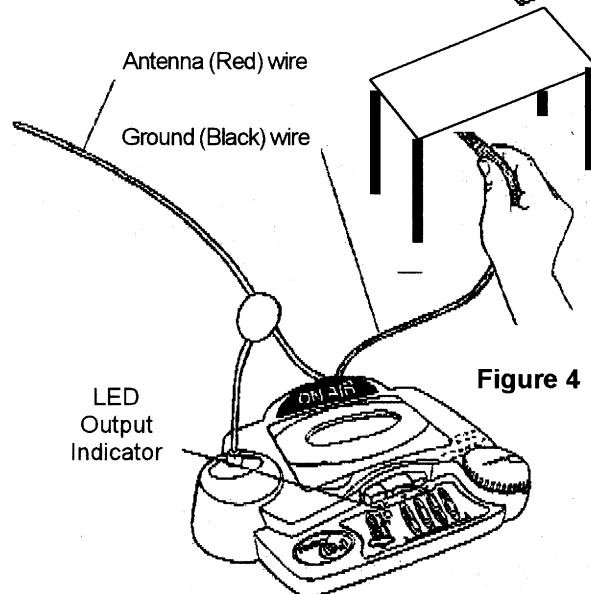 


Figure 4

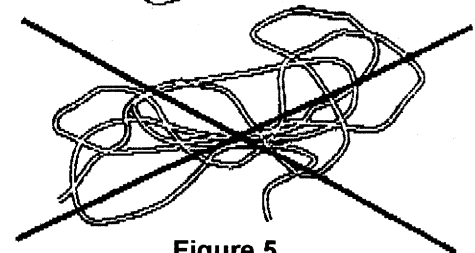 


Figure 5

### Microphone Usage

1. Make sure microphone volume is set to desired level by moving microphone volume control up or down. (Figure 6)
2. Speak into the microphone and hear your voice on the air.

### Sound Effects

There are four sound effects buttons you can use when broadcasting over the radio. To use these buttons: (Figure 7)

1. Move the microphone volume control up or down to control volume.

2. Press your desired sound effects button and release. You will hear this sound over the radio.

**Note:** If you press one of the sound effects buttons and then press another one before the first one is finished, it will cut off the first sound effect and start the new one.

### Play Music Using the Tape Deck

1. Select a tape.
2. Lift tape deck door with your fingers and insert tape as shown. (Figure 7)
3. Close tape door. (Figure 8)
4. Press "Play".
5. Turn power On/Off button clockwise or counter-clockwise to control volume.
6. To fast-forward the tape, press the "FF" button.

**Note:** There is no rewind button. If you need to rewind a tape, press eject button and remove tape. Flip tape over, reinsert and press "FF". This will rewind the tape on the opposite side. Then remove tape and flip over again and reinsert into tape deck. Press Play.

### CD Jack

There is a CD jack on the side of the Radio DJ so you can plug in your CD player and play your favorite CD's over the radio. Just plug it in and play your CD's. The volume control is the same as the tape player volume control.

### Use All Features Together to Create a Cool Show

Use your Radio DJ to create a show so incredible you won't believe your own ears! You can introduce and play your favorite tapes and CD's, report the news, or start your own talk show. The Radio DJ will send your voice and music through any radio in your room, house, or car. It can transmit up to 30 feet so your friends can listen to you on the radio in another room. You can be a real DJ!

**Warning:** Changes or modifications to this toy that are not expressly approved by Wild Planet Toys, Inc. could void the user's authority to operate the toy.

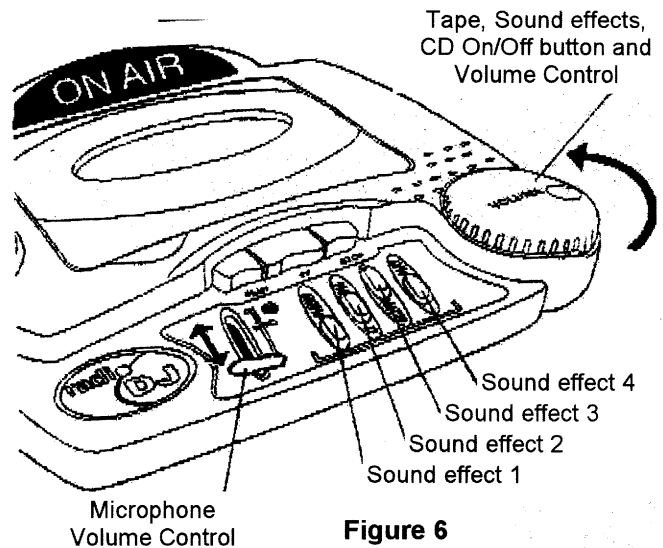 


Figure 6

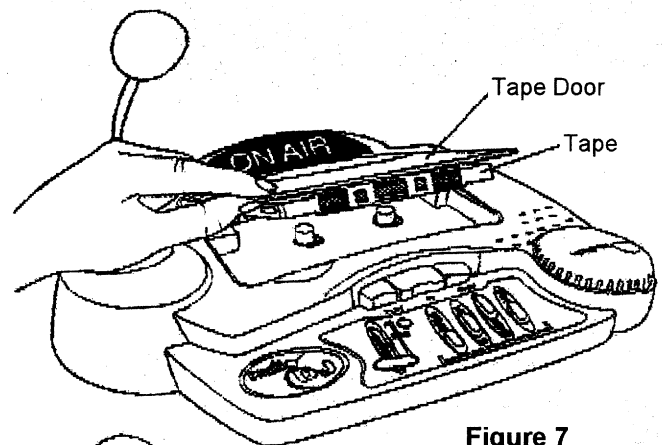 


Figure 7

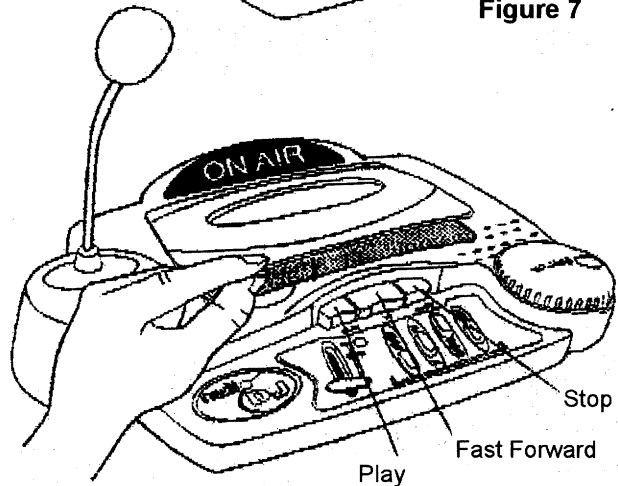 


Figure 8