



RADIO DJ

Ages 6 & up!
#92004

Real DJ Broadcast Studio

IMPORTANT: Keep these instructions. **DO NOT DISCARD.**

Use your Radio DJ to create a show so incredible you won't believe your ears! You can introduce and play your favorite tapes and CD's, report the news, or start your own talk show. The Radio DJ will send your voice and music through any radio in your room, house or car. It can transmit up to 30 feet so your friends can listen to you on the radio in another room. You can be a real DJ.

Radio DJ Features: (Figure 1)

- Separate volume controls for tape deck, and microphone / special effects
- Accessory Jack to plug in your CD player to broadcast your favorite CD's.
- Built-in tape deck to play your tapes on the air.
- Four pre-recorded sound effects (Laugh, Cheer, Drum, Buzzer)
- Fade-in microphone.
- Light-up "On Air" sign
- Built-in Antenna wire
- Ground wire
- Audio Patch Cord to connect your CD player or other accessory.

Specifications:

- Requires 4 x 1.5V "AA" (LR6) batteries (not included).
- Only adults should install and replace batteries.
- Alkaline batteries are recommended for longer life.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries should be removed from the toy.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries.
- Batteries should be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Only the batteries of the same or equivalent type as recommended are to be used.

Battery Installation and Replacement

 
 
 
 
The Radio DJ requires four 1.5 Volt "AA" (LR6) batteries (not included). To install the batteries:

1. With a small Phillips screwdriver, loosen the battery door screw located on the underside of the toy. (Figure 2)
2. Remove the battery door.
3. Discard the old batteries.
4. Insert fresh batteries into the battery compartment. Note the polarity requirements (Figure 3)
5. Replace the battery door and tighten the screw.

"On Air" Broadcast Setup

To set up the Radio DJ:

1. Turn on the Radio DJ by rotating the volume knob clockwise until you hear a click. The "On Air" sign will illuminate to indicate power on.
2. Hang the yellow antenna wire in the open (preferably elevated) (Figure 4) for best reception on your "AM" radio. Do not bunch up the antenna (Figure 5) or lay it over metal objects. Suspending the antenna in the air with a piece of string can be helpful. The red "LED" signal indicator will glow brightly if the antenna is properly arranged. A flickering or dimly lit "LED" indicates a weak signal. Rearrange the antenna until the "LED" glows brightly. (Figure 4)
3. Clip the black ground wire to a metal object such as a table or chair. Use of the ground wire will enhance broadcast clarity and distance, but is not mandatory. Using the ground wire will also help to ensure the satisfactory performance of devices connected to the accessory jack.
4. Obtain and turn on an "AM" radio. Keep it close at hand. Tune the "AM" radio station selector to 1610 kHz. Now speak into the microphone of the Radio DJ and fine tune the "AM" radio until you can hear your voice clearly. You are now ready to broadcast "live". Place your "AM" radio in a convenient location.

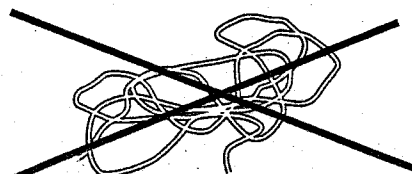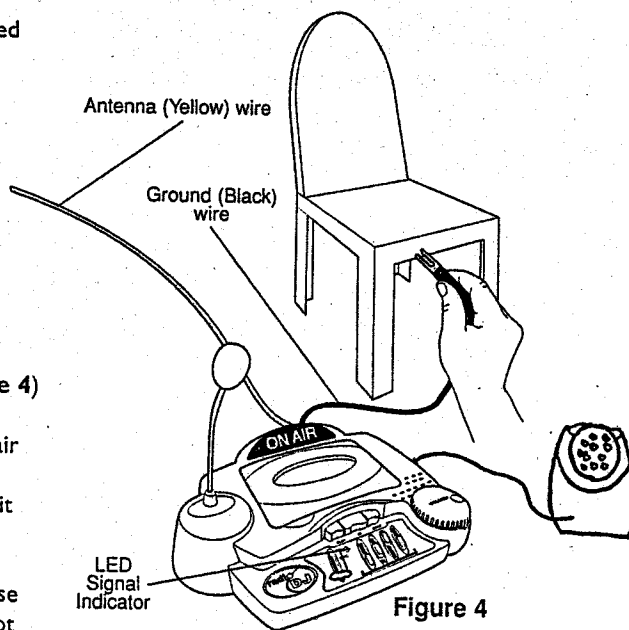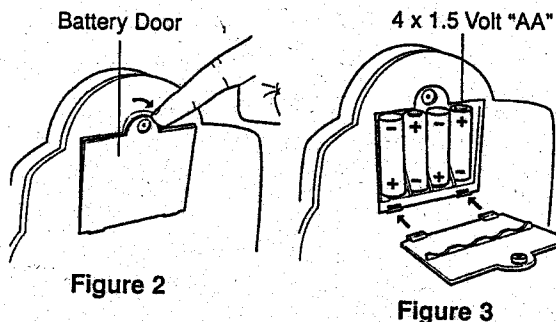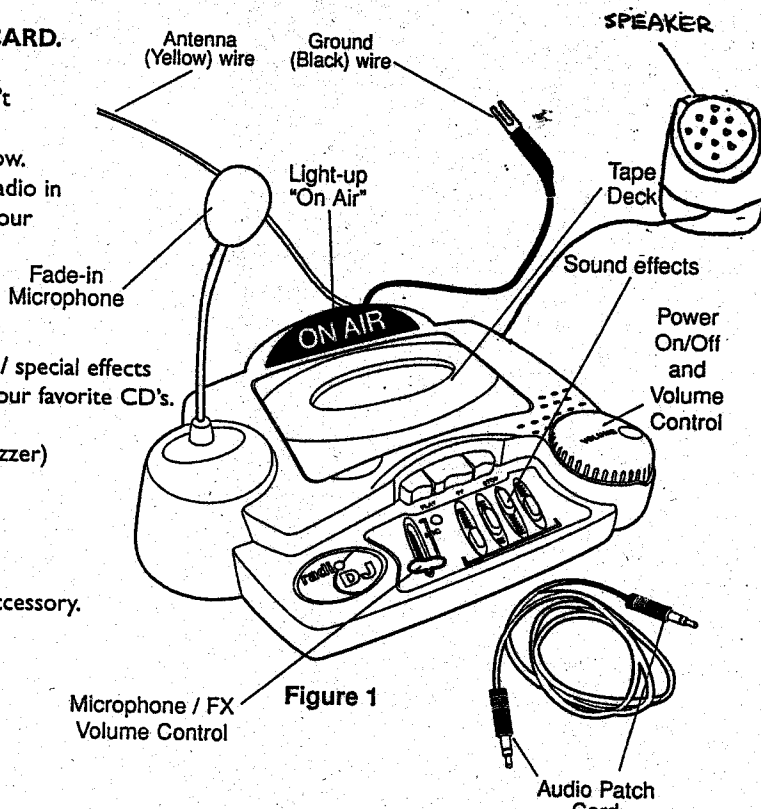

Broadcast Your Voice (Figure 6)

1. Speak into the microphone and hear your voice on the "AM" radio.
2. Set the microphone volume to the desired level by sliding the Microphone/FX button up or down, fading in or out.

Broadcast Music Using the Tape Deck (Figure 7)

The Radio DJ includes a built-in audio tape deck. To use:

1. Select a pre-recorded cassette tape. (60 minute length or shorter work best)
2. Lift the tape door with your fingers and insert tape as shown.
3. Close the tape door.
4. Press "Play". Hear the music on the "AM" radio.
5. Turn the volume control knob clockwise / counterclockwise to increase or lower the volume respectively.
6. Press the "FF" button to fast-forward the tape ahead, as desired.

Note: There is no Rewind button. To rewind a tape, press the "Stop" button and remove the tape from the deck. Flip the tape over, reinsert, and press "FF". This will rewind the tape on the opposite side. Press "Stop" when the tape reaches the end of the reel and remove the tape from the deck. Flip the tape over, reinsert, and press "Play".

Broadcast Sound Effects (Figure 8)

There are four pre-recorded sound effects built into the Radio DJ for Broadcasting to your "AM" radio. To use:

1. Press and release the desired sound button. Hear it on the "AM" radio.
2. Set the sound effects volume to the desired level by sliding the Microphone/FX button up or down.
3. If desired, press a second sound button to over-ride the first one selected. Or, press the same over and over to create a special effect.
4. Press and release a sound button while the tape deck is playing, to hear both music and sound effects at the same time.

Broadcast Music Using the Accessory Jack (Figure 9)

The Radio DJ includes an accessory jack for connecting portable devices such as your CD player, an additional tape deck or a music keyboard. To use a portable CD player:

1. Plug one end of the audio patch cord (Figure 1) into the accessory jack of the Radio DJ.
2. Plug the other end into the headphone or output jack of your CD player.
3. Press the play button on the CD player.
4. Turn the Radio DJ volume knob clockwise / counterclockwise to increase or lower the volume respectively. The volume can be also controlled using the volume control on the CD player.
5. It is not recommended to play the CD player and the Radio DJ cassette deck at the same volume (at the same time). It will be hard to hear individual sounds. Fading in and out works best.

Warning: Changes or modifications to this toy that are not expressly approved by Wild Planet Toys, Inc. could void the user's authority to operate the toy.

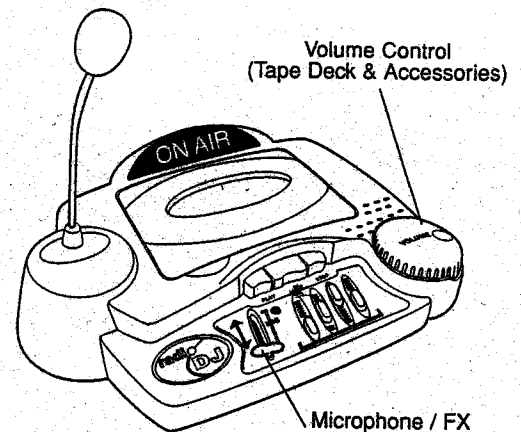 


Figure 6

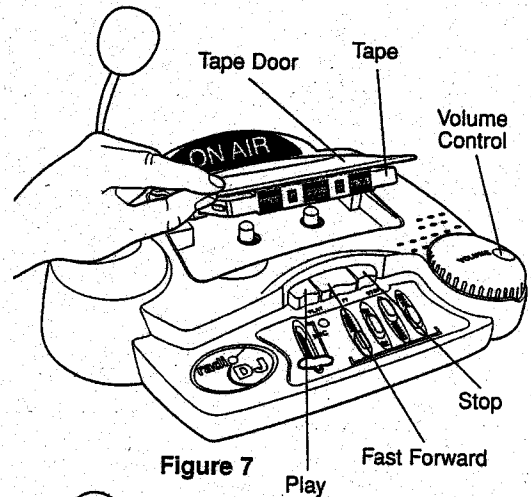 


Figure 7

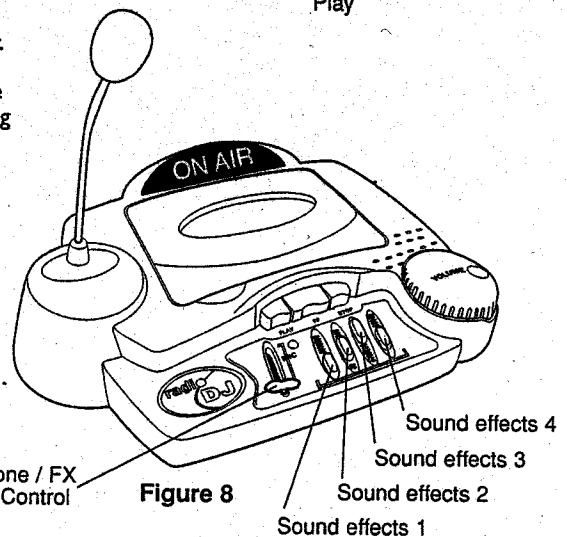 


Figure 8

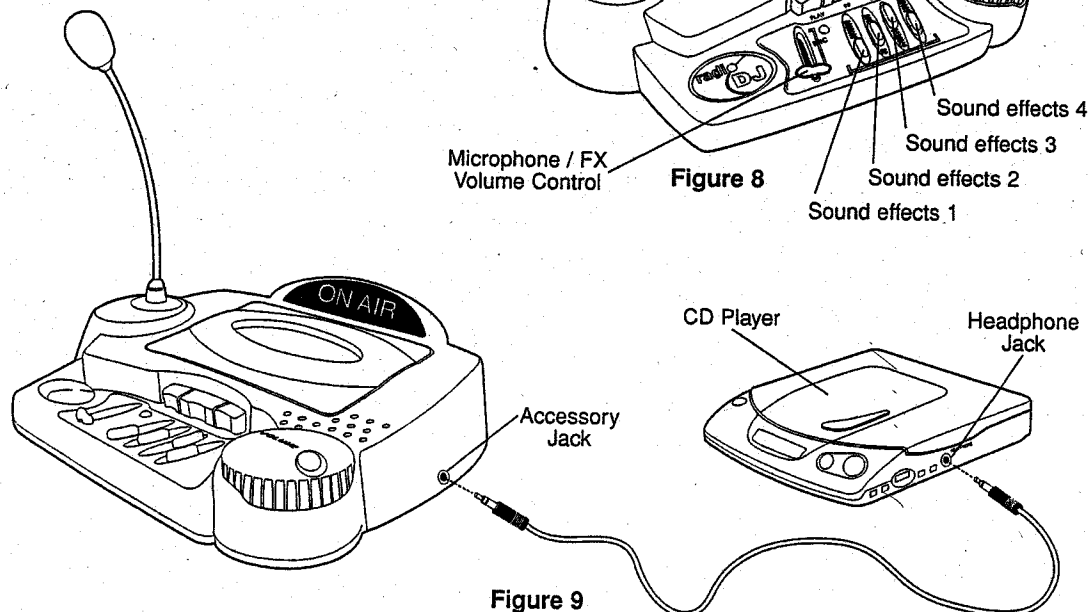 


Figure 9



WARNING :

**CHOKING HAZARD: Small Parts
Not for Children Under 3 Yrs.**