



Spy Bug™

Listen from another room!

Ages 6 and up
70068

Important: Please save this instruction sheet. It contains valuable product information.

Battery Safety Information

- Requires two (2) 9-Volt (6LR61) batteries (not included).
- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Do not use rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely

Attention Adults – To Replace Batteries

1. Spy Bug requires two (2) 9-Volt (6LR61) batteries (not included). One battery is for the **Bug Unit** and one battery is for the **Receiver Unit**.
2. Locate the battery compartment on the base of each unit. Use a small Phillips head screwdriver to loosen the screw, and remove the battery cover.
3. Remove exhausted batteries.
4. Place new batteries in the compartments as shown (figs. 1 & 2).
5. Replace the battery covers and tighten the screws.

Attention Adults – To Assemble the Spy Bug for First Time Use.

 
 
 
 
 
1. Insert the **Hinge** on the bottom of the **Sonic Dish** into the hole at the rear of the **Bug Unit Base** (fig. 3).
2. Make sure that the **Two Wires** are inserted fully into the hole.
3. Push down on the Sonic Dish until the hinge clicks into place.

To Set the Spy Bug

1. Place the **Bug Unit** in the room where you would like to listen.
2. Press the **Activation Button**. The **Sonic Dish** will open (fig. 4).
3. Extend the **Antenna** until it holds in place.
4. Move up to 75ft away from the Spy Bug.
5. Turn the **Receiver Unit** to ON and set the volume to a low level.
6. Place the **Ear Bud** in your ear.
7. Increase the volume until you can hear clearly.

To Retrieve the Spy Bug

1. Push the **Antenna** down until it clicks into place.
2. Close the **Sonic Dish** to stop transmitting.

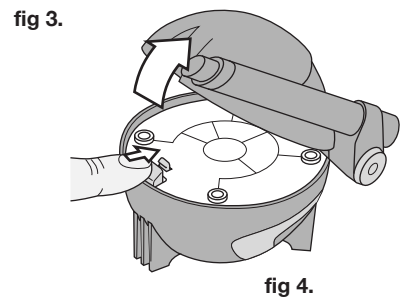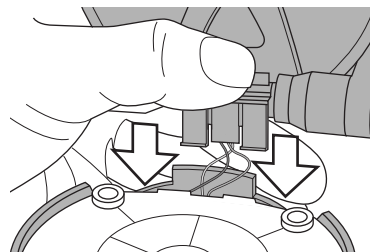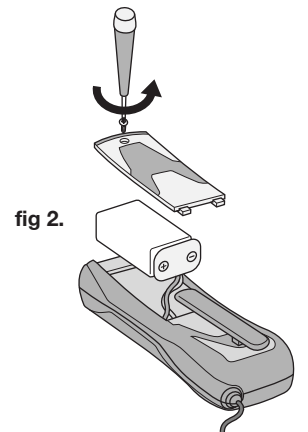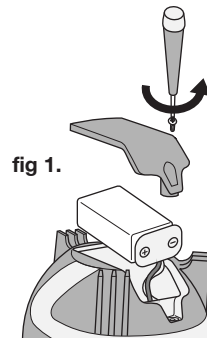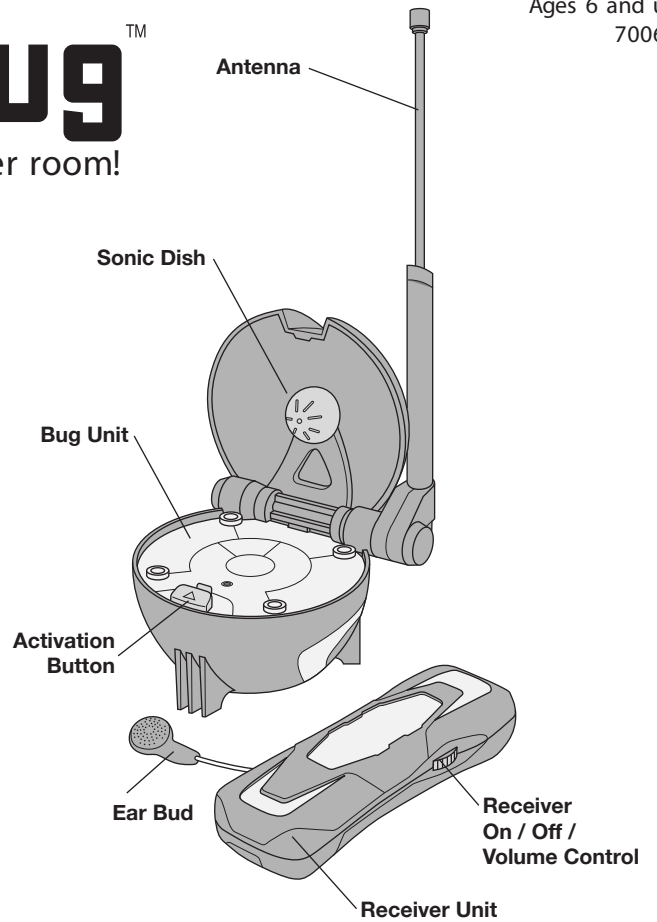

FCC ID: N3ESPYBUG70068
 This device complies with Part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) this device must accept any interference received,
 including interference that may cause undesired operation



SPY BUG™ 70068-4000 09/02/03

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
 1-800-247-6570
 WWW.WILDPLANET.COM
 ©2003 Wild Planet Toys, Inc.

WARNING: Changes or modifications to this toy that are not expressly approved by Wild Planet Toys, Inc. could void the user's authority to operate the toy.