



# Walkie Talkies

2 WALKIES TALKIES WITH SPY CODE

Ages 5 and Up  
70129

Requires 2 9V (6LR61)  
batteries, not included.

**Important: Please save this instruction sheet. It contains valuable product information.**

### HOW TO USE YOUR WALKIE TALKIES

**Note:** Both Walkie Talkies must be switched on in order to communicate.

1. Turn the **POWER SWITCH** on each unit to **ON**.
2. To transmit, press and hold the **PTT** button and speak. Release the button when you have finished speaking.
3. To send a coded message, press the **CODE KEY** while holding down the PTT button.
4. **IMPORTANT:** Only one Walkie Talkie can transmit at a time.
5. Turn the power switch on each unit **OFF** after use.
6. When performance fades it is time to change the batteries.

### TALKIE TIPS

- When you are finished speaking, say "OVER" so the other spy knows it is his turn to talk.
- When the conversation is complete, say "OVER AND OUT."
- To send top secret messages, follow the secret spy code provided—or invent your own!

### SECRET SPY CODE

● = short beep    — = long beep

4 beeps

- ● ● ● ABORT MISSION
- ● — — LOOK OUT
- — ● ● COME HERE
- — — — ALL CLEAR
- ● ● — STAY UNDERCOVER
- — — ● TOP SECRET

5 beeps

- ● ● ● — RED ALERT
- — — — ● GO FOR IT
- ● — ● ● AWAIT INSTRUCTIONS
- — ● — ● MISSION SUCCESSFUL

### BATTERY SAFETY INFORMATION

- Requires two 9V (6LR61) batteries.
- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

### ATTENTION ADULTS— TO REPLACE BATTERIES

The Walkie Talkies require two 9V (6LR61) batteries.

1. Use a small Phillips head screwdriver to loosen the screw on the battery compartment. The screw will not fall out.
2. Open battery cover. Remove exhausted batteries.
3. Place new batteries in compartment as shown (Fig. 2).
4. Replace the battery cover and tighten screw.

**FCC ID: N3ESPYGEARWT70129 Made in China**  
**This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. this device may not cause harmful interference, and 2. this device must accept any interference received, including interference that may cause undesired operation.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

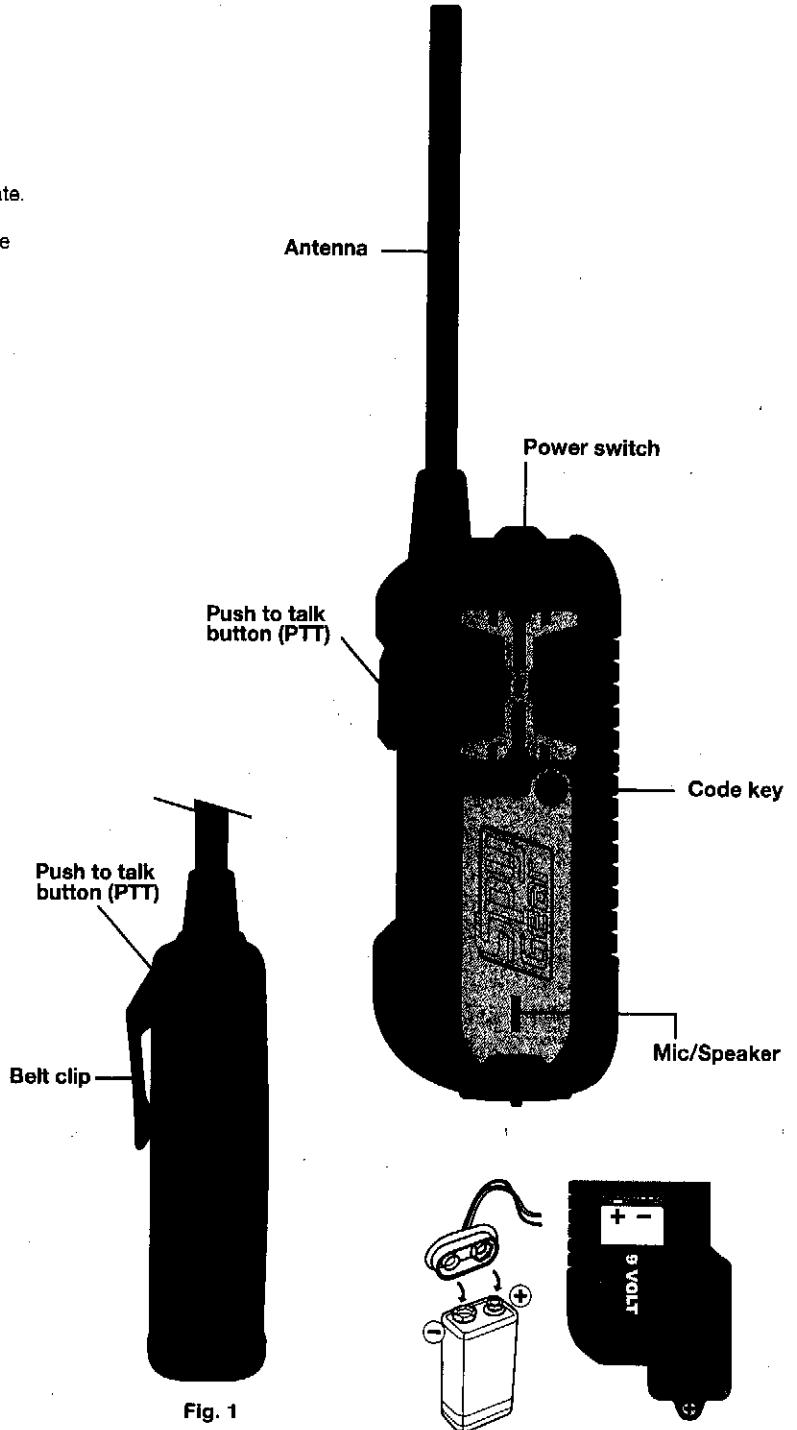


Fig. 1

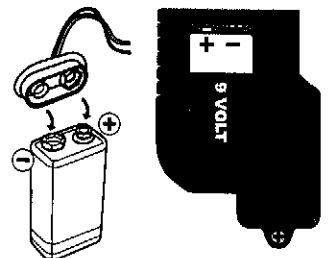


Fig. 2

WALKIE TALKIES 70129-4000-G5 10/09

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT  
1-800-247-8570  
WWW.WILDPLANET.COM/HELP  
Wild Planet Entertainment, Inc., P.O. Box 194087  
San Francisco, CA 94119-4087



© 2009 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved.  
PRINTED IN CHINA. Product specifications subject to change.

**Warning: Changes or modifications to this toy that are not expressly approved by Wild Planet Entertainment, Inc. could void the user's authority to operate the toy.**

**Warning: Do not hold close to the ear. Misuse may damage hearing.**