



Spy Link

Age 6 and up
706-43

Important: keep these instructions. Do not discard.

1. Use 2 9-volt battery required per Spy Link. Batteries not included.
 Only adults should install and replace batteries.
 A Kellco battery is recommended for longer life.
 Do not use rechargeable batteries.
 Do not recharge non-rechargeable batteries.
 Remove exhausted batteries from the toy.
 Insert batteries with the correct polarity (as shown in Figure 2).
 Do not short-circuit the battery supply terminals.

Spy Link features

1. Earset with microphone
2. Belt clip (for boys)
3. Handfree walkie-talkie
4. Hi / Lo / Off switch



Earset with microphone wear on left ear only, as shown.

Earset with microphone

Hi / Lo / Off switch



Belt clip

Parents: to install batteries

- Spy Link requires two 9-volt alkaline batteries, one battery for each unit (left and right).
1. With a small Phillips screwdriver, remove the screw and battery door on the back of Spy Link (Figure 1).
 2. Snap battery clip on battery as shown (Figure 2).
 3. Place battery into battery compartment.
 4. Replace the battery door and tighten the screw.



Fig. 1



Fig. 2

To use the walkie-talkie

1. Push the red switch on Low (L) or High (H) location. You will hear a click. This means that it is on.
2. You can talk with your friend through the microphone.
3. To turn off your Spy Link push the red switch to Off position.

Warning - Changes or modifications to this toy that are not expressly approved by J&J Toys, Inc., could void the user's authority to operate the toy.



WARNING:

**CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.**

Spy Link 706-43-0000 12/00/03

If you have any questions, please contact us at:
1-800-345-2000
www.jandjtoys.com
©2003 J&J Toys, Inc.
6000 Hill House Lane, Inc.