

3/4

SPY GEAR™

Spy Tracker SYSTEM™

Mobile Early Warning System

Ages 6 and up
7004

Make sure you're never caught!

Important: Please save this instruction sheet. It contains valuable product information.

Battery Safety Information:

- Only adults should install and replace batteries.
- We recommend you use alkaline batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match "+" and "-" signs.
- Only use the batteries specified.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.
- Do not use rechargeable batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- The supply terminals are not to be short circuited.

Attention Adults—To Install Batteries

Requires two (2 X 1.5V) "AAA" (LR3) batteries for each sensor and two (2 X 1.5V) "AAA" (LR3) batteries for the base station; total eight (8) batteries (batteries not included).

To Install Batteries In The Base Station

1. Locate the battery compartment on the bottom of the base station. Use a small Phillips head screwdriver to loosen the screw, and unclip the battery cover.
2. Place batteries in compartment as shown Fig A.
3. Replace battery cover and tighten screw.

To Install Batteries In Each Sensor

1. Remove the sensors from the base station (see below).
2. Locate the battery compartment on the bottom of the sensor. Use a small Phillips head screwdriver to loosen the screw, then remove battery cover.
3. Place batteries in compartment as shown Fig B.
4. Replace battery cover and tighten screw.
5. Repeat for each sensor.

FCC ID: N3ESPYTRACKR70044

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this toy that are not expressly approved by Wild Planet Toys, Inc. could void the user's authority to operate the toy.

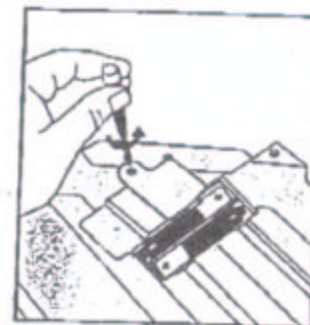
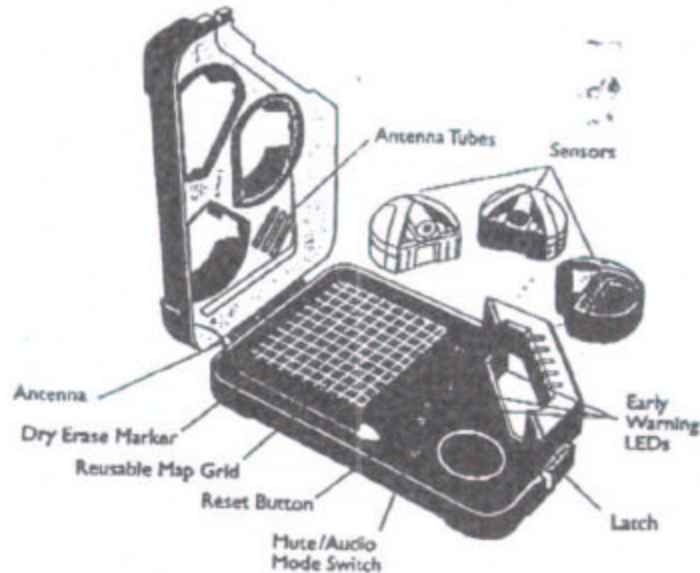


Fig A



Fig B

4/4

SPY GEAR™

Spy Tracker SYSTEM™

Mobile Early Warning System

Ages 6 and up
70044**To Set Sensors**

1. Push back the red latch on the base station and open the lid (Fig 1).
2. Pop out each sensor by pushing down from above (Fig 2).
3. Unwind the antenna from around each sensor and straighten.
4. Remove a tube from inside the base station cover and slide it over the antenna until it snaps onto the sensor (Fig 3).
5. Slide each sensor's switch to the "ON" position (Fig 4).
6. Place each of the sensors in a hiding place anywhere up to 75 feet from the main unit.

NOTE: Be sure to set the sensor lens facing away from any obstructions (walls, books etc).



Fig 1



Fig 2

Surveillance

- Open the base station.
- Slide the on/off switch to mute or audio position (Fig 5). The map grid will illuminate.
- Use the dry-erase marker to draw a plan on the map grid showing where the sensors are set (Fig 6).

Surveillance Tip: Draw a line from each sensor's LED to its position on the plan.

Wait for someone to trip a sensor!

With the on/off switch in audio position, when someone moves in front of a sensor the base station will announce which sensor has been tripped and the sensor's LED will flash.

With the on/off switch in mute position, when someone moves in front of a sensor there will be no audio warning but the sensor's LED will flash.

To stop the LEDs flashing, press the reset button (Fig 7).

Tip: Use the Spy Tracker to protect your gear, or play hide & seek and never get caught.



Fig 3



Fig 4



Fig 5

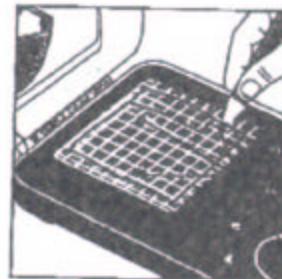


Fig 6

Save No Traces

Collect each sensor and wrap its antenna around the sensor body. Snap the antenna tip onto the clip.

Press each sensor back into place on the base station cover.

Wipe off the map grid with a clean dry paper towel.

Slide the on/off switch to the off position.

Troubleshooting

Before setting the sensors, move your hand in front of the lens. If the LED on the base station does not flash, check the antenna and/or batteries.

Check that nothing is blocking the sensor lens. The sensors will only detect movement five feet directly in front of the lens.

Ensure that the sensor antenna is set as straight as possible.

Sensor works best in well lighted areas. Performance will be lower in dimly lighted areas.

Do not aim sensor directly at a light source.



Fig 7



SPY TRACKER SYSTEM PH70044-1000PA 01/07/02

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6178
WWW.WILDPLANET.COM
©2002 Wild Planet Toys, Inc.

**WARNING:**

**CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.**