



SPY VIDEO CAR VX6™

Ages 8 and up
70436

Requires 10 AA batteries
(6 for the car and 4 for the remote),
not included.

**Important: Please save this instruction sheet.
It contains valuable product information.**

Spy Gear Consumer Service is ready to assist you!
DO NOT RETURN THE PRODUCT TO THE STORE!
USE OUR TOLL-FREE CONSUMER HELPLINE
1-800-247-6570
WWW.WILDPLANET.COM/HELP

PREPARING TO DRIVE THE SPY VIDEO CAR VX6

1. ADULTS: Install the batteries in the **SPY VIDEO CAR VX6** and **REMOTE CONTROL** (see below for directions).
2. Turn on the Spy Video Car VX6 using the **ON/OFF SWITCH** located on the bottom of the car between the rear wheels. (Fig. 1)
3. Use the **ON/OFF SWITCH** to turn on the remote control.

DRIVING WITH THE REMOTE CONTROL

1. Use the **FORWARD/REVERSE CONTROL** to drive the car forward and reverse.
2. Use the **LEFT/RIGHT CONTROL** to turn the car left and right.

LEGEND

Battery level

Signal strength

NIGHT VISION

 
Lets you see in the dark without being seen.

- **Press Button A** to toggle the IR LED light on or off. Using the IR LED works great in dark rooms.

SAFETY

- Don't drive the Spy Video Car VX6 in sand or through water (even small puddles) or snow. (Fig. 2)
- Never drive the Spy Video Car VX6 on real streets.
- To avoid damage to the video camera or internal electronics, do not drive the Spy Video Car VX6 off curbs or down stairs. (Fig. 3)
- Don't store the Spy Video Car VX6 near heat or in direct sunlight.
- Always turn switches OFF and remove all batteries for storage.
- Warning! Use under the direct supervision of an adult.
- Keep fingers, hair, and loose clothing away from the tires while the vehicle is switched on.

SPY VIDEO CAR VX6

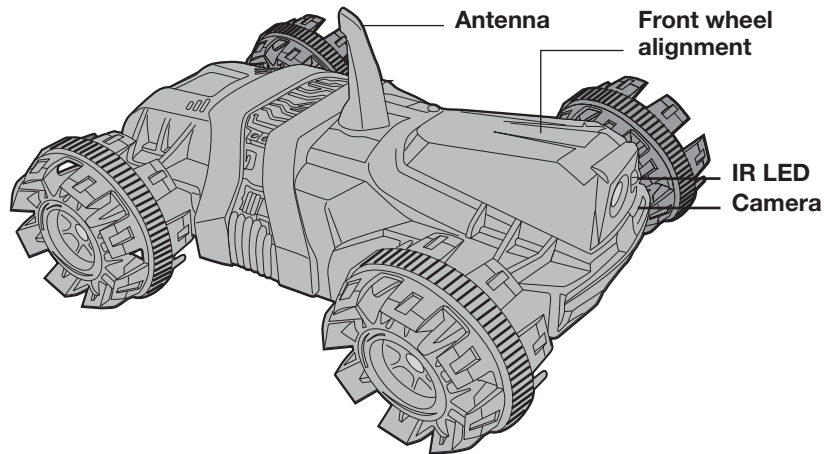

REMOTE

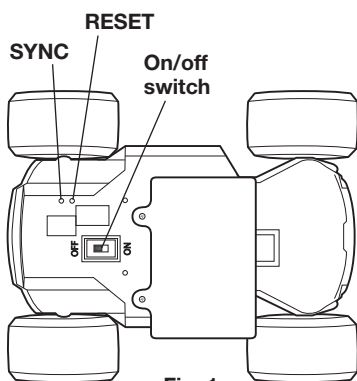 
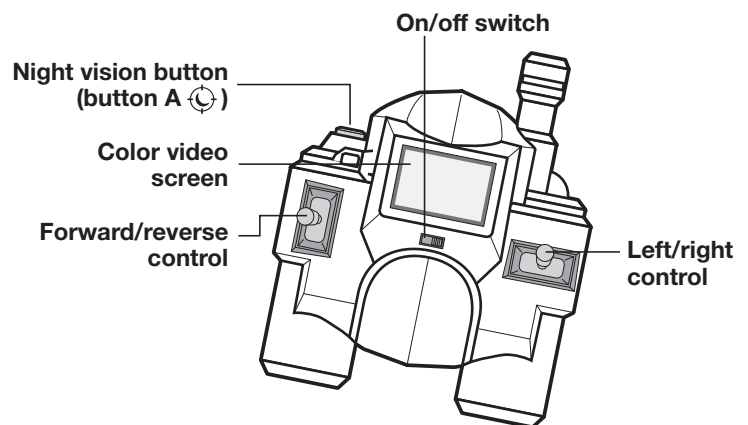 


Fig. 1

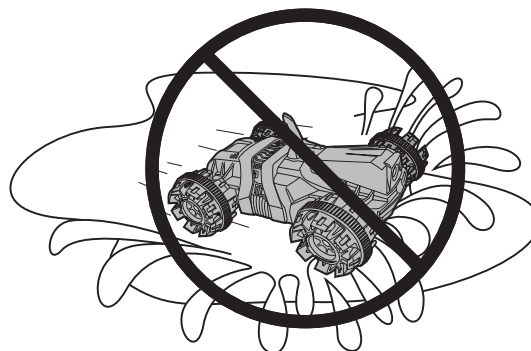 


Fig. 2

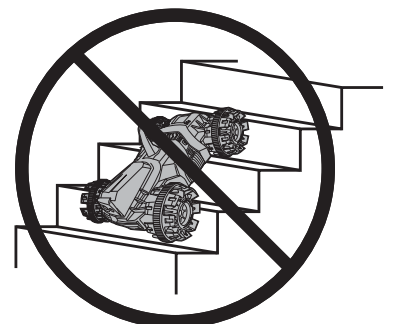 


Fig. 3

ATTENTION ADULTS: TO REPLACE BATTERIES

The Spy Video Car VX6 requires 10 AA (LR06) batteries (6 for the car and 4 for the remote control), not included. (Fig. 4 & 5)

1. Use a small Phillips head screwdriver to loosen the screws on the battery compartment of both the vehicle and the remote. The screws are attached to the covers.
2. Open battery cover. Remove exhausted batteries.
3. Place new batteries in compartment as shown in the image.
4. Replace the battery cover and tighten screws.

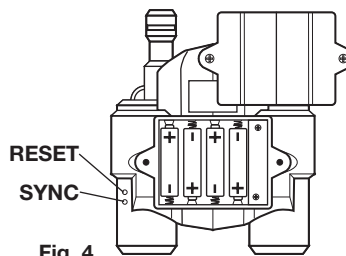 


Fig. 4

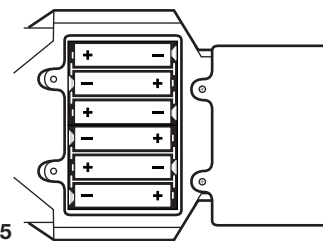 


Fig. 5

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

Warning! Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

REMOTE ID: N3ESVC70436RX
CAR ID: N3ESVC70436TX

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Operating frequency: 2.4 GHz

TROUBLESHOOTING GUIDE

SYMPTOM	PROBABLE CAUSE	SOLUTION
The Spy Video Car VX6 will not operate.	The batteries are dead or have a low charge.	Replace the batteries and always remember to turn off the power switches on the car and remote control to save battery life when not in use.
	The batteries may not be installed correctly.	Make sure the battery direction (polarity, +/-) is correct.
	Power switches are OFF.	Make sure the power on the remote control and the car is ON.
The Spy Video Car VX6 slows down or the video screen starts to fade.	The batteries are dead or have a low charge.	Replace the batteries and always remember to turn off the power switches on the car and remote control to save battery life when not in use.
	The Spy Video Car VX6 signal strength is low.	Try holding the remote control higher above the ground. If that does not work, move closer to the car.
There is no image on the video screen.	Power switches are OFF.	Make sure the power on the remote control and the car is ON.
The Spy Video Car VX6 is not traveling in a straight line.	The front wheel alignment may not be set correctly.	Adjust the front wheel alignment screw located on the car behind the video camera. If the car turns to the right, turn the screw to the left and vice versa.
The Spy Video Car VX6 is moving about erratically, not under the control of the remote.	You are playing near areas with radio interference, other RC vehicles, high-tension wires, large buildings, CB radios.	Move to a new location.
	The Spy Video Car VX6 is out of range.	Try holding the remote control higher above the ground. If that does not work, move closer to the car.
	The batteries have a low charge.	Replace the batteries and always remember to turn off the power switches on the car and remote control to save battery life when not in use.
	The remote control antenna is not sending clear signals.	Point the remote control antenna up in the air, not at the car. Do not touch the antenna.
When I look at the video screen, everything looks white.	The Spy Video Car VX6 may be located in direct sunlight.	Move inside or to a shadier area outside.
The video screen is flickering a lot.	You are playing near an area with radio interference or a cordless phone.	Move to a new location.



SPY VIDEO CAR VX6 70436-4000 PS 6/11
IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 420
San Francisco, CA 94104-0420

© 2011 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA.
All rights reserved. **PRINTED IN CHINA.** Foreign patents pending.
Product colors and specifications subject to change.