





SPY LISTENER

Ages 6 and up
70468

Requires 2 9V (6LR61) batteries, not included.

Important: Please save this instruction sheet. It contains valuable product information.

USING THE SPY LISTENER

1. Power on the TRANSMITTER (Fig. 1) by flipping  to "on".
2. Place the TRANSMITTER in a secret location. Adjust the ANTENNA so it's sticking up and point the LISTENING DISH in the direction of the sound you want to hear.
3. Unwrap the EAR BUD (Fig. 2) from the EARBUD REST and place it in your ear. Attach the RECEIVER onto your belt or clothing with the BELT CLIP.
4. Find a secret stakeout location up to 75 feet from the TRANSMITTER.
5. Power on the RECEIVER (Fig. 2) by turning the ON/OFF VOLUME CONTROL WHEEL. Adjust the volume by continuing to turn the dial.
6. Power off the TRANSMITTER by flipping  to "off". Power off the RECEIVER by turning the ON/OFF VOLUME CONTROL WHEEL.

SPY TIP

For improved audio clarity, place the transmitter closer to the desired target.

BATTERY SAFETY

- Requires 2 9V (6LR61) batteries (1 for transmitter and 1 for receiver), not included.
- Only adults should install and replace batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS: TO REPLACE BATTERIES

Use a small Phillips head screwdriver to loosen the screw on the battery cover of the TRANSMITTER (Fig. 3) and the RECEIVER (Fig. 4).

1. Open battery covers. Remove exhausted batteries.
2. Place one new battery in the compartment of each unit as shown in the images.
3. Replace the battery covers and tighten screws.

Warning! Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: N3EUCLSR70468

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

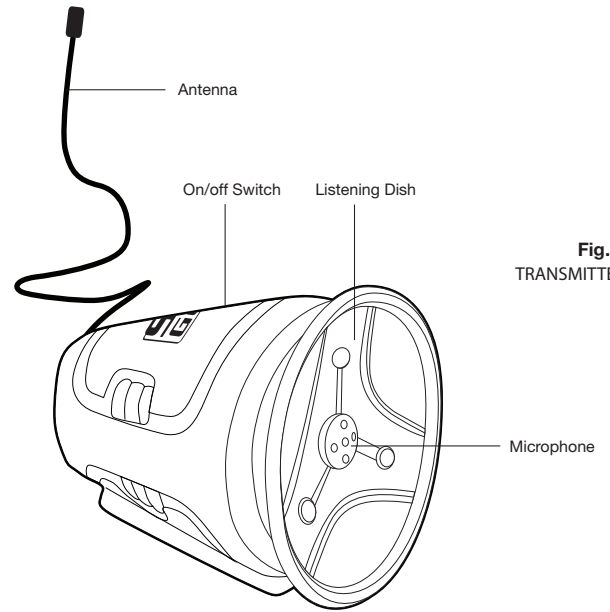 


Fig. 1
TRANSMITTER

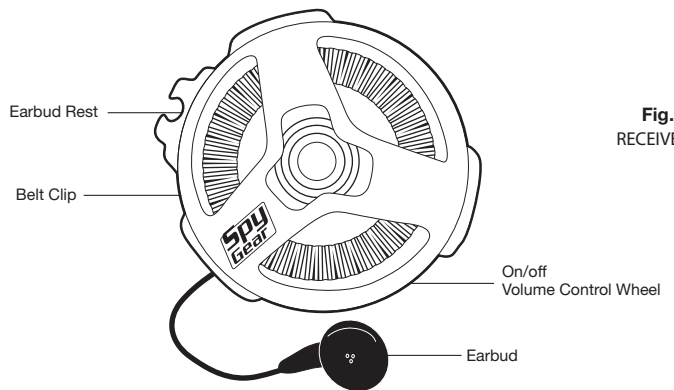 


Fig. 2
RECEIVER

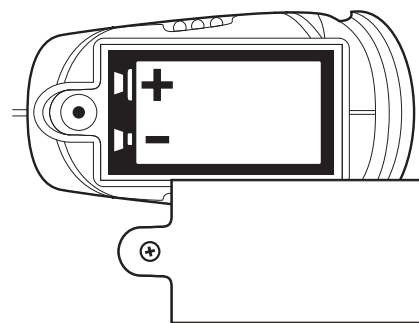 


Fig. 3

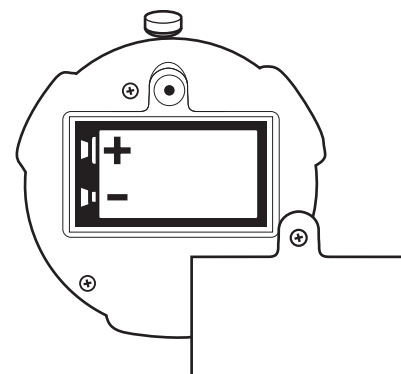 


Fig. 4



Electrical product waste should not be discarded with household waste. Please actively support us in conserving resources and protecting the environment by returning the non-working electrical products and batteries to an appropriate disposable / recycling center. (if available)



SPY LISTENER 70468-4000 PS 3/12

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 420
San Francisco, CA 94104-0420

© 2012 Wild Planet Entertainment, Inc.,
San Francisco, CA 94104, USA. All rights reserved.
PRINTED IN CHINA. Foreign patents pending.
Product colors and specifications subject to change.
Printed on recycled paper. Keep information for future reference.