

Motion Alarm Early Warning System

Requires 9 AAA
(LR03) batteries,
not included.

Important: Please save this instruction sheet. It contains valuable product information.

SETTING UP SENSORS

1. Unwind the antenna on each **MOTION SENSOR** and straighten it. Antennas should point straight up for best results.
2. Slide each sensor's switch to the "ON" position (Fig. 1).
3. Place the sensors (numbered 1, 2 and 3) in hiding places anywhere up to 75 feet (23m) from the main unit.
- Be sure to set the motion sensor's **LENS** facing toward the area you want to track and away from any obstructions (walls, books etc.).

TRACKING THE ACTION

1. Flip open the **LID**.
2. Slide base station **OFF/MUTE/AUDIO SWITCH** to **MUTE** (no sound) or **AUDIO** position (Fig. 2). **SCREEN** will light up.
3. Unwind **ANTENNA** on **BASE STATION**, straighten and point straight up for best results.
4. Use **MARKER** to write locations of sensors on screen next to their LED's (- equals 1, = equals 2, ≡ equals 3).
5. In **AUDIO** mode, when someone trips a sensor the base station will say the name of the sensor and that sensor's LED will flash.
6. In Mute mode, only the sensor's LED will flash.
7. To stop the LED's from flashing, press **RESET BUTTON**.

AFTER EACH MISSION . . .

1. Slide all switches to the off position.
2. Collect each sensor and wrap antenna around body.
3. Wrap antenna around base station as shown. Press ball of antenna into **HOLE** to secure.
4. Slide marker into base station.
5. Wipe off screen with a clean, dry paper towel.
6. Place each sensor into **HOLDER** and turn to lock in place. (Fig. 3)
7. Clip holder and base station to belt or backpack using **CLIPS**.

TROUBLESHOOTING

 
 
 
 
 
- Before setting a motion sensor, move your hand in front of the lens. If the LED on the base station does not flash, check the antenna and/or batteries.
- Check that nothing is blocking the sensor lens. The sensor will only detect movement five feet directly in front of the lens. Bright light may set the sensor off.
- Make sure antennas are fully extended and pointing straight up.

ADULTS: INSTALLING BATTERIES

1. Locate **BATTERY DOOR** on bottom of base station and each sensor. Use a small Phillips head screwdriver to loosen screw. Remove battery door.
2. Place batteries in compartment as shown (Figs. 4 and 5). **Important:** Observe battery polarity (+ and -)
3. Replace battery door and tighten screw.

BATTERY SAFETY

1. Only adults should install and replace batteries.
2. Do not recharge non-rechargeable batteries.
3. Remove dead or exhausted batteries.
4. Insert batteries correctly. Match positive and negative signs.
5. The supply terminals are not to be short circuited. Do not use rechargeable batteries.
6. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Do not mix old and new batteries.
8. Only the batteries of the same or equivalent type recommended to be used.
9. Do not dispose of batteries in a fire; they may explode.
10. Do not dispose of batteries in a fire; they may explode.
11. Dispose of batteries safely.

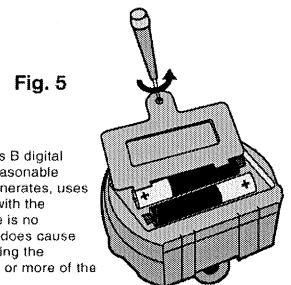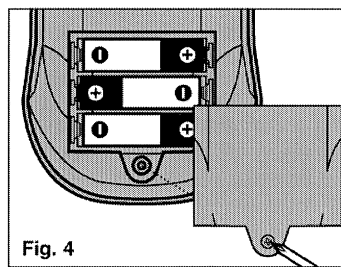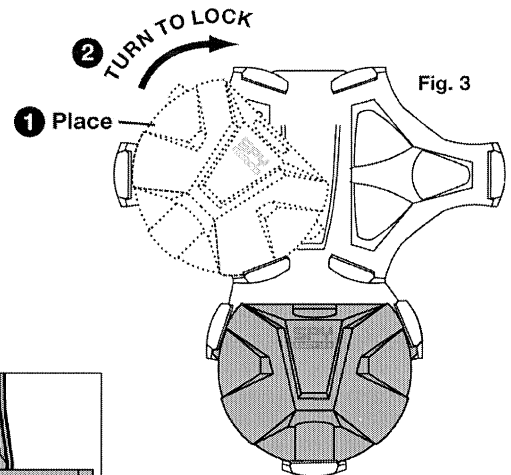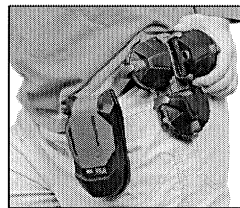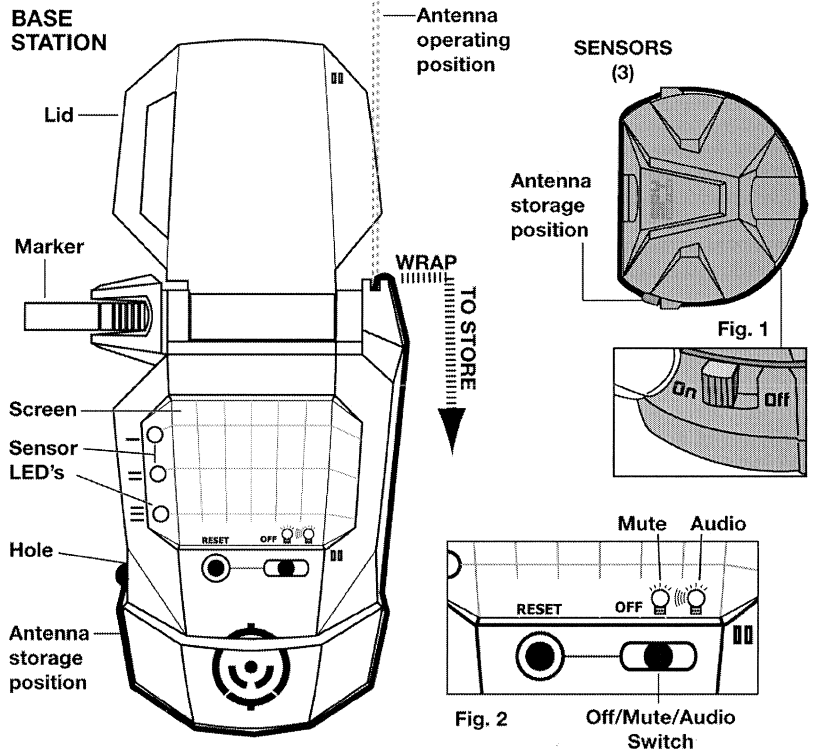

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: N3EWTSYS70196

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.



WIRELESS TRACKING SYSTEM 70196-4000 PR 3/07

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
1-800-247-6570
WWW.WILDPLANET.COM/HELP
Wild Planet Entertainment, Inc., P.O. Box 194087
San Francisco, CA 94119-4087

© 2006 Wild Planet Entertainment, Inc., San Francisco, CA 94104, USA. All rights reserved. **PRINTED IN CHINA.**
Product specifications subject to change.